



# Gas Detection For Life

## FAQ

January 3, 2018

## *How do you read the date codes on sensors?*

Each RKI sensor is labeled with a serial number (S/N) in which the first two numerals specify the manufactured date.

Example: Serial Number (S/N): **792D01278AT**



- Date code is **79 (Manufactured Date)**
- First numeral is the year (2017)
- Second numeral is the month (September)
- Months are coded **1=Jan** to **9=Sept.**, **Oct.=X**, **Nov.=Y** and **Dec.=Z**
- *Note:* Warranty for this sensor starts on December 2017 based upon Date Code (D/C) sticker **7Z**
- *-The date code may be a small adhesive label on the sensor or may be read from the serial number on the sensor*



# Gas Detection For Life

# FAQ

More samples:

