
What is the data-logging capacity of the Eagle 2?

The Eagle 2 data-logging capacity is dependent on the interval trend setting, number of sensors installed, and number of alarms or other events.

The following chart of the Eagle 2 data-logging capacity is for an Eagle 2 standard four gas unit with no alarms or events. Additional sensors, alarms or events will reduce the listed data-logging capacity.

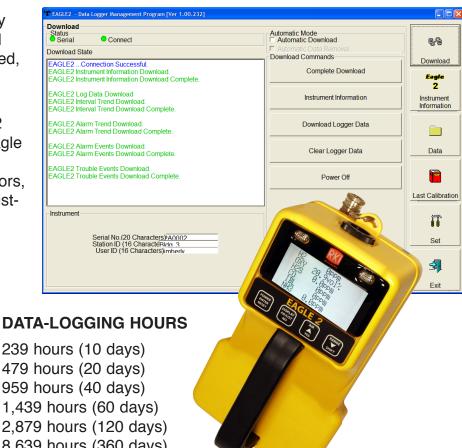

INTERVAL TREND TIME

600 seconds (10 minutes)

5 seconds 10 seconds 20 seconds 30 seconds 60 seconds 180 seconds (3 minutes) 300 seconds (5 minutes)

479 hours (20 days) 959 hours (40 days) 1,439 hours (60 days) 2,879 hours (120 days) 8,639 hours (360 days) 14,399 hours (600 days) 28,798 hours (2,000 days)

The Eagle 2 can store the following files in addition to standard interval trend data:

- 1. Save up to 100 calibration records.
- 2. Save up to 8 alarm trend data files.
- 3. Save up to 100 alarm events.
- 4. Save up to 100 trouble events.