

GasWatch 3 for Carbon Monoxide (Hydrogen-Compensated) Operator's Manual

Part Number: 71-0509

Revision: B Released: 6/8/23

RKI Instruments, Inc. www.rkiinstruments.com

WARNING

Read and understand this instruction manual before operating instrument. Improper use of the gas monitor could result in bodily harm or death.

Maintenance of the gas monitor is essential for proper operation and correct readings.

Bump test the instrument before each day's use with a known concentration of the target gas. A bump test can be done in User Mode's BUMP item or by applying gas in Measuring Mode. The instrument does not need to be calibrated unless it does not pass the User Mode bump test or does not respond appropriately, as defined by the user, in Measuring Mode. For more information about bump test and calibration requirements, see IEC 60079-29-2.

Table of Contents

Chapter 1: Introduction	. 7
Overview	7
About the GasWatch 3	
Specifications	
About this Manual	
Chapter 2: Description	10
Overview	10
Instrument Description	
Case	
LCD	
Control Buttons	11
Alarm LEDs	11
Buzzer	11
Vibrator	
Sensor	12
Filters	12
Infrared Communications Port	12
Battery	12
Standard Accessories	13
Alligator Clip	13
Optional Accessories	14
Watch Band	14
Calibration Cup	14
IrDA/USB Cable	14
Chapter 3: Measuring Mode	15
Overview	15
Start Up	
Turning On the GasWatch 3	
Performing a Demand Zero	
Turning Off the GasWatch 3	
Measuring Mode Operation	
Monitoring an Area	21
Alarms	
Alarm Indications	
Responding to Alarms	24
Data Logging	28

Chapter 4: Display Mode	.29
Tips for Using Display Mode	. 30
Peak Screen (PEAK)	. 30
STEL Screen (STEL)	. 31
TWA Screen (TWA)	. 31
User ID Screen (USER ID)	. 31
Station ID Screen (STN ID)	. 32
Last Successful Calibration Date (CAL.DATA)	. 33
Last Successful Bump Test Screen (BP.DATA)	. 34
Date/Time Screen (DATE)	. 35
Temperature Screen (TEMP)	
Alarm Points Screen (ALARMP)	
Adjusting the Buzzer Volume (BUZZ.VOL)	. 36
Chapter 5: User Mode and Calibration	.37
Overview	. 37
Entering User Mode	
Tips for Using User Mode	
Performing a Bump Test (BUMP)	
Performing a Calibration (GAS CAL)	
Setting Calibration Parameters (CAL SET)	
Setting Bump Test Parameters (BUMP.SET)	. 61
Alarm Settings (ALARMP)	. 65
Updating the Lunch Break Setting (LUNCH)	. 67
Setting the Confirmation Beep and Non-Compliance Indicator (BEEP)	. 68
Updating the Backlight Time (BL TIME)	
Turning the Key Tone On/Off (KEY.TONE)	
Display Mode Items (DISP.SET)	
Zero Suppression (ZERO.SUP)	
Zero Follower (ZERO.FLW)	
Turning Easy Calibration On/Off (E-CAL)	
Setting the Date/Time (DATE)	
Turning the Password On/Off (PASS-W)	
Viewing the ROM/SUM (ROM/SUM)	
Entering Measuring Mode (START)	. 74
Chapter 6: Maintenance	.75
Overview	. 75
Troubleshooting	. 75
Replacing the Battery	. 76
Replacing the Charcoal Filter	. 78

	Replacing the Hydrophobic Filter	79
	Replacing the Sensor	80
Ch	napter 7: General Parts List	82
Аp	opendix A: Maintenance Mode	84
	Overview	84
	Entering Maintenance Mode	86
	Tips for Using Maintenance Mode	87
	Performing a Calibration (GAS CAL)	87
	Performing a Gas Test (GAS.TEST)	87
	Sensor/Battery Replacement Date (SEN.DATE)	89
	Performing a Bump Test (BUMP)	
	Setting Alarms to Latching or Self-Resetting (LATCH)	90
	Turning the Demand Zero Function On/Off (D.ZERO)	90
	Turning the Auto Zero Function On/Off (A.ZERO)	91
	Turning the ID Display Function On/Off (ID DISP)	91
	Turning the Zero Suppression On/Off (ZERO.SUP)	92
	Turning the Zero Follower On/Off (ZERO.FLW)	92
	User Mode Zero Suppression (ZSUP.DSP)	92
	User Mode Zero Follower (ZFLW.DSP)	92
	Cylinder Setting (CYL.DISP)	92
	Setting the Date/Time (DATE)	92
	Turning the Password On/Off (PASS-W)	93
	Viewing the ROM/SUM (ROM/SUM)	94
	Performing a Default (M.DEF)	95
	Entering Measuring Mode (START)	96
Ap	ppendix B: Gas Select Mode	97
	Overview	97
	Entering Gas Select Mode	
	Tips for Using Gas Select Mode	
	Saving the Alarm Points (SAVE-AP)	
	Turning the Calibration Max Span On/Off (MAX.SPAN)	
	Stealth and Vibrator Settings (STEALTH)	
	Exiting Gas Select Mode (START)	
Wa	arranty	102

WARNING: Understand manual before operating. This is an intrinsically safe product. Substitution of components may impair intrinsic safety. To prevent ignition of a hazardous atmosphere, batteries must only be changed or charged in an area known to be nonhazardous. Not tested in oxygen enriched atmospheres (above 21%).

AVERTISSEMENT: Comprendre le manuel avant de l'utiliser. Ceci est un produit intrinsèquement sûr. La substitution de composants peut nuire à la sécurité intrinsèque. Pour éviter l'inflammation d'une atmosphère dangereuse, les batteries ne doivent être remplacées ou chargées que dans une zone non dangereuse. Non testé dans des atmosphères enrichies en oxygène (plus de 21%).

Chapter 1: Introduction

Overview

This chapter briefly describes the GasWatch 3 gas monitor. This chapter also describes the *GasWatch 3 Operator's Manual* (this document). Table 1 at the end of this chapter lists the specifications for the GasWatch 3.

About the GasWatch 3

Using an advanced detection system, the GasWatch 3 personal gas monitor detects the presence of carbon monoxide (CO). The GasWatch 3's compact size and easy-to-use design make it ideally suited for a wide range of applications, including sewage treatment plants, utility manholes, tunnels, hazardous waste sites, power stations, petrochemical refineries, mines, paper mills, drilling rigs, and fire fighting stations. The GasWatch 3 offers a full range of features, including:

- Liquid crystal display (LCD) for complete and understandable information at a glance
- Ultrabright alarm LEDs
- Distinctive audible/vibrating alarms for dangerous gas conditions and audible alarms for unit malfunction
- Microprocessor control for reliability, ease of use, and advanced capabilities
- Data logging functions
- Alarm trend data
- STEL, TWA, and over range alarms
- Peak reading
- Built-in time function
- · Lunch break feature
- CSA "C/US" classification for Class I, Division I, Groups A, B, C, and D hazardous atmospheres

WARNING: The Model GasWatch 3 detects elevated levels of carbon monoxide which can be dangerous or life threatening. When using the GasWatch 3, you must follow the instructions and warnings in this manual to assure proper and safe operation of the unit and to minimize the risk of personal injury. Be sure to maintain and periodically calibrate the GasWatch 3 as described in this manual.

AVERTISSEMENT: Le modèle GasWatch 3 détecte les niveaux élevés de monoxyde de carbone qui peuvent être dangereux ou mettre la vie en danger. Lorsque vous utilisez le GasWatch 3, vous devez suivre les instructions et les avertissements de ce manuel pour assurer un fonctionnement correct et en toute sécurité de l'appareil et pour réduire les risques de blessures. Assurez-vous de maintenir et d'étalonner périodiquement le GasWatch 3 comme décrit dans ce manuel.

Specifications

Table 1: Standard Sensor Specifications/Alarm Points

Detection Range	0 - 2,000 ppm	
Lowest Detectable Limit (LDL)	3 ppm	
Reading Increment	0 - 300 ppm: 1 ppm 310 - 2,000 ppm: 10 ppm	
Warning Factory Setting	25 ppm	
Alarm Factory Setting	50 ppm	
Alarm H Factory Setting	1,200 ppm	
STEL Alarm	200 ppm	
TWA Alarm	25 ppm	
Indication Accuracy	 0 - 300 ppm: ± 5% of reading or ± 5 ppm CO (whichever is greater) 310 - 2,000 ppm: ± 20% of reading 	

Table 2: GasWatch 3 Specifications

Sampling Method	Diffusion	
Response Time	T90 Within 10 Seconds	
Display	Graphics LCD Display	
Operating Temperature & Humidity	Continuous environment: -20° C to 50° C/10 to 90% RH Temporary environment (up to 15 minutes): -20° C to 60° C/0 to 95% RH NOTE: The H_2 -compensated CO sensor may not effectively compensate for high levels of H_2 if exposed to temperatures above 40° C for longer than 15 minutes. Under these conditions, it can appear to the instrument that the H_2 concentration has exceeded 2000 ppm, the max concentration that can be compensated for, resulting in a CO reading higher than the actual CO level.	

	ATEX: II 1G Ex ia IIC T4 Ga Certificate Number Presafe DEKRA 18ATEX0130		
	• IECEx: Ex ia IIC T4 Ga Certificate Number IECEx DEK 18.0082		
Safety/ Regulatory	• CSA classified, "C/US", as Intrinsically Safe. Exia. Class I, Groups A, B, C, & D. Temperature Code T3A. Certificate Number CSA 19 CA70213062		
	C US 186718		
	180718		
Power Supply	CR2450 button cell battery		
Continuous Operating Hours @ 25 °C	2,500 hours in Measuring Mode (Non Alarm Operation, Fully Charged)		
Case	High-impact Plastic, RF Shielded, Dust and Weather Proof (IP66/68)		
Standard Accessories	Alligator clip		
	Watch band		
	Calibration cup		
Optional Accessories	• Datalogging and Setup Programs (Windows® 7, 8, and 10), available at www.rkiinstruments.com/gw3		
	• IrDA/USB Cable for connecting to a computer when using the Datalogging and Setup Programs (not needed if computer has an infrared port)		
Dimensions and Weight	Approximately 42(H) x 63(W) x 22(D) mm (1.7"H x 2.5"W x 0.9"D) Approximately 45 g (1.6 oz.)		

About this Manual

The GasWatch 3 Operator's Manual uses the following conventions for notes, cautions, and warnings.

NOTE: Describes additional or critical information.

CAUTION: Describes potential damage to equipment.

WARNING: Describes potential danger that can result in injury or death.

Chapter 2: Description

Overview

This chapter describes the GasWatch 3 instrument and its accessories.

Instrument Description

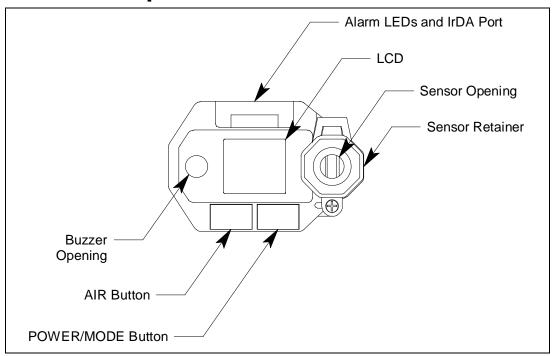


Figure 1: Component Location

Case

The GasWatch 3's sturdy, high-impact plastic case is radio frequency (RF) resistant and is suitable for use in many environmental conditions, indoors and out. The case is dust proof and water resistant. A clear plastic window is located on the front of the case for viewing the LCD. The sensor retainer is located on the right side of the case and allows access to the filters and sensor.

LCD

A digital LCD (liquid crystal display) is visible through a clear plastic window in the top case. The LCD shows the gas reading. The LCD also shows information for each of the GasWatch 3's operating modes.

Control Buttons

Two control buttons, AIR and POWER/MODE, are located below the LCD.

Table 3: GasWatch 3 Control Button Functions

Button	Function(s)	
AIR	• turns on LCD backlight	
	• resets alarm condition if LATCH is set to ON in Maintenance Mode	
	• enters User Mode, Maintenance Mode, and Gas Select Mode when used with POWER/MODE	
	• activates the demand zero function (adjusts the GasWatch 3's fresh air reading)	
	changes the value of a parameter available for adjustment	
	scrolls through parameter options	
POWER/MODE	• turns the GasWatch 3 on and off	
	turns on LCD backlight	
	enters and scrolls through Display Mode	
	• enters instructions into the GasWatch 3's microprocessor	
	• resets alarm condition if LATCH is set to ON in Maintenance Mode	
	enters User Mode, Maintenance Mode, and Gas Select Mode when used with AIR	

Alarm LEDs

The two alarm LEDs above the LCD alert you to gas, low battery, and failure alarms.

Buzzer

One solid-state electronic buzzer is located inside the case. Sound exits the case through a hole in the middle front of the case. The buzzer sounds for gas alarms, malfunctions, and low battery voltage. It also provides feedback for button presses and while in Display, User, Maintenance, or Gas Select Mode.

Vibrator

A vibrating motor inside the GasWatch 3 case vibrates for gas alarms and unit malfunctions.

NOTE: If **STEALTH** is set to **ON**, the vibrator only functions when **VIB** in the **STEALTH** Gas Select Mode item is set to **ON** (see page 100).

Sensor

The sensor retainer holds the sensor in its socket. The CO sensor is an electrochemical cell that consists of two precious metal electrodes in a dilute acid electrolyte. A gas permeable membrane covers the sensor face and allows gas to diffuse into the electrolyte. The gas reacts in the sensor and produces a current proportional to the concentration of the target gas. The GasWatch 3's circuitry amplifies the current, converts the current to a gas concentration, and displays the concentration on the LCD.

This sensor does not respond to or responds minimally to hydrogen (displays H2 RICH once H₂ concentration reaches 2000 ppm).

NOTE: The H₂-compensated CO sensor may not effectively compensate for high levels of H₂ if exposed to temperatures above 40°C for longer than 15 minutes. Under these conditions, it can appear to the instrument that the H₂ concentration has exceeded 2000 ppm, the max concentration that can be compensated for, resulting in a CO reading higher than the actual CO level.

Filters

Charcoal Filter (Black)

A black charcoal filter is placed into a recess in the filter gasket over the CO sensor. The charcoal filter disk scrubs H₂S and certain hydrocarbons out of the sample to avoid false CO readings. If false or elevated CO readings are noticed, especially in the presence of H₂S, change the charcoal filter.

<u>Hydrophobic Filter</u>

The white, circular hydrophobic filter sits on the filter gasket, covering the sensor port and the charcoal filter.

Infrared Communications Port

An infrared (IR) communications port is located at the top of the instrument, near the LEDs. Logged data transmits through the port in standard IrDA protocol. A computer's infrared port or an IrDA/USB cable connected to a USB port can be used to download data to the GasWatch 3 Datalogging Program. See the GasWatch 3 Datalogging Program operator's manual for data logging and downloading instructions.

Battery

A user-replaceable CR2450 button cell battery powers the GasWatch 3. At 25°C the battery lasts at least 2,500 hours (104 days). The battery icon in the upper right of the LCD shows remaining battery life.

A low battery warning activates when the GasWatch 3 detects a low battery voltage. The GasWatch 3 sounds a dead battery alarm when battery voltage is too low for Measuring Mode.

NOTE: Use of batteries not specified by RKI Instruments, Inc. compromises the CSA classification and may void the warranty. See "Replacing the Battery" on page 76.

WARNING: To prevent ignition of a hazardous atmosphere, the battery must only be changed in an area known to be nonhazardous.

AVERTISSEMENT: Pour éviter l'inflammation d'une atmosphère dangereuse, la batterie ne doit être remplacée que dans une zone non dangereuse.

Standard Accessories

Alligator Clip

An alligator clip is installed to a base clip that attaches to spring bars on the back of the GasWatch 3. Use the alligator clip to attach the GasWatch 3 to clothing or a belt. Teeth in the alligator clip's jaws prevent slipping. The alligator clip can be rotated to change the instrument's orientation.

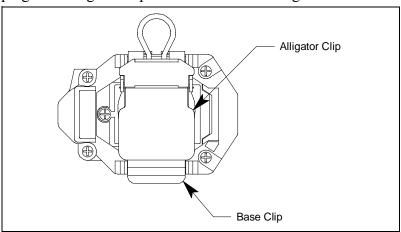


Figure 2: Alligator Clip

Optional Accessories

Watch Band

The adjustable watch band allows the GasWatch 3 to be worn on the wrist. The watch band attaches to spring bars that are protected by hollow tubes.

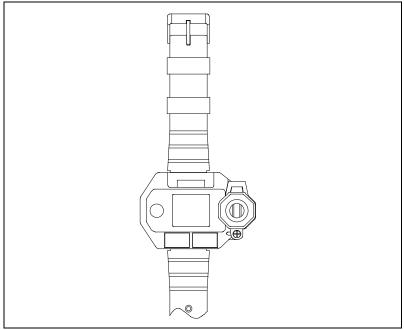


Figure 3: Watch Band

Calibration Cup

The calibration cup installs over the sensor. You must use the calibration cup when performing a bump test, calibration, or gas test.

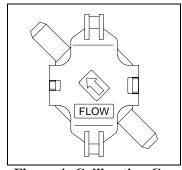


Figure 4: Calibration Cup

IrDA/USB Cable

Unless your computer has a built-in IrDA port, a IrDA/USB cable is needed to establish communication between the GasWatch 3 and the Datalogging Program or the Setup Program.

Chapter 3: Measuring Mode

Overview

This chapter explains how to use the GasWatch 3 to perform confined space entry monitoring or general area monitoring in Measuring Mode.


Start Up

This section explains how to start up the GasWatch 3, get it ready for operation, and turn it off.

Turning On the GasWatch 3

To illustrate certain functions, the following description of the GasWatch 3 start up sequence assumes that the following items in User Mode are turned on: LUNCH, CAL.RMDR, and BP.RMDR in User Mode, and ID DISP and A.ZERO in Maintenance Mode. If any of these items are turned off, then the corresponding screens do not appear.

- 1. Press and briefly hold down POWER/MODE. Release the button when you hear a beep.
- 2. If LUNCH is set to ON (factory setting if OFF, see page 67), the Lunch Break Screen appears. The unit counts down from 5 seconds.

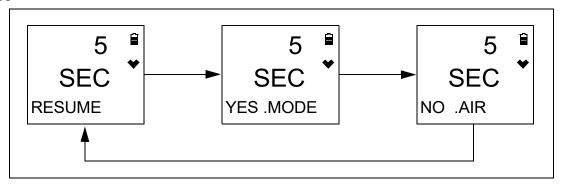

- a. <u>Continue Accumulating</u>: To continue accumulating peak and time-weighted average (TWA) readings from the last time the GasWatch 3 was used, press and release POWER/MODE or allow the countdown to reach 0. The short-term exposure limit (STEL) reading is reset each time the GasWatch 3 is turned on.
- b. <u>Reset Accumulation</u>: To reset the accumulation of peak and time-weighted average (TWA) readings, press and release AIR before the countdown reaches 0.

3. If **CAL.RMDR** is set to **ON** (factory setting) and <u>a calibration is due</u>, the screen that appears next depends on how **CAL.EXPD** is set in User Mode (see page 60). The three possible screens are described below. If <u>a calibration is not due</u>, the instrument displays the number of days left until a calibration is due.

	CAL.EXPD set to CONFIRM (factory setting)	CAL.EXPD set to CANT.USE	CAL.EXPD set to NONE
LCD	CAL ₽ CAL - LMT	FAIL CAL - LMT	0 ♥ d NEXT.CAL
Sound	Buzzer sounds double pulsing tone	Buzzer sounds double pulsing tone	None
Action	• Option A, Perform calibration: Press and release POWER/MODE to enter User Mode and perform a calibration. The instrument takes you straight to the calibration start screen in User Mode's GAS CAL\A-CAL(E-CAL) item. See page 47 for calibration instructions. NOTE: If Password Protection is set ton On (factory setting is Off) using the GW-3 Config Program, you will be prompted for a password to enter User Mode. If the calibration is successful, the screen above will not appear again until the unit is due for calibration. If the calibration is not successful, the screen above will again appear in the startup sequence. • Option B, Bypass message: To continue without performing a calibration, press and release AIR.	The GasWatch 3 cannot be used until a successful calibration is performed. Press and release POWER/MODE to enter User Mode and perform a calibration. The instrument takes you straight to the calibration start screen in User Mode's GAS CAL/A-CAL (E-CAL) item. If you don't press POWER/MODE, the instrument automatically goes to the calibration start screen after 6 seconds. See page 47 for calibration instructions. **NOTE: If Password Protection is set ton On (factory setting is Off) using the GW-3 Config Program, you will be prompted for a password to enter User Mode. If the calibration is successful, the screen above will not appear again until the unit is due for calibration. If the calibration is not successful, the screen above will again appear in the startup sequence.	Option A, Perform calibration: If you want to enter User Mode and perform a calibration, press and release POWER/MODE. The instrument takes you straight to the calibration start screen in User Mode's GAS CAL/A-CAL (E-CAL) item. Option B, Bypass message: To continue without performing a calibration, wait a few seconds for the instrument to continue with its startup sequence.

4. If **BP.RMDR** is set to **ON** (factory setting is **OFF**) and <u>a bump test is due</u>, the screen that appears next depends on how **BP.EXPD** is set in User Mode (see page 64). The three possible screens are described below. If <u>a bump test is not due</u>, the instrument displays the number of days left until a bump test is due.


	BP.EXPD set to CONFIRM (factory setting)	BP.EXPD set to CANT.USE	BP.EXPD set to NONE
LCD	CAL ♥ BP - LMT	FAIL BP - LMT	0 ♥ d NEXT .BP
Sound	Buzzer sounds double pulsing tone	Buzzer sounds double pulsing tone	None
Action	• Option A, Perform bump test: Press and release POWER/MODE to enter User Mode and perform a bump test. The instrument takes you straight to the bump test start screen in User Mode's BUMP item. See page 42 for bump test instructions. NOTE: If Password Protection is set ton On (factory setting is Off) using the GW-3 Config Program, you will be prompted for a password to enter User Mode. If the bump test is successful, the screen above will not appear again until the unit is due for bump testing. If the bump test is not successful, the screen above will again appear in the startup sequence. • Option B, Bypass message: To continue without performing a bump test, press and release AIR.	The GasWatch 3 cannot be used until a successful bump test is performed. Press and release POWER/MODE to enter User Mode and perform a bump test. The instrument takes you straight to the bump test start screen in User Mode's BUMP item. If you don't press POWER/MODE, the instrument automatically goes to the bump test start screen after 6 seconds. See page 42 for bump test instructions. NOTE: If Password Protection is set ton On (factory setting is Off) using the GW-3 Config Program, you will be prompted for a password to enter User Mode. If the bump test is successful, the screen above will not appear again until the unit is due for bump testing. If the bump test is not successful, the screen above will again appear in the startup sequence.	Option A, Perform bump test: If you want to enter User Mode and perform a bump test, press and release POWER/MODE. The instrument takes you straight to the bump test start screen in User Mode's BUMP item. Option B, Bypass message: To continue without performing a bump test, wait a few seconds for the instrument to continue with its startup sequence.

5. The Date/Time Screen appears for a few seconds.


6. The Battery Voltage Screen appears for a few seconds. An "AL-L" at the bottom of the screen indicates that the alarms are set to latching. An "AL-A" at the bottom of the screen indicates that the alarms are set to auto reset. See page 90 for a description of how to change this parameter.




7. The following screens display for 1 second each: Gas Name, Full Scale, Warning Setpoint, Alarm Setpoint, Alarm H Setpoint, STEL Setpoint, and TWA Setpoint.

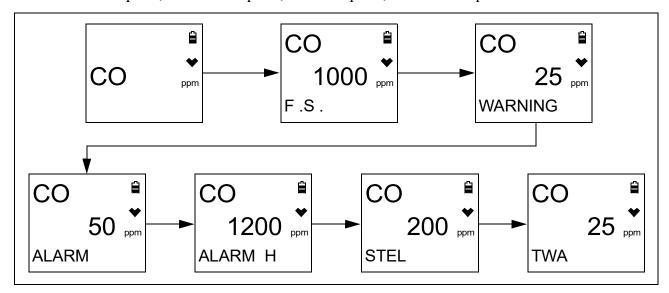

8. If **ID DISP** is set to **ON** (factory setting is **OFF**, see page 91), the User ID Screen appears for a few seconds, followed by the Station ID Screen.

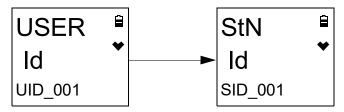

9. If the GasWatch 3 experiences a sensor failure during start up, a screen indicating that the sensor failed appears and the buzzer sounds a double pulsing tone once per second.

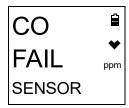


You cannot acknowledge the failure and continue to Measuring Mode. Replace the failed sensor as soon as possible.


10. If **A.ZERO** is set to **ON** (factory setting is **OFF**, see page 91), the instrument prompts you to do an auto zero. An auto zero operation sets the reading to 0 ppm.

WARNING: Make sure that the instrument is in a known fresh air environment (an environment free of combustible or toxic gases and of normal oxygen content, 20.9%) before performing an auto zero operation. If you perform an auto zero operation in an area with gases present, the adjustment will not be accurate.


You <u>must</u> press and release the POWER/MODE button to perform an auto zero function. If you do not press any key, after 15 seconds, the instrument enters Measuring Mode without performing an auto zero.

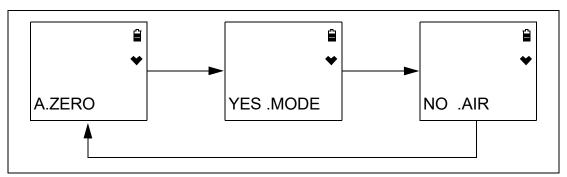

If **Password Protection** is turned **On** (factory setting is **Off**) using the GW-3 Setup Program, a user-set password is required to perform an auto zero. When the password screen appears, adjust each digit with the AIR button and press and release the POWER/MODE button to move on to the next digit. Once the password is entered, the instrument performs the auto zero.

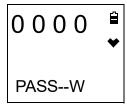


11. The GasWatch 3 is now monitoring for gas in Measuring Mode. The Measuring Mode Screen displays the current gas reading.

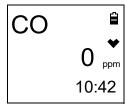

Performing a Demand Zero

Perform a demand zero before using the GasWatch 3. This sets the reading to 0 ppm.


- 1. Find a fresh-air environment. This is an environment free of toxic or combustible gases and of normal oxygen content (20.9%).
- 2. Turn on the unit as described above in Turning On the GasWatch 3.
- 3. Press and hold AIR. The buzzer pulses and the LCD prompts you to continue holding AIR (if **KEY.TONE** is set to **ON** in User Mode).
- 4. Continue to hold AIR until the LCD prompts you to release it. The GasWatch 3 sets the fresh air reading. Start up is complete and the unit is now ready for monitoring.
- 5. If **Password Protection** is turned **On** (factory setting is **Off**) using the GW-3 Setup Program, a user-set password is required to perform a demand ero. When the password screen appears, adjust each digit with the AIR button and press and release the POWER/MODE button to move on to the next digit. Once the password is entered, the instrument performs the demand zero.

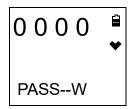

Turning Off the GasWatch 3


- 1. Press and hold POWER/MODE.
- 2. OFF appears on the display and the buzzer pulses for about five seconds (if **KEY.TONE** is set to **ON** in User Mode).
- 3. Release the button when OFF disappears from the display.

If **Password Protection** is turned **On** (factory setting is **Off**) using the GW-3 Setup Program, a user-set password is required to turn off the GasWatch 3. When the password screen appears, adjust each digit with the AIR button and press and release the POWER/MODE button to move on to the next digit. Once the password is entered, the instrument turns off.

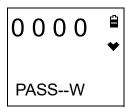

Measuring Mode Operation

When the GasWatch 3 completes its startup sequence, it is in Measuring Mode. In Measuring Mode the GasWatch 3 continuously monitors the sampled atmosphere and displays the gas concentration. The GasWatch 3 is in Normal Operation if there are no alarm indications.

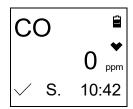

<u>Heart Symbol</u>: The heart symbol on the right side of the LCD indicates the operation status and flashes when normal. A microprocessor error causes the heart symbol to stop flashing or to disappear.

<u>Check Mark</u>: If **BP.RMDR** is set to **ON** <u>and</u> if a bump test is not due, a check mark appears in the lower left corner of the LCD.


"S": If the instrument is operating in Stealth Mode, an "S." appears at the bottom of the LCD.

<u>Backlight</u>: In a low-light environment, press and release either button to turn on the display backlight. See page 70 to program backlight duration.

<u>Confirmation/Non-Compliance Indicator</u>: If the **BEEP** item in User Mode is set to anything other than **OFF**, the GasWatch 3 gives periodic indications to confirm that it's operating or to indicate a non-compliance (see page 68).

Monitoring an Area

1. Start up the GasWatch 3 as described above in "Start Up" on page 15. It is now in Measuring Mode.

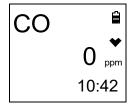

- 2. The instrument displays the CO reading. The H₂ reading is not displayed but "H2 RICH" appears once the H₂ concentration rises above 2000 ppm.
- 3. Take the GasWatch 3 to the monitoring area.
- 4. Wait at least 15 seconds.
- 5. If a reading is observed, allow the reading to stabilize to determine the gas concentration present.
- 6. If a gas alarm occurs, take appropriate action. See page 24.

Alarms

This section covers alarm indications in Measuring Mode. It also describes how to reset the GasWatch 3 after an alarm occurs and how to respond to an alarm condition.

NOTE: False alarms may be caused by radio frequency (RF) or electromagnetic (EMI) interference. Keep the GasWatch 3 away from RF and EMI sources such as radio transmitters or large motors.

Alarm Indications

The GasWatch 3 buzzer sounds an alarm, the LEDs flash, and the vibrator pulses when any sort of alarm condition or failure occurs. If the GasWatch 3 is operating in Stealth Mode, the buzzer does not sound and the vibrator's operation depends on the **VIB** setting in Gas Select Mode's **STEALTH** item. See page 100 for more information.

NOTE: If an alarm condition occurs while you are in Display Mode, the GasWatch 3 automatically returns to the Measuring Mode screen.

The table below summarizes the types of alarms produced by the GasWatch 3 and their indications.

Table 4: Alarm Types and Indications

Alarm Type	Visual Indications	Other Indications
Warning Concentration of gas rises above the Warning setting.	 Gas reading flashes WARNING appears at the bottom of the LCD Alarm LEDs flash once per second 	 High-low tone sounds once per second Vibrator pulses once per second
	Backlight turns on	

Table 4: Alarm Types and Indications

Alarm Type	Visual Indications	Other Indications
Alarm Concentration of gas rises above the Alarm setting.	 Gas reading flashes ALARM appears at the bottom of the LCD Alarm LEDs flash twice per second Backlight turns on 	High-low tone sounds twice per second Vibrator pulses twice per second
Alarm H Concentration of gas rises above the Alarm H setting.	 Gas reading flashes ALARM H appears at the bottom of the LCD Alarm LEDs flash twice per second Backlight turns on 	 High-low tone sounds twice per second Vibrator pulses twice per second
TWA or STEL Concentration rises above the TWA or STEL alarm setting.	 Gas reading flashes TWA or STEL appears at the bottom of the LCD Alarm LEDs flash once per second Backlight turns on 	 High-low tone sounds once per second Vibrator pulses once per second
H2 RICH Concentration of hydrogen rises above 2000 ppm (parts per million).	 H2 and rich alternate on the top line OVER appears at the bottom of the LCD Alarm LEDs flash twice per second Backlight turns on 	High-low tone sounds twice per second Vibrator pulses twice per second
Over Range	 Gas reading is replaced with a flashing □□□ Gas name and units flash OVER appears at the bottom of the LCD Alarm LEDs flash twice per second Backlight turns on 	 High-low tone sounds twice per second Vibrator pulses twice per second

Table 4: Alarm Types and Indications

Alarm Type	Visual Indications	Other Indications
Minus Over Range	Affected channel's gas reading is replaced with a flashing □□□	High-low tone sounds twice per second
	Gas name and units flash	Vibrator pulses twice
	• M OVER appears at the bottom of the LCD	per second
	Alarm LEDs flash twice per second	
	Backlight turns on	
Low Battery Warning	The last bar in the battery icon disappears and the battery icon starts flashing	None
Dead Battery Alarm	 Gas reading disappears. FAIL BATTERY appears on the LCD. Alarm LEDs flash once per second 	Double pulsing tone sounds once per second
Sensor Failure	 FAIL SENSOR appears on the LCD. Alarm LEDs flash once per second 	Double pulsing tone sounds once per second
Clock Failure	• FAIL 050 CLOCK appears on the LCD	Double pulsing tone sounds once per second
	Alarm LEDs flash once per second	
System Failure	 FAIL SYSTEM and an error code appear on the LCD Alarm LEDs flash once per second 	Double pulsing tone sounds once per second

Responding to Alarms

This section describes response to gas, over range, battery, sensor failure, clock failure, and system failure alarms.

Responding to Gas Alarms

1. Follow your established procedure for an increasing gas condition.

- 2. Reset the alarm as necessary or allowed.
 - a. If **LATCH** is set to **ON** (factory setting) in Maintenance Mode, the gas reading must fall below an alarm setting before you can reset the alarm condition using POWER/MODE or AIR.
 - If **Password Protection** is set to **On** using the GW-3 Config Program, you must press AIR and POWER/MODE at the same time and then enter a user-set password to reset the gas alarm.
 - b. If **LATCH** is set to **OFF** in Maintenance Mode, the alarm condition automatically resets when gas reading falls below an alarm setpoint.

Responding to an H2 RICH Alarm

The H2 RICH alarm automatically clears once the hydrogen level decreases below 2000 ppm (parts per million).

Responding to Over Range Alarms

WARNING: An over range condition may indicate an extreme carbon monoxide concentration or an explosive concentration. Confirm the gas concentration with a different GasWatch 3 or with another gas detecting device.

AVERTISSEMENT: Un dépassement de la plage peut indiquer une concentration extrême en monoxyde de carbone ou une concentration en explosif. Confirmez la concentration de gaz avec un GasWatch 3 différent ou avec un autre dispositif de détection de gaz.

- 1. Follow your established procedure for an extreme gas condition.
- 2. Reset the alarm using POWER/MODE or AIR once the alarm condition clears if **LATCH** is set to **ON** (factory setting) in Maintenance Mode.
 - If **Password Protection** is set to **On** using the GW-3 Config Program, you must press AIR and POWER/MODE at the same time and then enter a user-set password to reset the over range alarm.
- 3. Calibrate the GasWatch 3 as described on page 47.
- 4. If the over range condition continues or if you are not able to successfully calibrate the unit, you may need to replace the sensor.
- 5. If the over range condition continues after you replace the sensor, contact RKI Instruments, Inc. for further instructions.

Responding to Battery Alarms

WARNING: The GasWatch 3 is not operational as a gas monitoring device during a dead battery alarm. Take the GasWatch 3 to a non-hazardous area and replace the battery as described in "Replacing the Battery" on page 76.

The GasWatch 3 is fully functional during a low battery warning. However, only 10 days of operating time remain. The amount of time depends on LCD backlight use and alarm frequency. Replace the battery as described on page 76 as soon as possible.


NOTE: Alarms and the LCD backlight consume battery power and reduce the amount of operating time remaining.

Responding to Sensor Failure Alarms

- 1. Calibrate the sensor as described on page 47.
- 2. If the sensor failure continues, replace the sensor as described on page 80.
- 3. If the sensor failure condition continues after replacing the sensor, contact RKI Instruments, Inc. for further instructions.

Responding to Clock Failure Alarms

A clock failure alarm occurs if the unit's internal clock malfunctions.

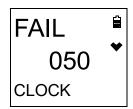

1. Press and release POWER/MODE to continue into Measuring Mode.

CAUTION: There is no datalogging function if you operate the instrument after a clock failure.

- 2. Attempt to set the date using the **DATE** item in User Mode (see page 72).
- 3. If the date cannot be set correctly, contact RKI Instruments, Inc. as soon as possible.

Responding to System Failure Alarms

1. If a system failure occurs, the system failure screen displays an error code as shown below:



2. The error code meanings are shown in the table below:

Table 5: Error Code Explanation

Error Code	Explanation
000	ROM failure
010	RAM failure
020	FRAM failure
031	FLASH memory failure
082	Temperature sensor failure

3. If the error code is anything but 031, the instrument cannot be used. Contact RKI Instruments, Inc. as soon as possible.

If the error code is 031, press and release POWER/MODE to continue into Measuring Mode if the instrument must be used temporarily.

CAUTION: There is no datalogging function if you operate the instrument after a 031 system failure. Contact RKI Instruments, Inc. as soon as possible.

Data Logging

The GasWatch 3 logs Measuring Mode gas readings, alarm data, and calibration data to its internal memory. Logged data can be download it to a computer via the infrared communications port on the front of the unit.

The data logging capacity depends on how often the GasWatch 3 stores data and how often the GasWatch 3 is turned on and off. The table below illustrates how much data logging time is available for the various interval times. It assumes that the unit is only turned on once and there are no alarms. The data logging interval time must be set using the GasWatch 3 Datalogging Program.

Interval **Data Logging** Time **Capacity** 10 seconds 10 hours 20 seconds 20 hours 30 seconds 30 hours 1 minute 60 hours 3 minutes 180 hours 5 minutes 300 hours 10 minutes 600 hours

Table 6: Data Logging Capacity

To utilize the GasWatch 3's downloading capability, you need:

- PC with Windows 7, Windows 8, or Windows 10
- IrDA port or IrDA/USB cable (cable available from RKI Instruments, Inc.)
- GasWatch 3 Datalogging Program (available at www.rkiinstruments.com/gw3).

For a complete description of the Datalogging Program and procedures for downloading data to a computer, see the GasWatch 3 Datalogging Program Operator's Manual.

Chapter 4: Display Mode

This section describes Display Mode which is accessible from Measuring Mode. See Table 7 below for a list of Display Mode's menu items, a short description of each item, and the page number for further description.

Table 7: Display Mode Menu Items

Display Mode Menu Item	Description
PEAK (page 30)	Displays the Peak reading.
STEL (page 31)	Displays the STEL reading.
TWA (page 31)	Displays the TWA reading.
USER ID (page 31) ^A	View and/or change the User ID.
STN ID (page 32) ^A	View and/or change the Station ID.
CAL.DATA (page 33) ^B	Displays the last calibration date.
BP.DATA (page 34) ^C	Displays the last bump test date.
DATE (page 35)	Displays the current date and time.
TEMP (page 35)	Displays the current temperature.
ALARMP (page 35)	View alarm points.
BUZZ.VOL (page 36) ^D	Set the buzzer volume to LO or HI (factory setting).

^A Only appears if **DISP.SET** is set to **ON** in User Mode (factory setting) <u>and</u> if **ID DISP** is set to **ON** in Maintenance Mode (factory setting is **OFF**).

^B Only appears if CAL.RMDR is set to ON in User Mode (factory setting).

^C Only appears if **BP.RMDR** is set to **ON** in User Mode (factory setting is **OFF**).

D Only appears if **DISP.SET** is set to **ON** in User Mode (factory setting).

Tips for Using Display Mode


- To enter Display Mode and scroll from one item to the next or skip an item when a question is asked, press and release POWER/MODE.
- To enter an item, press and release AIR.
- To change a flashing parameter, press and release AIR. To reverse the movement in a list (ie. from down to up or vice versa):
 - a. Press and hold AIR.
 - b. Immediately press POWER/MODE and then release both buttons.
- To exit from an entered-information screen and go back to Measuring Mode, press and release POWER/MODE until you get to the Measuring Mode screen.

NOTE: Each screen displays for 20 seconds. If you do not press a button within 20 seconds, the GasWatch 3 automatically returns to Measuring Mode.

Peak Screen (PEAK)

The peak screen displays the highest concentration detected since the GasWatch 3 was turned on. The peak reading is stored until a higher level is detected, the peak reading is cleared, or the GasWatch 3 is turned off.


The lunch break feature enables the GasWatch 3 to save the peak reading when it is turned off so it can continue with the same peak when it is turned on again (see page 15).

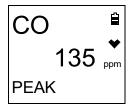

To clear the peak reading, do the following:

NOTE: If **Password Protection** is set to **On** using the GW-3 Series Setup Program, the peak reading cannot be cleared.

- 1. After entering Display Mode, press and release POWER/MODE until **PEAK** appears.
- 2. Press and hold AIR until the screen prompts you to release it.

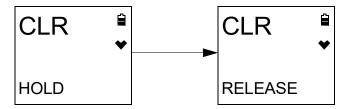


3. The peak reading is reset and the unit returns to the Peak Screen.

If you do not want to clear the peak reading, release AIR before the above screen sequence occurs. The unit returns to the Peak Screen.


STEL Screen (STEL)

The STEL Screen displays the short term exposure limit (STEL) reading. The STEL reading is the average reading *over the last 15 minutes*.

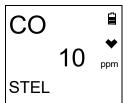

TWA Screen (TWA)

The TWA Screen displays the time weighted average (TWA) reading.

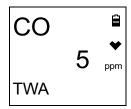

The TWA reading is the average reading *over the last 8 hours*. If 8 hours have not elapsed since the last time the TWA reading was cleared, the average is still calculated over 8 hours. The missing readings are assigned a value of 0. If **LUNCH** is set to **OFF** (factory setting), the TWA is cleared when the GasWatch 3 is turned off.

If **LUNCH** is set to **ON**, the GasWatch 3 remembers the TWA reading when it is turned off and can continue accumulation when it is turned on again (see page 15).

Changing the User ID (USER ID)


This screen only appears if **DISP.SET** in User Mode is set to **ON** (factory setting) and if **ID DISP** in Maintenance Mode is set to **ON** (factory setting is **OFF**).

Use this screen to select a user ID from the 128 user IDs that are stored in the GasWatch 3's memory. Before a user ID is selected on a brand new instrument, the user ID is "-----". The factory-installed user IDs have a "U ID XXX" format.


The user ID provides a way to identify the GasWatch 3 user during a data logging session.

User IDs can only be <u>selected</u> in this menu item. In order to <u>edit</u> the 128 user IDs, you must use the GasWatch 3 Datalogging Program or GasWatch 3 Setup Program.

1. After entering Display Mode, press and release POWER/MODE until the **USER ID** screen sequence appears.

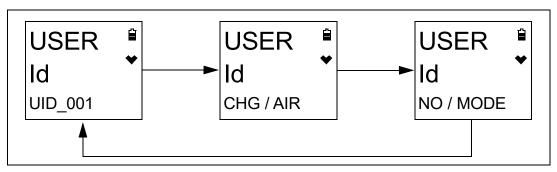

2. To change the User ID, press and release AIR. The current User ID flashes.

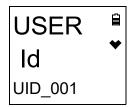

- 3. Use AIR to scroll to the desired User ID.
- 4. Press and release POWER/MODE to save the User ID and return to the **USER ID** screen in Display Mode.

Changing the Station ID (STN ID)


This screen only appears if **DISP.SET** in User Mode is set to **ON** (factory setting) and if **ID DISP** in Maintenance Mode is set to **ON** (factory setting is **OFF**).

Use this screen to select a station ID from the 128 station IDs that are stored in the GasWatch 3's memory. Before a station ID is selected on a brand new instrument, the station ID is "-----". The factory-installed station IDs have a "S_ID_XXX" format.


The station ID provides a way to identify the GasWatch 3 location during a data logging session.

Station IDs can only be <u>selected</u> in this menu item. In order to <u>edit</u> the 128 station IDs, you must use the GasWatch 3 Datalogging Program or GasWatch 3 Setup Program.

1. After entering Display Mode, press and release POWER/MODE until the **STN ID** screen sequence appears.

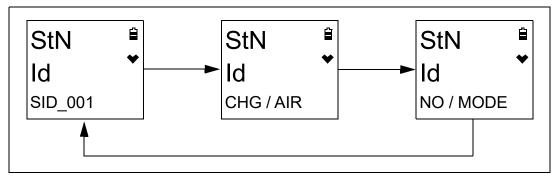

2. To change the station ID, press and release AIR. The current station ID flashes.

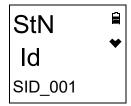


- 3. Use AIR to scroll to the desired station ID.
- 4. Press and release POWER/MODE to save the station ID and return to the **STN ID** screen in Display Mode.

Last Successful Calibration Date (CAL.DATA)

The **CAL.DATA** screen shows the date of the last successful calibration. This screen only appears if **CAL.RMDR** is set to **ON** (factory setting).

1. After entering Display Mode, press and release POWER/MODE until the **CAL.DATA** screen sequence appears.

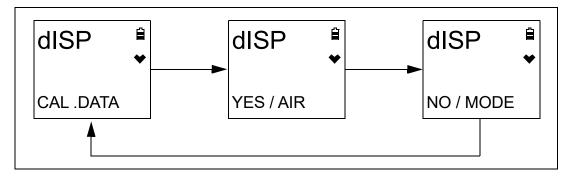


2. Press AIR to enter the CAL.DATA screen. The date of the last successful calibration displays.

3. Press and release POWER/MODE to return to the CAL.DATA screen in Display Mode.

Last Successful Bump Test Date (BP.DATA)

The **BP.DATA** screen shows the date of the last successful bump test. This screen only appears if **BP.RMDR** is set to **ON** (factory setting is **OFF**).

1. After entering Display Mode, press and release POWER/MODE until the **BP.DATA** screen sequence appears.

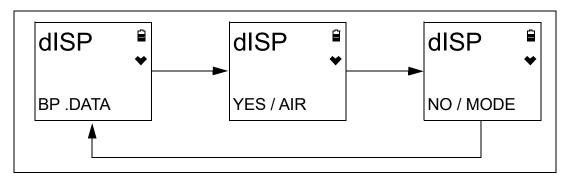

2. Press AIR to enter the **BP.DATA** screen. The date of the last successful bump test displays.

3. When you are done viewing the last bump test date, press and release POWER/MODE to return to the **BP.DATA** screen in Display Mode.


Date/Time Screen (DATE)

The **DATE** screen shows the instrument's date and time.



Temperature Screen (TEMP)


The **TEMP** screen shows the surrounding area's temperature.

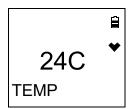

Alarm Points Screen (ALARM--P)


The Alarm Points Screen shows the gas alarm settings.

1. After entering Display Mode, press and release POWER/MODE until the **ALARM--P** screen sequence appears.

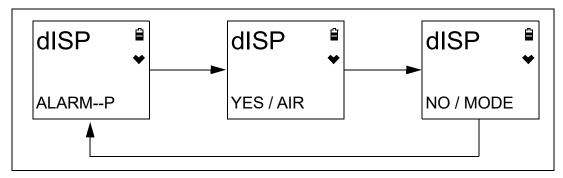

2. Press and release AIR. The Full Scale Setting screen appears.

3. Use AIR to scroll through the Warning, Alarm, Alarm H, STEL, and TWA settings.

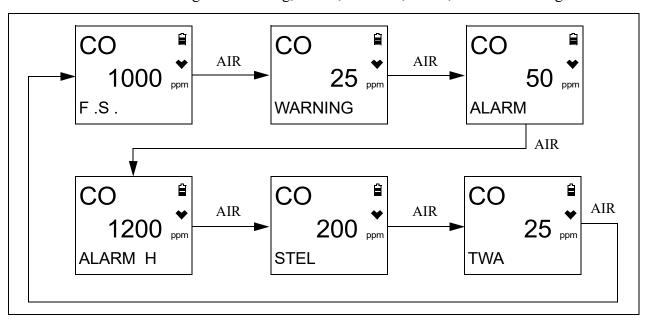

4. Press and release POWER/MODE to return to the Alarm Points Screen.


Adjusting the Buzzer Volume (BUZZ.VOL)

The **BUZZ.VOL** screen allows you to adjust the volume of the instrument's buzzer. This screen only appears if **DISP.SET** in User Mode is set to **ON** (factory setting).

HI (factory setting): Buzzer volume is high.

LO: Buzzer volume is low.

1. While in Display Mode, press and release POWER/MODE until **BUZZ.VOL** appears. The current setting displays on the top line.

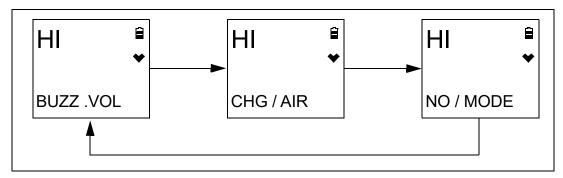

- 2. Press and release AIR. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **BUZZ.VOL** item in Display Mode.

Chapter 5: User Mode and Calibration

Overview

This section describes the GasWatch 3 in User Mode. See Table 8 below for a list of the items found in User Mode, the page that the item's instructions can be found on, and a short description of the item.

Table 8: User Mode Menu Items

User Mode Menu Item	Description			
BUMP (page 42)	Perform a bum	np test.		
	BUMP CYL X	Perform a bump test on the gas selected for Cylinder X (Cylinders A-E available).		
	START	Begin the war	rmup sequence and enter Measuring Mode.	
	ESCAPE	Return to the	BUMP menu item.	
GAS CAL (page 47)	Perform a fresh air adjustment, perform a span adjustment, change the calibration gas concentration.			
	AIR (page 47)	Perform a fresh air adjustment.		
	A-CAL (page 48) or E-CAL (page 50) depending on E-CAL User Mode setting	A-CAL (or E-CAL) CYL X	Perform a span adjustment on the gas selected for Cylinder X (Cylinders A-E available).	
		START	Begin the warmup sequence and enter Measuring Mode.	
		CAL-P	Set the calibration gas concentration.	
		CYL SEL	Assign a cylinder (A-E) to each gas. CO is assigned to Cylinder A and H ₂ is assigned to Cylinder B by default.	
		ESCAPE	Return to the A-CAL item in the GAS CAL menu.	
	ESCAPE	Return to the	GAS CAL item in User Mode.	

Table 8: User Mode Menu Items

User Mode Menu Item	Description		
CAL SET (page 58)	Change param	neters related to calibration.	
	CAL.RMDR (page 59)	when a calibra CAL.EXPD s Mode. OFF: No noti	etting): The instrument notifies the user upon startup ation is due. Notification type depends on setting below. CAL.DATA screen appears in Display fication upon startup when a calibration is due. screen does not appear in Display Mode.
	CAL.INT (page 59)		e instrument needs to be calibrated. 000 days (factory setting is 90 days)
	CAL.EXPD (page 60)	startup. CONFIRM (edge that calib CANT.USE: bration is perf	een indicates that calibration is due but warmup
	ESCAPE	Return to the	CAL SET item in User Mode.
BUMP.SET (page 61)	Change param	meters related to bump testing.	
	SETTING (page 61)	GAS.TIME	How long gas is applied during a bump test. Choices: 30 (factory setting), 45 , 60 , 90 seconds
		CHECK	Percentage of calibration gas concentration that the bump test reading must be within in order to pass bump. Options: 10%, 20%, 30%, 40%, 50% (factory setting)
		CAL.TIME	How long gas is applied during a calibration. GAS.TIME is deducted from this time. Options: 90 (factory setting) or 120 seconds
		A-CAL	ON (factory setting): If a bump test fails, a calibration automatically starts. OFF: If a bump test fails, a calibration does not automatically start.
		ESCAPE	Return to the SETTING item in the BUMP SET menu.

Table 8: User Mode Menu Items

User Mode Menu Item	Description		
BUMP SET (page 61) (cont'd)	BP.RMDR (page 63)	ON: The instrument notifies the user upon startup when a bump test is due. Notification type depends on BP.EXPD setting below. BP.DATA screen appears in Display Mode. OFF (factory setting): No notification upon startup when a bump test is due. BP.DATA screen does not appear in Display Mode.	
	BP.INT (page 64)	How often the instrument needs to be bump tested. Options: 0 - 30 days (factory setting is 30 days)	
	BP.EXPD (page 64)	Defines what action must be taken if a bump test is due upon startup. CONFIRM (factory setting): Press and release AIR to acknowledge that bump test is due and continue to Measuring Mode. CANT.USE: Cannot enter Measuring Mode until a successful bump test is performed. NONE: A screen indicates that bump test is due but warmup sequence continues.	
	ESCAPE	Return to the BUMP SET item in User Mode.	
ALARM-P (page 65)	•	ts (WARNING, ALARM, ALARM H, STEL, TWA) and/or reset all default settings.	
LUNCH (page 67)	ON: Lunch break feature is on. Instrument asks if you want to resume TWA and PEAK readings at startup. OFF (factory setting): Lunch break feature is off. Instrument resets TWA and PEAK readings every time it's turned on.		
BEEP (page 68)	Set confirmation beep parameters.		
	BEEP.SEL (page 68)	LED: LEDs flash and instrument vibrates based on interval defined in BEEP.INT to confirm instrument is still operating. BUZZER: Buzzer sounds and instrument vibrates based on interval defined in BEEP.INT to confirm instrument is still operating. LED+BUZ: LEDs flash, buzzer sounds, and instrument vibrates based on interval defined in BEEP.INT to confirm instrument is still operating. BMP/CAL: LEDs flash based on interval defined in BEEP.INT if bump test or calibration is due regardless of whether BP.RMDR and/or CAL.RMDR are set to ON. OFF (factory setting): No alerts to confirm instrument is still operating or that a bump test or calibration is due.	
	BEEP.INT (page 69)	Confirmation alert interval. Confirmation type defined in BEEP.SEL . Options: 0.5 minute and 1 to 99 minutes in 1 minute increments. The factory setting is 5 minutes.	
	ESCAPE	Return to the BEEP item in User Mode.	

Table 8: User Mode Menu Items

User Mode Menu Item	Description
BL TIME (page 70)	How long the back light stays on after the last button press. Options: 0 - 255 seconds or OFF. The factory setting is 30 seconds.
KEY.TONE (page 70)	ON (factory setting): Buzzer sounds when button is pressed. OFF: Buzzer does not sound when button is pressed.
DISP.SET (page 71)	OFF: USER ID, STN ID, and BUZZ.VOL items do not appear in Display Mode. ON (factory setting): BUZZ.VOL item appears in Display Mode. USER ID and STN ID items appear if ID DISP in Maintenance Mode is also set to ON.
ZERO.SUP (page 71)*	ON (factory setting): Not intended for field adjustment. The suppression value is 2 ppm.
ZERO.FLW (page 71)**	ON (factory setting): Not intended for field adjustment.
E-CAL (page 72)	XX seconds: E-CAL appears in GAS CAL instead of A-CAL. OFF (factory setting): E-CAL does not appear in GAS CAL.
DATE (page 72)	Set the instrument's date and time.
PASS-W (page 73)	ON: User Mode is password-protected. Factory-set password is 0405. OFF (factory setting): User Mode is not password-protected.
ROM/SUM (page 74)	View the firmware information for the GasWatch 3's sensor board and main board.
START (page 74)	Press and release POWER/MODE to begin the warmup sequence and enter Measuring Mode.
, 11	UP.DSP is set to ON in Maintenance Mode. LW.DSP is set to ON in Maintenance Mode.

Entering User Mode


WARNING: The GasWatch 3 is not in operation as a gas detector while in User Mode.

- 1. Take the GasWatch 3 to a non-hazardous location and turn it off if it is on.
- 2. Press and hold AIR, then press and hold POWER/MODE. When you hear a beep, release the buttons.


3. The screen that appears depends on the setting of User Mode's **PASS-W** item.

If **PASS-W** is set to **OFF** (factory setting), continue with Step 6.

If **PASS-W** is set to **ON**, continue with Step 4.

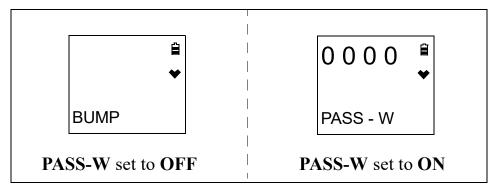

- 4. If **PASS-W** is set to **ON** in User Mode, a password screen appears and the first digit flashes. The factory-set password is **0405** but it can be changed.
- 5. Use AIR to select each password number then press POWER/MODE to save it and move on to the next number. To go back a number, press and hold AIR and POWER/MODE for a few seconds. To reverse the direction of change (ie. from increasing to decreasing or vice versa):
 - a. Press and hold AIR.
 - b. Immediately press POWER/MODE and then release both buttons.
- 6. The **BUMP** item displays.

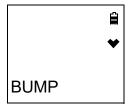

7. Use AIR to move through the User Mode items.

Tips for Using User Mode

- To scroll from one item to the next, press and release AIR. To reverse the scrolling direction:
 - a. Press and hold AIR.
 - b. Immediately press POWER/MODE and then release both buttons.
 - c. The scrolling direction returns to the original direction when you exit and reenter a menu.
- To skip an item when a question is asked, press and release AIR.
- To enter an item and to save any changes, press and release POWER/MODE.


- To change a flashing parameter, press and release AIR. To reverse the direction of change (ie. from increasing to decreasing or vice versa):
 - a. Press and hold AIR.
 - b. Immediately press POWER/MODE and then release both buttons.
- To exit an entered item without saving a change, press and hold AIR and POWER/MODE for a few seconds.

Performing a Bump Test (BUMP)

Bump test the instrument before each day's use with a known concentration of the target gas. The instrument does not need to be calibrated unless it does not pass the bump test.


To bump test the GasWatch 3, you need:

- Calibration gas cylinder (RKI Instruments recommends using 50 ppm CO)
- 0.25 LPM fixed flow regulator
- Non-absorbent tubing
- Calibration cup
- 1. Confirm that the GasWatch 3's calibration gas value matches the concentration listed on the calibration gas cylinder as described on page 55.
- 2. Confirm that the regulator knob is turned all the way clockwise. Screw the 0.25 LPM fixed flow regulator onto the calibration cylinder.
- 3. Install the calibration cup onto the GasWatch 3. The calibration cup has an indicated flow direction. Be sure the calibration cup is installed in the correct direction and that it is pushed on all the way.

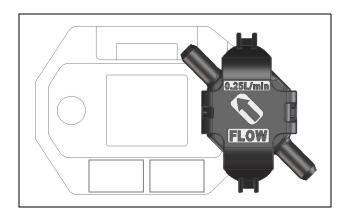


4. Use the tubing to connect the regulator to the inlet of the calibration cup.

5. While in User Mode, press AIR to scroll to **BUMP**.

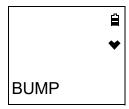


6. Press and release POWER/MODE. The display shows the gas assigned to Cylinder A and its assigned calibration value (see page 55 if the calibration value does not match the calibration gas cylinder's concentration). The bottom of the screen alternates between "CYL A" and "BUMP".

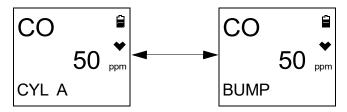

- 7. If necessary, use AIR to scroll to the Bump screen for the gas you want to bump test. As shipped from the factory, CO is assigned to Cylinder A and H₂ is assigned to Cylinder B. The H₂ response does not need to be bump tested.
- 8. Turn the regulator knob counterclockwise to open the regulator.
- 9. Press and release POWER/MODE.
- 10. The gas reading flashes, the bottom of the screen alternates between "APLY" and "BUMP", and the bottom of the screen counts down from the time set in

BUMP.SET\SETTING\GAS.TIME.

To back out of the gas application screen without performing the bump test, press and release AIR and POWER/MODE together.

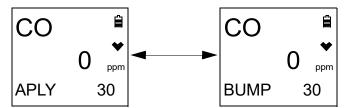

11. At the end of the countdown, the instrument analyzes the results. Follow the flow chart to determine the bump test outcome.


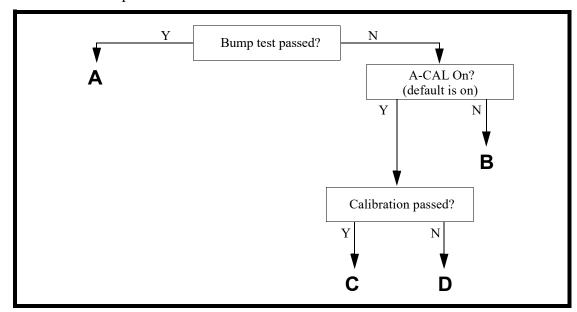


Figure 5: Bump Test Flow Chart


1. The instrument indicates that the channel passed the bump test. Use AIR to scroll between the bump test result and the bump test gas reading. CO P BMP/CAL AIR CO F BMP/C AIR AIR BMP/C CO F BMP/C 2. Close the regulator. 3. Unscrew the regulator. 3. Unscrew the regulator.	test failed L set to OFF (factory setting is instrument shows which nels passed or failed the bump The LEDs flash and the buzzer ds. Use AIR to scroll between esult and the reading.
channel passed the bump test. Use AIR to scroll between the bump test result and the bump test gas reading. CO P BMP/CAL AIR CO F BMP/C 47 P BMP/C 2. Close the regulator. 3. Unscrew the regulator. 3. Unscrew the regulator. 3. Unscrew the scroll between the bump test test. sount test. Sound the result test. Sound	nels passed or failed the bump The LEDs flash and the buzzer ds. Use AIR to scroll between
to return to the BUMP CYL B screen in the BUMP menu. 6. Use AIR to scroll to START and 6. Use	AIR OF S ppm

Option C from Flow Chart

- Bump test failed
- A-CAL set to ON (factory setting)
- · Calibration passed
- 1. A calibration immediately and automatically starts. Continue to apply the calibration gas.
- 2. The calibration time is the difference between the GAS.TIME and the CAL.TIME values defined in the BUMP.SET\SETTING item in User Mode.

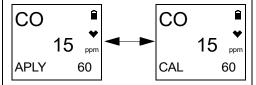


3. The instrument shows the pass/fail results of the bump test/calibration. Use AIR to scroll between the results and the readings.

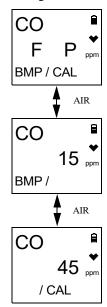


- 4. Close the regulator.
- 5. Unscrew the regulator.
- 6. Remove the calibration cup.
- 7. Press and release POWER/MODE to return to the BUMP CYL B screen in the BUMP menu.
- 8. Use AIR to scroll to START and press and release POWER/MODE to enter Measuring Mode.

- **Option D from Flow Chart**
- · Bump test failed
- A-CAL set to ON (factory setting)
- · Calibration failed
- 1. A calibration immediately and automatically starts. Continue to apply the calibration gas.
- The calibration time is the difference between the GAS.TIME and the CAL.TIME values defined in the BUMP.SET\SETTING item in User Mode.

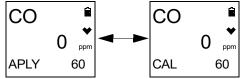

3. The instrument shows the pass/fail results of the bump test/calibration. The LEDs flash and the buzzer sounds. Use AIR to scroll between the results and the readings.

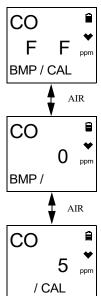


- 4. Close the regulator.
- 5. Unscrew the regulator.
- 6. Remove the calibration cup.
- 7. Press and release POWER/MODE to return to the BUMP CYL A screen in the BUMP menu.
- 8. Use AIR to scroll to START and press and release POWER/MODE to enter Measuring Mode.

Performing a Calibration (GAS CAL)

- Bump test the instrument before each day's use with a known concentration of the target gas. A bump test can be done in User Mode's **BUMP** item or by applying gas in Measuring Mode. The instrument does not need to be calibrated unless it does not pass the User Mode bump test or does not respond appropriately, as defined by the user, in Measuring Mode.
- The hydrogen response for the H₂-compensated CO sensor must be set both monthly and after the sensor is replaced.
- To fully calibrate the sensors, perform a fresh air adjustment (AIR CAL) and a span adjustment (A-CAL or E-CAL).
- The GasWatch 3 can be calibrated using either **A-CAL** or **E-CAL** depending on the setting of the **E-CAL** User Mode item.
- A-CAL (appears if E-CAL User Mode item is set to OFF): Apply gas for a period of time, then press and release POWER/MODE to perform the adjustment.
- E-CAL (appears if E-CAL User Mode item is set to something besides OFF): As soon as gas is applied and the reading reaches 10% of the auto calibration value, the instrument counts down from the number of seconds specified in the E-CAL User Mode item and automatically performs the adjustment.

Performing a Fresh Air Adjustment (AIR)


- 1. Find a fresh air environment, an environment of normal oxygen content (20.9%) that is free of toxic and combustible gases.
- 2. While in User Mode, press AIR to scroll to GAS CAL.

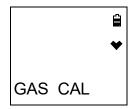


3. Press and release POWER/MODE. The AIR item appears.



4. Press and release POWER/MODE to enter the AIR menu.

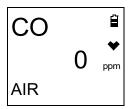

- 5. To return to the **AIR** menu without performing a fresh air adjustment, press and release POWER MODE.
- 6. Press and hold AIR until the screen prompts you to release it.

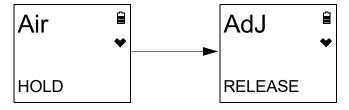

- 7. If the fresh air adjustment passes, the instrument returns to the **AIR** item in the **GAS CAL** menu.
- 8. If the fresh air adjustment fails, "FAIL AIR" displays. Press and release POWER/MODE to acknowledge the failure. See page 75.

Performing a Span Adjustment in A-CAL


The **A-CAL** item only appears if **E-CAL** in User Mode is set to **OFF** (factory setting). If **E-CAL** is set to **ON**, see page 50 for calibration instructions.

Preparing for Span Adjustment

To adjust the span on the GasWatch 3, you need:

- Calibration gas cylinder (RKI Instruments recommends using 50 ppm CO)
- If you are setting the H₂ response for the <u>H₂-compensated CO</u> sensor (which needs to be calibrated both monthly and after the sensor is replaced), a cylinder of 200 ppm H₂ is recommended.
- 0.25 LPM fixed flow regulator
- Non-absorbent tubing
- Calibration cup
- 1. Confirm that the GasWatch 3's calibration gas value matches the concentration listed on the calibration gas cylinder as described on page 55.
- 2. Confirm that the regulator knob is turned all the way clockwise. Screw the 0.25 LPM fixed flow regulator onto the calibration cylinder.


3. Install the calibration cup onto the GasWatch 3. The calibration cup has an indicated flow direction. Be sure the calibration cup is installed in the correct direction and that it is pushed on all the way.

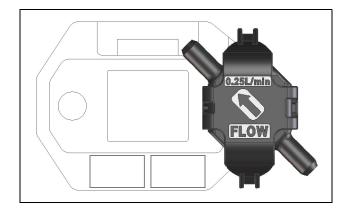

4. Use the tubing to connect the regulator to the inlet of the calibration cup.

Performing a Span Adjustment


1. While in User Mode, press AIR to scroll to GAS CAL.

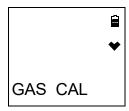


- 2. Press and release POWER/MODE. The **AIR** item appears.
- 3. Use AIR to scroll to the **A-CAL** item.



4. Press and release POWER/MODE. The display shows the gas assigned to Cylinder A and its assigned calibration value (see page 55 if the calibration value does not match the calibration gas cylinder's concentration). The bottom of the screen alternates between "CYL A" and "A-CAL".

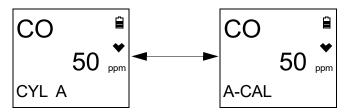

- 5. If necessary, use AIR to scroll to the Auto Cal screen for the gas you want to calibrate. As shipped from the factory, CO is assigned to Cylinder A and H₂ is assigned to Cylinder B.
- 6. Press and release POWER/MODE.
- 7. The gas reading flashes and the bottom of the screen alternates between "APPLY" and "A-CAL".

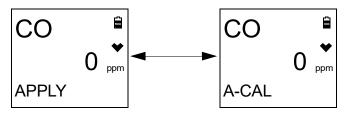

NOTE: To back out of the gas application screen without performing the calibration, press and release AIR and POWER/MODE together.

- 8. Turn the regulator knob counterclockwise to open the regulator.
- 9. Allow the gas to flow for 1 minute.
- 10. Press and release POWER/MODE.
- 11. The table on page 54 describes the 2 calibration outcomes.

Performing a Span Adjustment in E-CAL


The E-CAL item only appears if E-CAL in User Mode is set to **ON** (factory setting is **OFF**). If **E-CAL** is set to **OFF**, see page 48 for calibration instructions.

Preparing for Span Adjustment

To adjust the span on the GasWatch 3, you need:

- Calibration gas cylinder (RKI Instruments recommends using 50 ppm CO)
- If you are setting the H₂ response for the <u>H₂-compensated CO</u> sensor (which needs to be calibrated both monthly and after the sensor is replaced), a cylinder of 200 ppm H₂ is recommended.
- 0.25 LPM fixed flow regulator
- Non-absorbent tubing
- Calibration cup
- 1. Confirm that the GasWatch 3's calibration gas value matches the concentration listed on the calibration gas cylinder as described on page 55.
- 2. Confirm that the regulator knob is turned all the way clockwise. Screw the 0.25 LPM fixed flow regulator onto the calibration cylinder.


3. Install the calibration cup onto the GasWatch 3. The calibration cup has an indicated flow direction. Be sure the calibration cup is installed in the correct direction and that it is pushed on all the way.

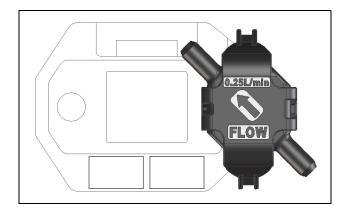

4. Use the tubing to connect the regulator to the inlet of the calibration cup.

Performing a Calibration


1. While in User Mode, press AIR to scroll to GAS CAL.

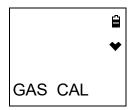


- 2. Press and release POWER/MODE. The **AIR** item appears.
- 3. Use AIR to scroll to the **E-CAL** item.



4. Press and release POWER/MODE. The display shows the gas assigned to Cylinder A and its assigned calibration value (see page 55 if the calibration value does not match the calibration gas cylinder's concentration). The bottom of the screen alternates between "CYL A" and "E-CAL".

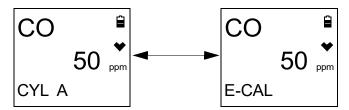


- 5. If necessary, use AIR to scroll to the Easy Cal screen for the gas you want to calibrate. As shipped from the factory, CO is assigned to Cylinder A and H₂ is assigned to Cylinder B.
- 6. Press and release POWER/MODE.
- 7. The gas reading flashes and the bottom of the screen says "GAS IN".

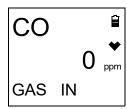

- 8. Turn the regulator knob counterclockwise to open the regulator.
- 9. Once the gas reading reaches 10% of the auto calibration value, the screen starts counting down from the time specified in the **E-CAL** User Mode item. In the example below, **E-CAL** is set to **60** seconds.

To back out of the gas application screen without performing the calibration, press and release AIR and POWER/MODE together.

If the reading never reaches 10% of the auto calibration value, press and release POWER/MODE to fail the calibration.

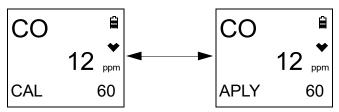

10. At the end of the countdown, the instrument makes the span adjustment.

11. The table below describes the 2 calibration outcomes.

Calibration Passed

1. The instrument indicates that the calibration passed.



2. The instrument shows the current gas reading.



3. If MAX.SPAN is set to ON (default is OFF, see page 100), the response reading's maximum adjustment is displayed. A maximum span of 100 ppm indicates that the reading could have been adjusted up to 100 ppm. If the maximum span value is close to the calibration gas value, the sensor should be replaced soon.

The maximum adjustment is either twice the calibration value or full scale, whichever is lower.



- 4. Close the regulator.
- 5. The instrument continues to the E-CAL CYL B screen.
- 6. If you are calibrating the H2 response, unscrew the regulator from the CO cylinder and screw it into the H2 cylinder.
- 7. Press and release POWER/MODE to start the H2 calibration.
- 8. Repeat Step 8 through Step 11.
- 9. After the H2 response is calibrated, the instrument continues to the START item in the E-CAL menu.
- 10. If you did not calibrate the H2 response, use AIR to scroll to the START item in the E-CAL menu.
- 11. Remove the calibration cup.
- 12. Press and release POWER/MODE to enter Measuring Mode.

Calibration Failed

1. The instrument indicates that the calibration failed.



- 2. Close the regulator.
- 3. Unscrew the regulator.
- 4. Remove the calibration cup.
- 5. Press and release POWER/MODE to return to the E-CAL CYL A screen in the E-CAL menu.
- 6. See "Troubleshooting" on page 75.

Calibration Passed

Calibration Failed

1. The instrument indicates that the calibration passed.



2. The instrument shows the current gas reading.



3. If MAX.SPAN is set to ON (default is OFF, see page 100), the response reading's maximum adjustment is displayed. A maximum span of 100 ppm indicates that the reading could have been adjusted up to 100 ppm. If the maximum span value is close to the calibration gas value, the sensor should be replaced soon.

The maximum adjustment is either twice the calibration value or full scale, whichever is lower.



- 4. Close the regulator.
- 5. The instrument continues to the **A-CAL CYL B** screen.
- 6. If you are calibrating the H₂ response, unscrew the regulator from the CO cylinder and screw it into the H₂ cylinder.
- 7. Press and release POWER/MODE to start the H₂ calibration.
- 8. Repeat Step 8 through Step 11.
- After the H₂ response is calibrated, the instrument continues to the START item in the A-CAL menu.
- If you did not calibrate the H₂ response, use AIR to scroll to the START item in the A-CAL menu.
- 11. Remove the calibration cup.
- 12. Press and release POWER/MODE to enter Measuring Mode.


1. The instrument indicates that the calibration failed.




- 2. Close the regulator.
- 3. Unscrew the regulator.
- 4. Remove the calibration cup.
- 5. Press and release POWER/MODE to return to the **A-CAL CYL A** screen in the **A-CAL** menu.
- 6. See "Troubleshooting" on page 75.

Setting the Calibration Values in CAL--P


1. While in User Mode, press AIR to scroll to GAS CAL.

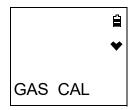


- 2. Press and release POWER/MODE. The AIR item appears.
- 3. Use AIR to scroll to the A-CAL item (E-CAL if E-CAL in User Mode is set to ON).

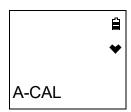


4. Press and release POWER/MODE. The Auto Cal screen for the gas assigned to Cylinder A displays.

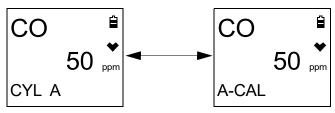


5. Use AIR to scroll to CAL--P.

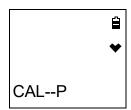


6. Press and release POWER/MODE. The gas name displays.

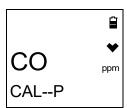

7. Use AIR to scroll to the gas whose calibration gas value you want to change.

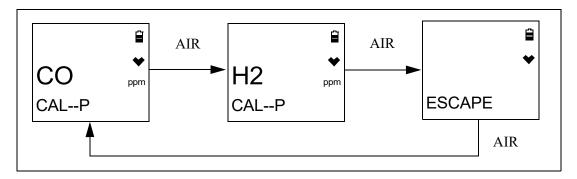

8. Press and release POWER/MODE. The calibration value begins to flash.

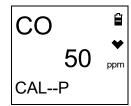


- 9. Use AIR to adjust the calibration gas value. The calibration gas value in the instrument must match the value listed on the calibration gas cylinder you are using.
- 10. Press and release POWER/MODE to save the change. The calibration gas value stops flashing and the unit returns to the gas name screen.
- 11. Repeat steps Step 7 Step 10 for the other channel, if necessary.
- 12. Use AIR to scroll to **ESCAPE**.
- 13. Press and release POWER/MODE to return to the CAL--P item in the A-CAL menu.
- 14. Press AIR to scroll to **ESCAPE**.
- 15. Press and release POWER/MODE to return to the A-CAL item in the GAS CAL menu.
- 16. See "Exiting the GAS CAL Menu" on page 58 to return to User Mode.


Making Cylinder Selections in CYL SEL

The **CYL SEL** menu item allows you to assign cylinders for calibration. As shipped from the factory, CO is assigned to Cylinder A and H₂ is assigned to Cylinder B. There are 5 cylinder assignments available: A, B, C, D, and E.


1. While in User Mode, press AIR to scroll to GAS CAL.

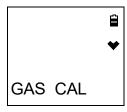

- 2. Press and release POWER/MODE. The AIR CAL menu item appears.
- 3. Use AIR to scroll to the A-CAL item (E-CAL if E-CAL in User Mode is set to ON).

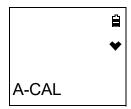

4. Press and release POWER/MODE. The Auto Cal screen for the gas assigned to Cylinder A displays.

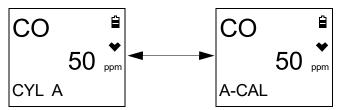


5. Use AIR to scroll to CYL SEL.




6. Press and release POWER/MODE. CO displays.



7. Use AIR to scroll to the gas whose cylinder assignment you want to change.

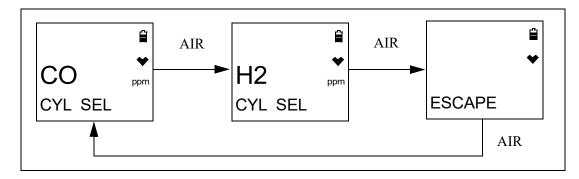

8. Press and release POWER/MODE. The current setting flashes. In the example below, CO is selected.

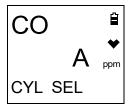

- 9. Use AIR to change the cylinder assignment. The choices are A, B, C, D, and E.
- 10. Press and release POWER/MODE to save the change. The cylinder assignment stops flashing and the unit returns to the gas selection screen.
- 11. Repeat steps Step 7 Step 10 for the other channel, if necessary.
- 12. Use AIR to scroll to **ESCAPE**.
- 13. Press and release POWER/MODE. The instrument returns to the **CYL SEL** menu item in the Auto Cal Menu.
- 14. Press AIR to scroll to **ESCAPE**.
- 15. Press and release POWER/MODE. The instrument returns to the **A-CAL** menu item in the **GAS CAL** menu.
- 16. See "Exiting the GAS CAL Menu" on page 58 to return to User Mode.

Exiting the GAS CAL Menu

- 1. While in the GAS CAL menu, press AIR to scroll to ESCAPE.
- 2. Press and release POWER/MODE to return to the GAS CAL item in User Mode.
- 3. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.


Setting Calibration Parameters (CAL SET)

The CAL SET menu has 4 items: CAL.RMDR, CAL.INT, CAL.EXPD, and ESCAPE.

1. While in User Mode, press AIR to scroll to CAL SET.



2. Press and release POWER/MODE. The **CAL.RMDR** item appears.

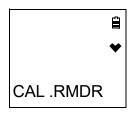


CAL.RMDR

<u>ON</u> (factory setting): The GasWatch 3 gives an indication at start up if it is due for calibration. The type of indication depends on the **CAL.EXPD** setting (see page 60).

OFF: The GasWatch 3 does not give an indication at start up if it is due for calibration.

1. After entering the CAL SET menu, press AIR to scroll to CAL.RMDR.

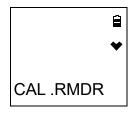


- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **CAL.RMDR** item in the **CAL SET** menu.
- 5. See "Exiting the CAL SET Menu" on page 60 to return to User Mode.

CAL.INT

This setting defines the amount of time between calibrations and can be set in 1 day increments. The minimum setting is 1 day and the maximum setting is 1000 days. The factory setting is 90 days.

1. After entering the CAL SET menu, press AIR to scroll to CAL.INT.

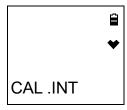

- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the CAL.INT item in the CAL SET menu.

5. See "Exiting the CAL SET Menu" on page 60 to return to User Mode.

CAL.EXPD

This item defines what indication is given during start up when calibration is due and CAL.RMDR is set to ON (factory setting).

<u>CONFIRM</u> (factory setting): The GasWatch 3 gives an indication at start up if calibration is past due. Press and release AIR to continue without calibrating or press and release POWER/MODE to enter User Mode and perform a calibration.

<u>CANT.USE</u>: The GasWatch 3 gives an indication at start up that calibration is past due. Press and release POWER/MODE to enter User Mode and perform a calibration. Pressing AIR has no effect. A successful calibration must be performed in order to use the instrument.

<u>NONE</u>: The GasWatch 3 gives an indication at startup that calibration is past due. It is not necessary to acknowledge the indication. If desired, press POWER/MODE to enter User Mode and perform a calibration. The warm-up sequence continues on its own.

1. After entering the CAL SET menu, press AIR to scroll to CAL.EXPD.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **CAL.EXPD** item in the **CAL SET** menu.
- 5. See "Exiting the CAL SET Menu" on page 60 to return to User Mode.

Exiting the CAL SET Menu

- 1. While in the CAL SET menu, press AIR to scroll to ESCAPE.
- 2. Press and release POWER/MODE to return to the CAL SET item in User Mode.
- 3. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.


Setting Bump Test Parameters (BUMP.SET)

The BUMP.SET menu has 5 items: SETTING, BP.RMDR, BP.INT, BP.EXPD, and ESCAPE.

1. While in User Mode, press AIR to scroll to **BUMP.SET**.




2. Press and release POWER/MODE. The **SETTING** item appears.

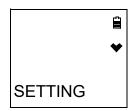

SETTING

The **SETTING** menu has 5 items: **GAS.TIME**, **CHECK**, **CAL.TIME**, **A-CAL**, and **ESCAPE**.

1. After entering the **BUMP.SET** menu, press AIR to scroll to **SETTING**.

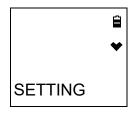


2. Press and release POWER/MODE. The **GAS.TIME** item appears.

GAS.TIME

The GAS.TIME is the amount of time that the instrument is exposed to gas during a bump test. The available choices are 30 seconds (factory setting), 45 seconds, 60 seconds, and 90 seconds.

1. After entering the **SETTING** menu, press AIR to scroll to **GAS.TIME**.

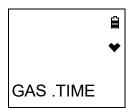


- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.

- 4. Press and release POWER/MODE to save the setting and return to the **GAS TIME** item in the **SETTING** menu.
- 5. See "Exiting the SETTING Menu" on page 63 to return to **BUMP.SET** menu.

CHECK

CHECK is the bump test tolerance value and is represented as a percentage of the calibration gas concentration. It is the percentage that the bump test reading can differ from the auto calibration value and still be considered a passed bump test. If the bump test reading differs more, the bump test fails. The available values are 10%, 20%, 30%, 40%, and 50% (factory setting).

1. After entering the **SETTING** menu, press AIR to scroll to **CHECK**.

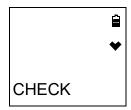

- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **CHECK** item in the **SETTING** menu.
- 5. See "Exiting the SETTING Menu" on page 63 to return to **BUMP.SET** menu.

CAL.TIME

The CAL.TIME is the total time the instrument is exposed to calibration gas if A-CAL is set to **ON** and a bump test fails. The bump test time is deducted from the calibration time. For example, if the CAL.TIME is set to 90 seconds and the GAS.TIME is set to 30 seconds, if the bump test fails, the GasWatch 3 is only exposed to gas for an additional 60 seconds. The available values are **90** seconds (factory setting), and **120** seconds.

1. After entering the **SETTING** menu, press AIR to scroll to **CAL.TIME**.




- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **CAL.TIME** item in the **SETTING** menu.
- 5. See "Exiting the SETTING Menu" on page 63 to return to **BUMP.SET** menu.

A-CAL

ON (factory setting): If a bump test fails, the unit automatically begins a calibration.

OFF: If a bump test fails, the unit does not automatically begin a calibration.

1. After entering the **SETTING** menu, press AIR to scroll to **A-CAL**.

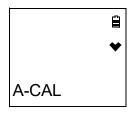

- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **A-CAL** item in the **SETTING** menu.
- 5. See "Exiting the SETTING Menu" on page 63 to return to **BUMP.SET** menu.

Exiting the SETTING Menu


- 1. While in the **SETTING** menu, press AIR to scroll to **ESCAPE**.
- 2. Press and release POWER/MODE to return to the **SETTING** item in the **BUMP.SET** menu.
- 3. See "Exiting the BUMP.SET Menu" on page 65 to return to User Mode.

BP.RMDR

<u>ON</u>: The GasWatch 3 gives an indication at start up if it is due for bump testing. The type of indication depends on the **BP.EXPD** setting (see page 64). If the instrument is not due for bump testing, a check mark appears in the lower left corner of the LCD.

OFF (factory setting): The GasWatch 3 does not give an indication at start up if it is due for bump testing.

1. After entering the **BUMP.SET** menu, press AIR to scroll to **BP.RMDR**.

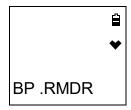


- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **BP.RMDR** item in the **BUMP.SET** menu.

5. See "Exiting the BUMP.SET Menu" on page 65 to return to User Mode.

BP.INT

This setting defines the amount of time between bump tests and can be set in 1 day increments. The minimum setting is **0** days and the maximum setting is **30** days (factory setting).

1. After entering the **BUMP.SET** menu, press AIR to scroll to **BP.INT**.

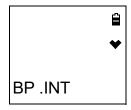

- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **BP.INT** item in the **BUMP.SET** menu.
- 5. See "Exiting the BUMP.SET Menu" on page 65 to return to User Mode.

BP.EXPD

This item defines what indication is given during start up when a bump test is due and **BP.RMDR** is set to **ON** (factory setting is **OFF**).

<u>CONFIRM</u> (factory setting): The GasWatch 3 gives an indication at start up if a bump test is past due. Press and release AIR to continue without bump testing or press and release POWER/MODE to enter User Mode and perform a bump test.

<u>CANT.USE</u>: The GasWatch 3 gives an indication at start up that a bump test is past due. Press and release POWER/MODE to enter User Mode and perform a bump test. Pressing AIR has no effect. A successful bump test must be performed in order to use the instrument.

<u>NONE</u>: The GasWatch 3 gives an indication at startup that a bump test is past due. It is not necessary to acknowledge the indication. If desired, press POWER/MODE to enter User Mode and perform a bump test. The warm-up sequence continues on its own.

1. After entering the **BUMP.SET** menu, press AIR to scroll to **BP.EXPD**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.

- 4. Press and release POWER/MODE to save the setting and return to the **BP.EXPD** item in the **BUMP.SET** menu.
- 5. See "Exiting the BUMP.SET Menu" on page 65 to return to User Mode.

Exiting the BUMP.SET Menu

- 1. While in the **BUMP.SET** menu, press AIR to scroll to **ESCAPE**.
- 2. Press and release POWER/MODE to return to the **BUMP.SET** item in User Mode.
- 3. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

Alarm Settings (ALARM--P)

The ALARM--P menu has 3 items: ALARM--P, DEF.ALMP, and ESCAPE.

1. While in User Mode, press AIR to scroll to ALARM--P.




2. Press and release POWER/MODE. The first screen displays.




Setting the Alarm Points

1. After entering the ALARM-P menu, press AIR to scroll to the gas name.

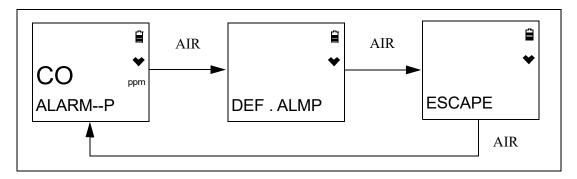

2. Press and release POWER/MODE.

3. The Warning setpoint flashes.

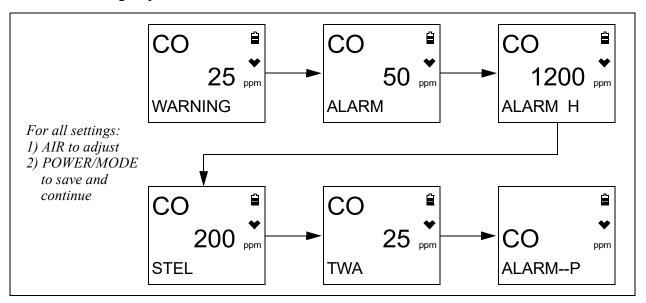

- 4. Use AIR to adjust the Warning setpoint. The alarm setpoint limitations are: $20 \text{ ppm} \le \text{WARNING} \le \text{ALARM} \le \text{ALARM} + \text{MeV} \le 2000 \text{ ppm}$.
- 5. Press and release POWER/MODE to save the setting.
- 6. Repeat Step 4 and Step 5 for the Alarm, Alarm H, STEL and TWA settings.
- 7. The instrument returns to the channel selection screen.
- 8. See "ESCAPE" on page 67 to return to User Mode.

Defaulting the Alarm Points

Defaulting the alarm points defaults them back to factory settings as outlined in Table 1 on page 8 or to the settings saved in the **SAVE-AP** item in Gas Select Mode if you performed a **SAVE-AP** operation.

1. After entering the ALARM-P menu, press AIR to scroll to **DEF.ALMP**.



- 2. Press POWER/MODE to enter the **DEF.ALMP** item.
- 3. Press POWER/MODE to perform an alarm default. Press AIR to return to the **DEF.ALMP** item in the **ALARM-P** menu.
- 4. The instrument asks if you're sure you want to default the alarm points.

- 5. Press POWER/MODE to default the alarm points. Press AIR to return to the **DEF.ALMP** item in the **ALARM-P** menu.
- 6. See "ESCAPE" on page 67 to return to User Mode.

ESCAPE


- 1. While in the ALARM-P menu, press AIR to scroll to ESCAPE.
- 2. Press and release POWER/MODE to return to the ALARM-P item in User Mode.
- 3. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

Updating the Lunch Break Setting (LUNCH)

OFF (factory setting): The GasWatch 3 automatically starts new TWA and PEAK reading collection and resets the time in operation at startup.

ON: The Lunch Break Screen displays during startup. From this screen, you can choose to continue accumulating TWA and PEAK readings and the time in operation from the last time the GasWatch 3 was used or start collecting new readings and reset the time in operation.

1. While in User Mode, press AIR to scroll to LUNCH.

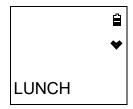


- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **LUNCH** item in User Mode.
- 5. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

Setting the Confirmation Beep and Non-Compliance Indicator (BEEP)

The BEEP menu has 3 items: BEEP.SEL, BEEP.INT, and ESCAPE.

1. While in User Mode, press AIR to scroll to **BEEP**.

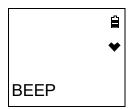

2. Press and release POWER/MODE. The **BEEP.SEL** item appears.



BEEP.SEL

BEEP.SEL defines what kind of confirmation or non-compliance indication you want to occur in Measuring Mode. The available choices are:

OFF (factory setting): The GasWatch 3 does not provide a confirmation alert or non-compliance indicator.

<u>**LED**</u>: The GasWatch 3's LEDs double flash as often as defined by the **BEEP.INT** parameter to verify that the instrument is operating.

BUZZER: The GasWatch 3's buzzer double beeps as often as defined by the **BEEP.INT** parameter to verify that the instrument is operating.

LED+BUZ: The GasWatch 3's LEDs double flash and the buzzer double beeps as often as defined by the **BEEP.INT** parameter to verify that the instrument is operating.

BMP/CAL: If a bump test or a calibration is due and if **BP.EXPD** or **CAL.EXPD** is set to **CONFIRM** (factory setting) or **NONE**, the GasWatch 3's LEDs double flash as often as defined by the **BEEP.INT** parameter to indicate a non-compliance. Once a bump test or calibration (depending on which is due) is done, the LEDs stop flashing.

1. While in the **BEEP** menu, press AIR to scroll to **BEEP.SEL**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **BEEP.SEL** item in the **BEEP** menu.
- 5. See "ESCAPE" on page 69 to return to User Mode.

BEEP.INT

The **BEEP.INT** parameter defines how often the confirmation alert or non-compliance indicator selected in **BEEP.SEL** occurs. This setting only applies if the **BEEP.SEL** parameter is set to something other than **OFF** (factory setting). The available choices are **0.5** minutes and **1-99** minutes in 1 minute increments. The factory setting is **5** minutes.

1. While in the **BEEP** menu, press AIR to scroll to **BEEP.INT**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **BEEP.INT** item in the **BEEP** menu.
- 5. See "ESCAPE" on page 69 to return to User Mode.

ESCAPE

- 1. While in the **BEEP** menu, press AIR to scroll to **ESCAPE**.
- 2. Press and release POWER/MODE to return to the **BEEP** item in User Mode.
- 3. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

Updating the Backlight Time (BL TIME)

This setting defines how long the LCD backlight stays on when you press any button. The minimum setting is **OFF**; the maximum setting is **255** seconds. The factory setting is **30** seconds.

1. While in User Mode, press AIR to scroll to **BL TIME**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **BL TIME** item in User Mode.
- 5. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

Turning the Key Tone On/Off (KEY.TONE)

ON (factory setting): The instrument beeps when a button is pressed.

OFF: The instrument does not beep when a button is pressed.

1. While in User Mode, press AIR to scroll to **KEY.TONE**.




- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **KEY.TONE** item in User Mode.
- 5. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

Display Mode Items (DISP.SET)

OFF: **USER ID**, **STN ID**, and **BUZZ.VOL** screens do not appear in Display Mode.

<u>ON</u> (factory setting): **BUZZ.VOL** screen appears in Display Mode. **USER ID** and **STN ID** screens appear in Display Mode if **ID DISP** in Maintenance Mode is also set to **ON** (factory setting is **OFF**).

1. While in User Mode, press AIR to scroll to **DISP.SET**.

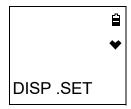

- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **DISP.SET** item in User Mode.
- 5. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

Zero Suppression (ZERO.SUP)

This item only appears if **ZSUP.DSP** is set to **ON** in Maintenance Mode (factory setting is **OFF**). The **ZERO.SUP** setting is not intended for field adjustment. The default setting is **ON**. The suppression value is 2 ppm.

Zero Follower (ZERO.FLW)


This item only appears if **ZFLW.DSP** is set to **ON** in Maintenance Mode (factory setting is **OFF**). The **ZERO.FLW** setting is not intended for field adjustment. The default setting is **ON**.

Turning Easy Calibration On/Off (E-CAL)

<u>OFF</u> (factory setting): Auto Calibration (A-CAL) item appears in GAS CAL menu instead of Easy Calibration (E-CAL).

<u>XX seconds</u>: Easy Calibration (E-CAL) item appears in GAS CAL menu instead of Auto Calibration (A-CAL). During a calibration, the instrument counts down from the number of seconds you select.


1. While in User Mode, press AIR to scroll to **E-CAL**.

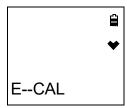

- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **E-CAL** item in User Mode.
- 5. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

Setting the Date/Time (DATE)

1. While in User Mode, place the cursor next to **DATE**.

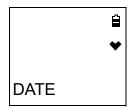

2. Press and release POWER/MODE. The date and time display with the year flashing.

- 3. Use AIR to display the desired year.
- 4. Press and release POWER/MODE to save the setting. The month setting flashes.


- 5. Repeat Step 3 and Step 4 to enter the month, day, hours, and minutes settings. The date and time are saved and the instrument returns to the **DATE** item in User Mode.
- 6. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

Turning the Password On/Off (PASS-W)

ON: The GasWatch 3 prompts you for a password when you enter User Mode. The factory-set password is **0405** but it can be changed.

OFF (factory setting): No password is required to enter User Mode.


1. While in User Mode, press AIR to scroll to PASS-W.

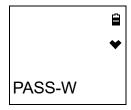

- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. If you selected **OFF**, press and release POWER/MODE to save the setting and return to the **PASS-W** item in User Mode.

If you selected **ON**, continue with Step 5.

5. Press and release POWER/MODE. The Set Password Screen appears. The current password appears and the first digit flashes.

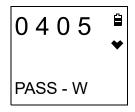


- 6. Use AIR to display a number from 0 to 9.
- 7. Press and release POWER/MODE to enter the selection and advance to the next number. To go back a number, press and hold AIR and POWER/MODE for a few seconds.
- 8. Repeat Step 6 and Step 7 to select the remaining numbers. When you press and release POWER/MODE to enter the last number, the password is saved and the instrument returns to the **PASS-W** item in User Mode.
- 9. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

Viewing the ROM/SUM (ROM/SUM)

The **ROM/SUM** screen shows the instrument's firmware version and firmware checksum.

1. While in User Mode, press AIR to scroll to **ROM/SUM**.

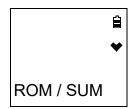

2. Press and release POWER/MODE. The screen cycles through the main board's ROM/SUM and the sensor board's ROM/SUM. The ROM is the top value and the SUM is the bottom value.



- 3. Press and release POWER/MODE to return to the **ROM/SUM** item in User Mode.
- 4. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

Entering Measuring Mode (START)

1. While in User Mode, press AIR to scroll to **START**.



2. Press and release POWER/MODE. The instrument begins its warmup sequence.

Chapter 6: Maintenance

Overview

This chapter describes troubleshooting procedures for the GasWatch 3. It also includes procedures for replacing the battery and replacing various consumable parts.

WARNING: RKI Instruments recommends that service, calibration, and repair of RKI gas detectors be performed by personnel properly trained for this work. Replacing the sensor and other parts with original equipment does not affect the intrinsic safety of the instrument.

AVERTISSEMENT: RKI Instruments recommande que le service, l'étalonnage et la réparation des détecteurs de gaz RKI soient effectués par du personnel dûment formé à ces travaux. Le remplacement du capteur et d'autres pièces par l'équipement d'origine n'affecte pas la sécurité intrinsèque de l'instrument.

Troubleshooting

The troubleshooting table describes error messages, symptoms, probable causes, and recommended action for problems you may encounter with the GasWatch 3.

Table 9: Troubleshooting the GasWatch 3

Symptoms	Probable Causes	Recommended Action
• The LCD is blank.	 The unit got turned off. The battery is inserted backwards. The battery needs to be replaced. The battery cover may not be completely closed. 	 To turn on the unit, press and briefly hold POWER/MODE. Reinstall the battery in the correct orientation. Replace the battery. Be sure the battery cover is completely closed and that the screw is tight. If the difficulties continue, contact RKI Instruments, Inc. for further instruction.

Table 9: Troubleshooting the GasWatch 3

Symptoms	Probable Causes	Recommended Action	
The LCD shows an abnormally high reading but other gas detection instruments do not.	 Charcoal filter needs to be replaced. The GasWatch 3 needs to be recalibrated. The sensor needs replacement. 	 Replace the charcoal filter. Recalibrate the unit. If the difficulties continue, replace the sensor and calibrate. If the difficulties continue, contact RKI Instruments, Inc. for further instruction. 	
Calibration fails.	 The calibration value does not match the cylinder gas concentration. The sample gas is not reaching the sensor because of a bad connection. The calibration cylinder is out of gas or is outdated. The sensor needs replacement. 	 Make sure the GasWatch 3 has been properly set up for calibration. Check all calibration tubing for leaks or for any bad connections. Verify that the calibration cylinder contains an adequate supply of fresh test sample. If the fail condition continues, replace the sensor. If the difficulties continue, contact RKI Instruments, Inc. for further instruction. 	
Heart symbol at the top of the screen becomes steadily on or disappears.	A microprocessor error has occurred.	Contact RKI Instruments, Inc. for further instruction.	

Replacing the Battery

WARNING: To prevent ignition of a hazardous atmosphere, battery must only be changed in an area known to be nonhazardous.

AVERTISSEMENT: Pour éviter l'inflammation d'une atmosphère dangereuse, la batterie ne doit être remplacée que dans une zone non dangereuse.

Replace the battery when the battery icon flashes and its lowest battery level indication bar disappears.

1. Make sure the GasWatch 3 is off.

2. For alligator clip versions, pry the base clip off so that it swings away from the instrument.

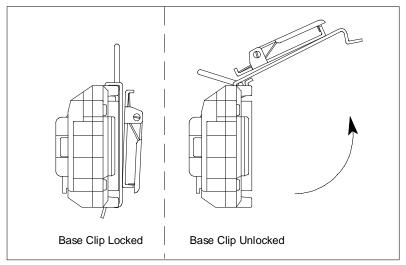


Figure 6: Releasing the Alligator Clip

3. Use a small Phillips screwdriver to unscrew the battery retainer's screw.

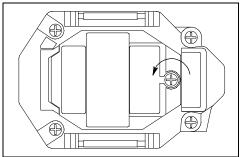


Figure 7: Removing the Battery Retainer

- 4. Remove the battery retainer.
- 5. Remove the old battery.

6. Install the new CR2450 button cell battery and reinstall the battery retainer and screw.

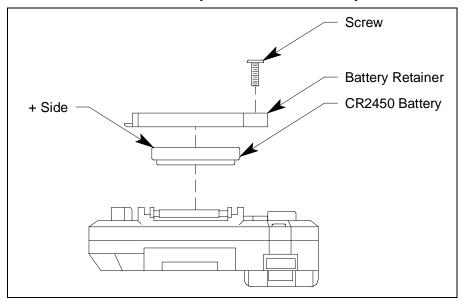


Figure 8: Installing a New Battery

7. If the instrument has been without batteries for more than 5 minutes, the date and time are reset and need to be set again. When the new batteries are installed, the instrument automatically turns on and displays the Date/Time Screen. Set the date and time as described on page 72. Once the date and time are set, the instrument begins its warmup sequence. If you do not set the date and time within 30 seconds, the instrument automatically begins its warmup sequence.

Replacing the Charcoal Filter

- 1. Verify that the GasWatch 3 is off.
- 2. Use a small Phillips screwdriver to unscrew the sensor retainer's screw.
- 3. Remove the sensor retainer.
- 4. The white hydrophobic filter and the sensor gasket should stay on the sensor.
- 5. Remove the white hydrophobic filter.
- 6. Remove the black charcoal filter from the center of the sensor gasket.

7. Install the new charcoal filter. It should be seated and recessed in the center of the sensor gasket.

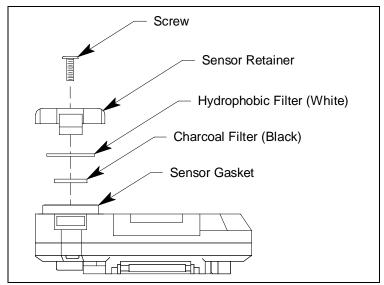


Figure 9: Replacing the Charcoal Filter

- 8. Reinstall the white hydrophobic filter. It should be seated and recessed in the sensor gasket and should not overlap the edge of the sensor gasket.
- 9. Reinstall the sensor retainer and tighten its screw.

Replacing the Hydrophobic Filter

- 1. Verify that the GasWatch 3 is off.
- 2. Use a small Phillips screwdriver to unscrew the sensor retainer's screw.
- 3. Remove the sensor retainer.
- 4. The hydrophobic filter and the sensor gasket should stay on the sensor.
- 5. Remove the old hydrophobic filter.

6. Install the new hydrophobic filter. It should be seated and recessed in the sensor gasket and should not overlap the edge of the sensor gasket.

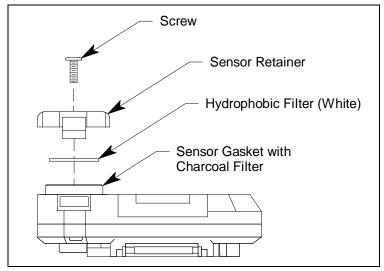


Figure 10: Replacing the Hydrophobic Filter

7. Reinstall the sensor retainer and tighten its screw.

Replacing the Sensor

- 1. Verify that the GasWatch 3 is off.
- 2. Use a small Phillips screwdriver to unscrew the sensor retainer's screw.
- 3. Remove the sensor retainer.

4. Remove the sensor gasket and filters. The filters may fall out. The sensor is exposed.

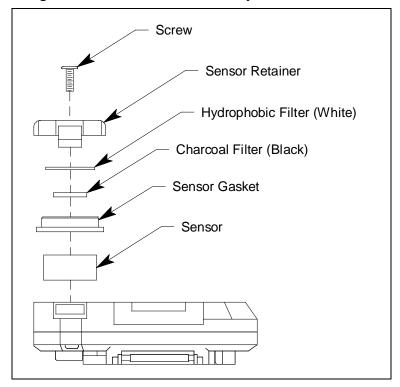


Figure 11: Replacing the Sensor

- 5. Remove the old sensor from its socket.
- 6. Carefully insert the replacement sensor. Be sure that the new sensor's orientation slots are aligned correctly. Do not force the sensor into its slot.
- 7. Reinstall the sensor gasket. Be sure to orient it as shown in Figure 11 above.
- 8. Reinstall the charcoal filter. It should be seated and recessed in the center of the sensor gasket.
- 9. Reinstall the hydrophobic filter. It should be seated and recessed in the sensor gasket and should not overlap the edge of the sensor gasket.
- 10. Reinstall the sensor retainer and tighten its screw.
- 11. Calibrate the CO and H₂ response as described on page 47.

Chapter 7: General Parts List

Table 10: General Parts List

Part Number	Description	
06-1248RK-03	Calibration kit tubing, 3 foot length	
07-0056	Sensor gasket	
10-1088	Screw, for sensor retainer and battery retainer	
13-0105RK	Watch band	
13-0126	Alligator clip	
13-0204RK	Pins for connecting watch band/alligator clip	
21-1955	Sensor retainer	
21-1956	Battery retainer	
33-0175	Hydrophobic filter	
33-7100	Charcoal filter disk, 5 pack, for CO sensor	
47-5084RK	USB/IrDA adapter module, Legasic, for use with all premier portables (without USB cable)	
47-5084RK-01	USB/IrDA adapter assembly, Legasic, for use with all premier portables (with module and USB cable)	
47-5085RK	Cable, USB A to USB mini, 6 feet, for 47-5084RK USB/IrDA adapter module	
49-1404RK	Battery, CR 2450 coin type	
71-0509	Operator's Manual, GasWatch 3 for CO(-H2) (this document)	
71-0514	Operator's Manual, GasWatch 3 Datalogging Program	
71-0515	Operator's Manual, GasWatch 3 Setup Program	
81-0000RK-71	Calibration cylinder, 500 ppm H ₂ in air, 34 liter steel	
81-0000RK-73	Calibration cylinder, 500 ppm H ₂ in air, 103 liter steel	
81-0064RK-01	Calibration cylinder, 50 ppm CO in air, 34 liter steel	
81-0064RK-03	Calibration cylinder, 50 ppm CO in air, 103 liter	
81-0076RK-01	Calibration cylinder, zero air, 34 liter steel	
81-0076RK-03	Calibration cylinder, zero air, 103 liter	
81-1050RK-25	Regulator, fixed flow, 0.25 LPM, with gauge and knob, for 17 liter and 34 liter steel cylinders (cylinders with external threads)	
81-1051RK-25	Regulator, fixed flow, 0.25 LPM, with gauge and knob, for 34 liter aluminum, 58 liter, and 103 liter cylinders (cylinders with internal threads)	
81-1194	Calibration cup	

Table 10: General Parts List (Continued)

Part Number	Description
81-GW3COH	Calibration kit: 103 liter cylinder of 50 ppm CO in N ₂ , 34 liter steel cylinder of 200 ppm H ₂ , regulator, tubing, calibration cup, case
81-GW3COH-LV	Calibration kit: 34 liter steel cylinder of 50 ppm CO in N ₂ , 34 liter steel cylinder of 200 ppm H ₂ , regulator, tubing, calibration cup, case
ESR-A1CP-CO-H	Hydrogen-compensated carbon monoxide (CO) sensor

Appendix A: Maintenance Mode

Overview

This appendix describes the GasWatch 3 in Maintenance Mode. The GasWatch 3 is factory-set to suit most applications. Update settings in Maintenance Mode only if required for your specific application. Maintenance Mode items and their factory settings are listed in Table 11 below.

Table 11: Maintenance Mode Menu Items

Maintenance Mode Menu Item	Description		
GAS CAL (page 87)	Perform an air adjust, perform a span adjustment, change the calibration values.		
	AIR	Perform a fresh air adjustment.	
	A-CAL or E-CAL depending on E-CAL User Mode setting	Perform a span adjustment and set the calibration gas concentration.	
		A-CAL (or E-CAL)	Perform an automatic span adjustment.
		START	Begin the warmup sequence and enter Measuring Mode.
		CAL-P	Set the calibration gas concentration.
		CYL SEL	Assign a cylinder (A-E) to each gas. CO is assigned to Cylinder A and H ₂ is assigned to Cylinder B by default.
		ESCAPE	Return to the A-CAL item in the GAS CAL menu.
	ESCAPE	Return to the GAS CAL item in Maintenance Mode.	
GAS.TEST (page 87)	Apply gas to test sensor response and observe alarm indications without an alarm event being recorded.		
SEN.DATE (page 89)	View and/or set the replacement date for the sensor and the battery.		
BUMP (page 89)	Perform a bump test.		
LATCH (page 90)	ON (factory setting): The GasWatch 3 remains in alarm until the alarm condition passes <i>and</i> POWER/MODE is pressed. OFF: The GasWatch 3 automatically resets an alarm when the alarm condition passes.		
D.ZERO (page 90)	ON (factory setting): You can manually perform a fresh air adjust in Measuring Mode by pressing AIR. OFF: You cannot manually perform a fresh air adjust in Measuring Mode by pressing AIR.		

Table 11: Maintenance Mode Menu Items


Maintenance Mode Menu Item	Description	
A.ZERO (page 91)	 ON: The GasWatch 3 asks if you want to perform a fresh air adjustment at the end of the startup sequence. OFF (factory setting): The GasWatch 3 does not ask if you want to perform a fresh air adjustment at the end of the startup sequence. 	
ID DISP (page 91)	ON: User ID and Station ID screens appear in startup sequence. IDs can be changed in Display Mode if DISP.SET in User Mode is also set to ON . OFF (factory setting): User ID and Station ID screens do not appear in startup sequence. IDs cannot be changed in Display Mode.	
ZERO.SUP (page 92)	ON (factory setting): Not intended for field adjustment. The suppression value is 2 ppm.	
ZERO.FLW (page 92)	ON (factory setting): Not intended for field adjustment.	
ZSUP.DSP (page 92)	ON: Zero suppression item appears in User Mode. OFF (factory setting): Zero suppression item does not appear in User Mode. (Zero suppression item is always available in Maintenance Mode)	
ZFLW.DSP (page 92)	ON: Zero follower item appears in User Mode. OFF (factory setting): Zero follower item does not appear in User Mode. (Zero follower item is always available in Maintenance Mode)	
CYL.DISP (page 92)	ON (factory setting): CYL SEL item appears in GAS CAL. OFF: CYL SEL item does not appear in GAS CAL. (RKI Instruments, Inc. does not recommend adjusting this setting.)	
DATE (page 92)	Set the current date and time.	
PASS-W (page 93)	ON (factory setting): Maintenance Mode is password-protected. Factory-set password is 3000 . OFF: Maintenance Mode is not password-protected.	
ROM/SUM (page 94)	View the firmware information for the GasWatch 3's sensor board and main board.	
M.DEF (page 95)	Set all parameters back to their RKI factory settings.	
START (page 96)	Press and release POWER/MODE to begin the warmup sequence and enter Measuring Mode.	

Entering Maintenance Mode


WARNING: The GasWatch 3 is not in operation as a gas detector while in Maintenance Mode.

- 1. Take the GasWatch 3 to a non-hazardous location and turn it off if it is on.
- 2. Press and hold AIR, then press and hold POWER/MODE. You will hear a beep after one second. Continue to hold the buttons down.
- 3. When you hear a second beep, release the buttons.
- 4. The screen that appears depends on the setting of Maintenance Mode's **PASS-W** item. If **PASS-W** is set to **OFF**, continue with Step 8.

If **PASS-W** is set to **ON** (factory setting), continue with Step 5.

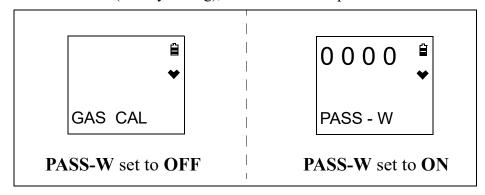

- 5. If **PASS-W** is set to **ON** in Maintenance Mode, a password screen appears and the first digit is flashing. The factory-set password is **3000** but it can be changed.
- 6. Use AIR to select each password number then press POWER/MODE to save it and move on to the next number. To go back a number, press and hold AIR and POWER/MODE for a few seconds. To reverse the direction of change (ie. from increasing to decreasing or vice versa):
 - a. Press and hold AIR.
 - b. Immediately press POWER/MODE and then release both buttons.
- 7. Continue to Step 6.
- 8. The **GAS CAL** item displays.

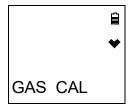

9. Use AIR to move through the Maintenance Mode items.

Tips for Using Maintenance Mode

- To scroll from one item to the next, press and release AIR. To reverse the scrolling direction:
 - a. Press and hold AIR.
 - b. Immediately press POWER/MODE and then release both buttons.
 - c. The scrolling direction returns to the original direction when you exit and reenter a menu.
- To skip an item when a question is asked, press and release AIR.
- To enter an item and to save any changes, press and release POWER/MODE.
- To change a flashing parameter, press and release AIR. To reverse the direction of change (i.e., from increasing to decreasing or vice versa):
 - a. Press and hold AIR.
 - b. Immediately press POWER/MODE and then release both buttons.
- To exit an entered item without saving a change, press and hold AIR and POWER/MODE for a few seconds.

Performing a Calibration (GAS CAL)

See page 47 for a description of the GAS CAL item.

Performing a Gas Test (GAS.TEST)

The GAS.TEST item allows you to apply gas to the instrument and see all alarm indications except for the buzzer indication. There is no buzzer indication in the GAS.TEST menu even though the buzzer sounds in the event of a real gas alarm condition while in Measuring Mode.


A gas test is not saved in logged data.

Preparing for a Gas Test

To perform a gas test on the GasWatch 3, you need:

- A calibration gas cylinder. The concentrations should be above the alarm condition you want to check. Standard alarm points are listed on page 8.
- A 0.25 LPM fixed flow regulator
- Non-absorbent tubing
- Calibration cup
- 1. Confirm that the regulator knob is turned all the way clockwise. Screw the 0.25 LPM fixed flow regulator onto the calibration cylinder.


2. Install the calibration cup onto the GasWatch 3. The calibration cup has an indicated flow direction. Be sure the calibration cup is installed in the correct direction and that it is pushed on all the way.

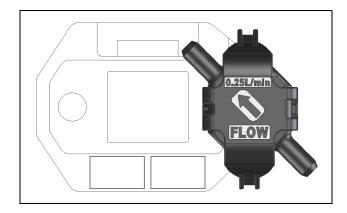


3. Use the tubing to connect the regulator to the inlet of the calibration cup.

Performing a Gas Test

1. While in Maintenance Mode, press AIR to scroll to **GAS.TEST**.

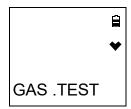

2. Press and release POWER/MODE. The current gas reading displays. The bottom of the LCD alternates between "GAS.TEST" and "BUZZ.OFF".

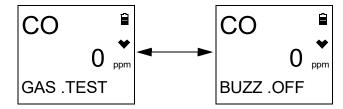


- 3. Turn the regulator knob counterclockwise to open the regulator.
- 4. The instrument initiates alarm indications <u>except</u> for the buzzer. There is no buzzer indication in the **GAS.TEST** menu even though the buzzer sounds in the event of a real gas alarm condition.
- 5. Turn the regulator knob clockwise to close the regulator.
- 6. Unscrew the regulator from the calibration cylinder.
- 7. Remove the calibration cup from the GasWatch 3.
- 8. Store the calibration kit in a safe and convenient place.

- 9. Press and release POWER/MODE to return to the GAS.TEST item in Maintenance Mode.
- 10. See "Entering Measuring Mode (START)" on page 96 to enter Measuring Mode.


Sensor/Battery Replacement Date (SEN.DATE)

The **SEN.DATE** item allows you to keep track of when the sensor and the battery were replaced.

1. While in Maintenance Mode, press AIR to scroll to **SEN.DATE**.

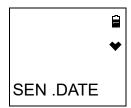

- 2. Press and release POWER/MODE. The sensor replacement date displays.
- 3. Use AIR to scroll to the item whose replacement date you want to view or change.

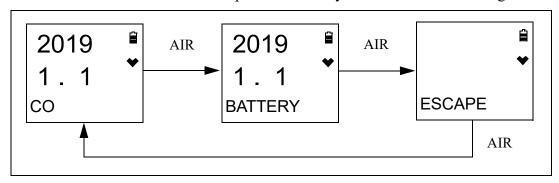

- 4. To change the replacement date:
 - a. With the desired item displayed, press and release POWER/MODE.
 - b. Press and release POWER/MODE again to set the replacement date to the current date.
- 5. Use the AIR button to scroll to **ESCAPE**.
- 6. Press and release POWER/MODE to return to the **SEN.DATE** item in Maintenance Mode.
- 7. See "Entering Measuring Mode (START)" on page 96 to enter Measuring Mode.

Performing a Bump Test (BUMP)

See "Performing a Bump Test (BUMP)" on page 42 for a description of the **BUMP** item.

Setting Alarms to Latching or Self-Resetting (LATCH)

ON (factory setting): The GasWatch 3 remains in alarm until the alarm condition passes *and* POWER/MODE is pressed.

OFF: The GasWatch 3 automatically resets an alarm when the alarm condition passes.

1. While in Maintenance Mode, press AIR to scroll to LATCH.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **LATCH** item in Maintenance Mode.
- 5. See "Entering Measuring Mode (START)" on page 96 to enter Measuring Mode.

Turning the Demand Zero Function On/Off (D.ZERO)

ON (factory setting): You can manually perform a fresh air adjust in Measuring Mode by pressing AIR.

OFF: You cannot manually perform a fresh air adjust in Measuring Mode.

1. While in Maintenance Mode, press AIR to scroll to **D.ZERO**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **D.ZERO** item in Maintenance Mode.
- 5. See "Entering Measuring Mode (START)" on page 96 to enter Measuring Mode.

Turning the Auto Zero Function On/Off (A.ZERO)

ON: The GasWatch 3 asks if you want to perform a fresh air adjustment at the end of the startup sequence.

OFF (factory setting): The GasWatch 3 does not ask if you want to perform a fresh air adjustment at the end of the startup sequence.

1. While in Maintenance Mode, press AIR to scroll to **A.ZERO**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **A.ZERO** item in Maintenance Mode.
- 5. See "Entering Measuring Mode (START)" on page 96 to enter Measuring Mode.

Turning the ID Display Function On/Off (ID DISP)

<u>ON</u>: The User ID and Station ID screens appear in the startup sequence. If **DISP.SET** in User Mode is also set to **ON**, then the IDs can be changed in Display Mode.

OFF (factory setting): The User ID and Station ID screens do not appear in the startup sequence and the IDs cannot be changed in Display Mode.

1. While in Maintenance Mode, press AIR to scroll to **ID DISP**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **ID DISP** item in Maintenance Mode.
- 5. See "Entering Measuring Mode (START)" on page 96 to enter Measuring Mode.

Turning the Zero Suppression On/Off (ZERO.SUP)

The **ZERO.SUP** setting is not intended for field adjustment. The default setting is **ON**. The suppression value is 2 ppm.

Turning the Zero Follower On/Off (ZERO.FLW)

The **ZERO.FLW** setting is not intended for field adjustment. The default setting is **ON**.

User Mode Zero Suppression (ZSUP.DSP)

ON: Zero suppression item appears in User Mode.

OFF (factory setting): Zero suppression item does not appear in User Mode. The zero suppression item is always available in Maintenance Mode.

It is not normally necessary to have the zero suppression item appear in User Mode. Contact RKI Instruments before turning this setting on.

User Mode Zero Follower (ZFLW.DSP)

ON: Zero follower item appears in User Mode.

OFF (factory setting): Zero follower item does not appear in User Mode. The zero follower item is always available in Maintenance Mode.


It is not normally necessary to have the zero follower item appear in User Mode. Contact RKI Instruments before turning this setting on.

Cylinder Setting (CYL.DISP)

<u>ON</u> (factory setting): CYL SEL item appears in User and Maintenance Modes' GAS CAL item. <u>OFF</u>: CYL SEL item does not appear in User and Maintenance Modes' GAS CAL item.

Setting the Date/Time (DATE)

1. From the main menu, place the cursor next to **DATE**.

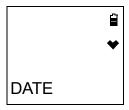

2. Press and release POWER/MODE. The date and time display with the year flashing.




- 3. Use AIR to display the desired year.
- 4. Press and release POWER/MODE to save the setting. The month setting flashes.
- 5. Repeat Step 3 and Step 4 to enter the month, day, hours, and minutes settings. The date and time are saved and the instrument returns to the **DATE** item in Maintenance Mode.
- 6. See "Entering Measuring Mode (START)" on page 96 to enter Measuring Mode.

Turning the Password On/Off (PASS-W)

ON (factory setting): The GasWatch 3 prompts you for a password when you enter Maintenance Mode. The factory-set password is **3000** but it can be changed.

OFF: No password is required to enter Maintenance Mode.

1. While in Maintenance Mode, press AIR to scroll to PASS-W.

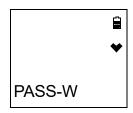


- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.

4. If you selected **OFF**, press and release POWER/MODE to save the setting and return to the **PASS-W** item in User Mode.

If you selected **ON**, continue with Step 5.

5. Press and release POWER/MODE. The Set Password Screen appears. The current password displays and the first digit flashes.

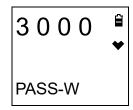

- 6. Use AIR to display a number from 0 to 9.
- 7. Press and release POWER/MODE to enter the selection and advance to the next number. To go back a number, press and hold AIR and POWER/MODE for a few seconds.
- 8. Repeat Step 6 and Step 7 to select the remaining numbers. When you press and release POWER/MODE to enter the last number, the password is saved and the instrument returns to the **PASSWORD** item in Maintenance Mode.
- 9. See "Entering Measuring Mode (START)" on page 96 to enter Measuring Mode.

Viewing the ROM/SUM (ROM/SUM)

The **ROM/SUM** screen shows the instrument's firmware version and firmware checksum.

1. While in Maintenance Mode, press AIR to scroll to **ROM/SUM**.



2. Press and release POWER/MODE. The screen cycles through the main board's ROM/SUM and the sensor board's ROM/SUM. The ROM is the top value and the SUM is the bottom value.




3. Press and release POWER/MODE to return to the **ROM/SUM** item in Maintenance Mode.

4. See "Entering Measuring Mode (START)" on page 96 to enter Measuring Mode.


Performing a Default (M.DEF)

Performing a default operation in Maintenance Mode returns all parameters to their RKI factory settings.


1. While in Maintenance Mode, press AIR to scroll to **M.DEF**.

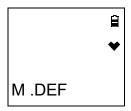

2. Press and release POWER/MODE.

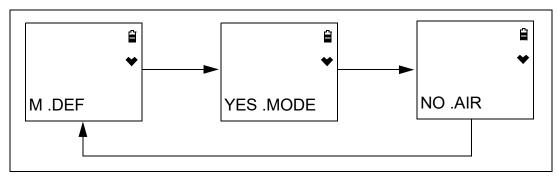


3. Press and release POWER/MODE to perform a default operation. The instrument asks if you are sure you want to perform a default operation.

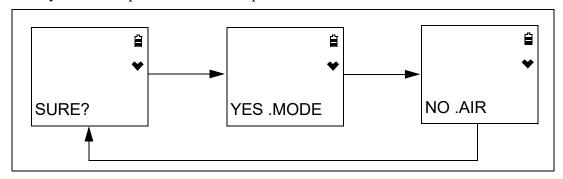

- 4. Press and release POWER/MODE to perform a default operation. The instrument beeps twice and returns to the **M.DEF** item in Maintenance Mode.
- 5. See "Entering Measuring Mode (START)" on page 96 to enter Measuring Mode.

Entering Measuring Mode (START)

1. While in Maintenance Mode, press AIR to scroll to **START**.

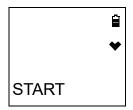

2. Press and release POWER/MODE. The instrument begins its warmup sequence.

Appendix B: Gas Select Mode

Overview

This appendix describes the GasWatch 3 in Gas Select Mode. The GasWatch 3 is factory-set to suit most applications. Update settings in Gas Select Mode only if required for your specific application. A description of the Gas Select Mode items is shown in Table 12 below.


Menu Item (Page # of **Description Description**) SAVE-AP (page 99) Set the current alarm points as the default alarm points. MAX SPAN (page 100) **ON**: Maximum span screen appears after a successful calibration. **OFF** (factory setting): No maximum span screen appears. **STEALTH ON**: No backlight, LED, or buzzer operation. STEALTH (page 100) STEALTH OFF (factory setting): Backlight, LED, and buzzer operate normally. This setting has no effect unless **STEALTH** is set to **ON**. VIB ON: Vibrator activates for alarm conditions. VIB OFF (factory setting): Vibrator does not activate in any situation. START (page 101) Enter Measuring Mode

Table 12: Gas Select Mode Menu Items


Entering Gas Select Mode

WARNING: The GasWatch 3 is not in operation as a gas detector while in Gas Select Mode.

- 1. Take the GasWatch 3 to a non-hazardous location and turn it off if it is on.
- 2. Press and hold AIR, then press and hold POWER/MODE. You will hear a beep after one second. Continue to hold the buttons down.
- 3. You will hear a second beep. Continue to hold the buttons down.
- 4. When you hear a third beep, release the buttons.
- 5. A password screen appears and the first digit flashes. The password is 2014.

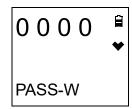

- 6. Use AIR to select each password number then press POWER/MODE to save it and move on to the next number. To go back a number, press and hold AIR and POWER/MODE for a few seconds.
- 7. The **SAVE-AP** item displays.

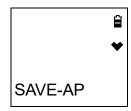

8. Use AIR to move through the Gas Select Mode items.

Tips for Using Gas Select Mode

- To scroll from one item to the next, press and release AIR. To reverse the scrolling direction:
 - a. Press and hold AIR.
 - b. Immediately press POWER/MODE and then release both buttons.
 - c. The scrolling direction returns to the original direction when you exit and reenter a menu.
- To skip an item when a question is asked, press and release AIR.
- To enter an item and to save any changes, press and release POWER/MODE.
- To change a flashing parameter, press and release AIR. To reverse the direction of change (i.e. from increasing to decreasing or vice versa):
 - a. Press and hold AIR.
 - b. Immediately press POWER/MODE and then release both buttons.
- To exit an entered item without saving a change, press and hold AIR and POWER/MODE for a few seconds.

Saving the Alarm Points (SAVE-AP)

Performing a SAVE-AP operation saves the current alarm setpoints.


Performing a **DEF.ALMP** operation in the **ALARM-P** User Mode menu sets the instrument's alarm points to those saved during the **SAVE-AP** operation (if performed).

Performing a **SAVE-AP** has no effect on an **M.DEF** in Maintenance Mode. An **M.DEF** operation returns all instrument settings to the RKI default regardless of if a **SAVE-AP** operation was performed.

1. While in Gas Select Mode, press AIR to scroll to SAVE-AP.



2. Press and release POWER/MODE. The display cycles through the following screens.

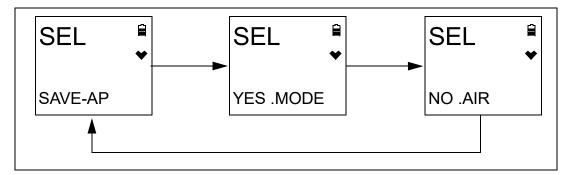


- 3. Press and release POWER/MODE to save the current alarm point settings as the default.
- 4. The instrument returns to the **SAVE-AP** item in Gas Select Mode.
- 5. See "Exiting Gas Select Mode (START)" on page 101 to enter Measuring Mode.

Turning Calibration Max Span On/Off (MAX.SPAN)

<u>ON</u>: After a passed calibration, the GasWatch 3 displays the response reading's maximum adjustment. A maximum span of 100 ppm indicates that the reading could have been adjusted up to 100 ppm. If the maximum span value is close to the calibration value, the sensor should be replaced soon. The upper limit on the maximum adjustment indicated is either twice the calibration value or full scale, whichever is lower.

OFF (factory setting): There is no maximum span indication at the end of a calibration.

1. While in Gas Select Mode, press AIR to scroll to MAX.SPAN.

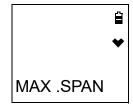

- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **MAX.SPAN** item in Gas Select Mode.
- 5. See "Exiting Gas Select Mode (START)" on page 101 to enter Measuring Mode.

Stealth and Vibrator Settings (STEALTH)

STEALTH

ON:

- The instrument's backlight does not come on, regardless of the **BL TIME** setting.
- The instrument's LEDs do not come on for any reason, even alarm conditions.
- The instrument's buzzer does not sound for any reason, even alarm conditions.
- An "S" appears at the bottom of the LCD.

OFF (factory setting): The instrument's backlight, LEDs, and buzzer operate normally.

VIB

The VIB setting only affects instrument operation if STEALTH is set to ON.

ON: The vibrator activates for alarm conditions. It can be useful to have this feature turned on if you have also turned **STEALTH** on.

OFF (factory setting): The vibrator does not activate for any reason.

1. While in Gas Select Mode, press AIR to scroll to **STEALTH**.



- 2. Press and release POWER/MODE. The current **STEALTH** setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE. The current **VIB** setting flashes.
- 5. Use AIR to display the desired setting.
- 6. Press and release POWER/MODE to save the setting and return to the **STEALTH** item in Gas Select Mode.
- 7. See "Exiting Gas Select Mode (START)" on page 101 to enter Measuring Mode.

Exiting Gas Select Mode (START)

1. While in Gas Select Mode, press AIR to scroll to **START**.



2. Press and release POWER/MODE. The instrument begins its warm-up sequence.

Warranty

RKI Instruments, Inc. warrants the GasWatch 3 sold by us to be free from defects in materials, workmanship, and performance for a period of three years from the date of shipment from RKI Instruments, Inc. This includes the instrument and the original sensor. Replacement parts are warranted for 1 year from the date of their shipment from RKI Instruments, Inc. except for replacement sensors which are warranted for 3 years. Any parts found defective within their warranty period will be repaired or replaced, at our option, free of charge. This warranty does not apply to those items which by their nature are subject to deterioration or consumption in normal service, and which must be cleaned, repaired, or replaced on a routine basis. Examples of such items are:

- Absorbent cartridges
- Filter elements, disks, or sheets
- Pump diaphragms and valves

Warranty is voided by abuse including mechanical damage, alteration, rough handling, or repair procedures not in accordance with the instruction manual. This warranty indicates the full extent of our liability, and we are not responsible for removal or replacement costs, local repair costs, transportation costs, or contingent expenses incurred without our prior approval.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY AND ALL OTHER WARRANTIES AND REPRESENTATIONS, EXPRESSED OR IMPLIED, AND ALL OTHER OBLIGATIONS OR LIABILITIES ON THE PART OF RKI INSTRUMENTS, INC. INCLUDING BUT NOT LIMITED TO THE WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL RKI INSTRUMENTS, INC. BE LIABLE FOR INDIRECT, INCIDENTAL, OR CONSEQUENTIAL LOSS OR DAMAGE OF ANY KIND CONNECTED WITH THE USE OF ITS PRODUCTS OR FAILURE OF ITS PRODUCTS TO FUNCTION OR OPERATE PROPERLY.

This warranty covers instruments and parts sold to users only by authorized distributors, dealers, and representatives as appointed by RKI Instruments, Inc.

We do not assume indemnification for any accident or damage caused by the operation of this gas monitor and our warranty is limited to replacement of parts or our complete goods.