

# GasWatch 3 for Carbon Monoxide and Oxygen Operator's Manual

**Part Number: 71-0513** 

Revision: 0

Released: 12/27/22

# **WARNING**

Read and understand this instruction manual before operating instrument. Improper use of the gas monitor could result in bodily harm or death.

Maintenance of the gas monitor is essential for proper operation and correct readings.

Bump test the instrument before each day's use with a known concentration of each target gas. A bump test can be done in User Mode's BUMP item or by applying gas in Measuring Mode. The instrument does not need to be calibrated unless it does not pass the User Mode bump test or does not respond appropriately, as defined by the user, in Measuring Mode. For more information about bump test and calibration requirements, see IEC 60079-29-2.

# **Table of Contents**

Chapter 1: Introduction	6
Overview	6
About the GasWatch 3	
Specifications	
About this Manual	
Chapter 2: Description	Q
Overview	
Instrument Description	
Case	
LCD	
Control Buttons	
Alarm LEDs	
Buzzer	
Vibrator	
Sensor	
Filters	
Infrared Communications Port	
Battery	
Standard Accessories	
Alligator Clip	
Optional Accessories	
Watch Band	
Calibration Cup	
IrDA/USB Cable	
Chapter 3: Measuring Mode	14
Overview	
Start Up	
Turning On the GasWatch 3	
Performing a Demand Zero	
Turning Off the GasWatch 3	
Measuring Mode Operation	
Monitoring an Area	
Alarms	
Alarm Indications	
Responding to Alarms	
Data Logging	
Chapter 4: Display Mode	27
Tips for Using Display Mode	27
Gas Name Screen	
Peak Screen (PEAK)	
STEL Screen (STEL)	

TWA Screen (TWA)	29
User ID Screen (USER ID)	
Station ID Screen (STN ID)	
Last Successful Calibration Date (CAL.DATA)	
Last Successful Bump Test Screen (BP.DATA)	
Date/Time Screen (DATE)	
Temperature Screen (TEMP)	
Alarm Points Screen (ALARMP)	
Adjusting the Buzzer Volume (BUZZ.VOL)	
Chapter 5: User Mode and Calibration	35
•	
Overview	
Entering User Mode	
Tips for Using User Mode	
Performing a Bump Test (BUMP)	
Performing a Calibration (GAS CAL)	
Setting Calibration Parameters (CAL SET)	
Setting Bump Test Parameters (BUMP.SET)	
Alarm Settings (ALARMP)	
Updating the Lunch Break Setting (LUNCH)	
Setting the Confirmation Beep and Non-Compliance Indicator (BEEP)	
Updating the Backlight Time (BL TIME)	
Turning the Key Tone On/Off (KEY.TONE)	
Display Mode Items (DISP.SET)	
Zero Suppression (ZERO.SUP)	71
Zero Follower (ZERO.FLW)	71
Turning Easy Calibration On/Off (E-CAL)	71
Setting the Date/Time (DATE)	72
Turning the Password On/Off (PASS-W)	72
Viewing the ROM/SUM (ROM/SUM)	73
Entering Measuring Mode (START)	74
Chapter 6: Maintenance	75
Overview	75
Troubleshooting	
Replacing the Battery	
Replacing the Charcoal Filter	
Replacing the Hydrophobic Filter	
Replacing the Sensor	
Chapter 7: General Parts List	80
Appendix A: Maintenance Mode	82
Overview	
Entering Maintenance Mode	
Tips for Using Maintenance Mode	
Performing a Gas Test (GAS TEST)	
Performing a Gas Test (GAS THST)	25

Sensor/Battery Re	eplacement Date (SEN.DATE)	86
Performing a Bun	np Test (BUMP)	87
Setting Alarms to	Latching or Self-Resetting (LATCH)	87
Turning the Dema	and Zero Function On/Off (D.ZERO)	88
	Zero Function On/Off (A.ZERO)	
Turning the ID Di	isplay Function On/Off (ID DISP)	89
	Suppression On/Off (ZERO.SUP)	
	Follower On/Off (ZERO.FLW)	
	Suppression (ZSUP.DSP)	
	Follower (ZFLW.DSP)	
	(CYL.DISP)	
	Γime (DATÉ)	
	word On/Off (PASS-W)	
	//SUM (ROM/SUM)	
Performing a Defa	ault (M.DEF)	92
	ng Mode (START)	
Appendix B: Gas Sel	lect Mode	94
Overview		94
	ect Mode	
	as Select Mode	
	Points (SAVE-AP)	
	oration Max Span On/Off (MAX.SPAN)	
	tor Settings (STEALTH)	
	et Mode (START)	
Warranty	• • • • • • • • • • • • • • • • • • • •	98
WARNING:	Understand manual before operating. This is an intrinsically	safe produ
manua.	Substitution of components may impair intrinsic safety. To pr	<i>u</i>
	of a hazardous atmosphere, batteries must only be changed o	
	an area known to be nonhazardous. Not tested in oxygen enr	-

AVERTISSEMENT: Comprendre le manuel avant de l'utiliser. Ceci est un produit intrinsèquement sûr. La substitution de composants peut nuire à la sécurité intrinsèque. Pour éviter l'inflammation d'une atmosphère dangereuse, les batteries ne doivent être remplacées ou chargées que dans une zone non dangereuse. Non testé dans des atmosphères enrichies en oxygène (plus de 21%).

atmospheres (above 21%).

# **Chapter 1: Introduction**

#### **Overview**

This chapter briefly describes the GasWatch 3 gas monitor. This chapter also describes the GasWatch 3 Operator's Manual (this document). Table 1 at the end of this chapter lists the specifications for the GasWatch 3.

# **About the GasWatch 3**

Using an advanced detection system, the GasWatch 3 personal gas monitor detects the presence of carbon monoxide (CO) and oxygen (O<sub>2</sub>). The GasWatch 3's compact size and easy-to-use design make it ideally suited for a wide range of applications, including sewage treatment plants, utility manholes, tunnels, hazardous waste sites, power stations, petrochemical refineries, mines, paper mills, drilling rigs, and fire fighting stations. The GasWatch 3 offers a full range of features, including:

- Liquid crystal display (LCD) for complete and understandable information at a glance
- Ultrabright alarm LEDs
- Distinctive audible/vibrating alarms for dangerous gas conditions and audible alarms for unit malfunction
- Microprocessor control for reliability, ease of use, and advanced capabilities
- Data logging functions
- Alarm trend data
- STEL (for CO only), TWA (for CO only), and over range alarms
- Peak reading
- Built-in time function
- Lunch break feature
- CSA "C/US" classification for Class I, Division I, Groups A, B, C, and D hazardous atmospheres

#### **WARNING:**

The Model GasWatch 3 detects oxygen deficiency and elevated levels of oxygen and carbon monoxide which can be dangerous or life threatening. When using the GasWatch 3, you must follow the instructions and warnings in this manual to assure proper and safe operation of the unit and to minimize the risk of personal injury. Be sure to maintain and periodically calibrate the GasWatch 3 as described in this manual.

AVERTISSEMENT:Le modèle GasWatch 3 détecte un manque d'oxygène et des niveaux élevés d'oxygène et de monoxyde de carbone qui peuvent être dangereux ou mettre la vie en danger. Lorsque vous utilisez le GasWatch 3, vous devez suivre les instructions et les avertissements de ce manuel pour assurer un fonctionnement correct et en toute sécurité de l'appareil et pour réduire les risques de blessures. Assurez-vous de maintenir et d'étalonner périodiquement le GasWatch 3 comme décrit dans ce manuel.

# **Specifications**

**Table 1: Standard Sensor Specifications/Alarm Points** 

	Carbon Monoxide (CO)	Oxygen (O <sub>2</sub> )
<b>Detection Range</b>	0 - 2,000 ppm	0 - 40.0% volume
Lowest Detectable Limit (LDL)	3 ppm	n/a
Reading Increment	0 - 300 ppm: 1 ppm 310 - 2,000 ppm: 10 ppm	0.1% volume
Warning Factory Setting	25 ppm	19.5% volume, decreasing
Alarm Factory Setting	50 ppm	18.0% volume, decreasing
Alarm H Factory Setting	1,200 ppm	23.5% volume, increasing
STEL Alarm	200 ppm	n/a
TWA Alarm	25 ppm	n/a

**Table 2: GasWatch 3 Specifications** 

Sampling Method	Diffusion	
Response Time	T90 Within 10 Seconds	
Display	Graphics LCD Display	
Operating Temperature & Humidity	<b>Continuous environment</b> : -20°C to 50°C/10 to 90% RH <b>Temporary environment (up to 15 minutes)</b> : -20°C to 60°C/0 to 95% RH	
Safety/ Regulatory	<ul> <li>ATEX: II 1G Ex ia IIC T4 Ga Certificate Number Presafe DEKRA 18ATEX0130</li> <li>IECEx: Ex ia IIC T4 Ga Certificate Number IECEx DEK 18.0082</li> <li>CSA classified, "C/US", as Intrinsically Safe. Exia. Class I, Groups A, B, C, &amp; D. Temperature Code T3A. Certificate Number CSA 19 CA70213062</li> </ul>	
Power Supply	CR2450 button cell battery	
Continuous Operating Hours @ 25 °C	2,000 hours in Measuring Mode (Non Alarm Operation, Fully Charged)	
Case	High-impact Plastic, RF Shielded, Dust and Weather Proof (IP66/68)	

Standard Accessories	Alligator clip
Optional Accessories	<ul> <li>Watch band</li> <li>Calibration cup</li> <li>Datalogging and Setup Programs (Windows® 7, 8, and 10), available at www.rkiinstruments.com/gw3</li> <li>IrDA/USB Cable for connecting to a computer when using the Datalogging and Setup Programs (not needed if computer has an infrared port)</li> </ul>
Dimensions and Weight	Approximately 42(H) x 63(W) x 22(D) mm (1.7"H x 2.5"W x 0.9"D)  Approximately 45 g (1.6 oz.)

# **About this Manual**

The GasWatch 3 Operator's Manual uses the following conventions for notes, cautions, and warnings.

**NOTE:** Describes additional or critical information.

**CAUTION:** Describes potential damage to equipment.


WARNING: Describes potential danger that can result in injury or death.

# **Chapter 2: Description**

# **Overview**

This chapter describes the GasWatch 3 instrument and its accessories.

# **Instrument Description**

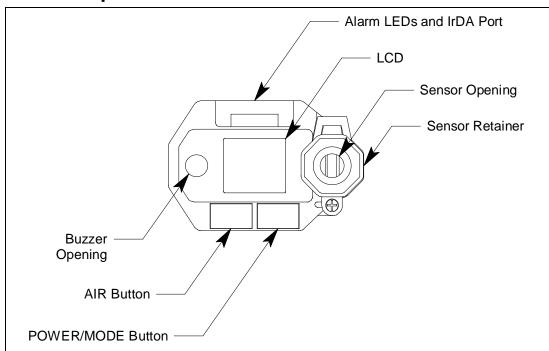

**Figure 1: Component Location** 

#### Case

The GasWatch 3's sturdy, high-impact plastic case is radio frequency (RF) resistant and is suitable for use in many environmental conditions, indoors and out. The case is dust proof and water resistant. A clear plastic window is located on the front of the case for viewing the LCD. The sensor retainer is located on the right side of the case and allows access to the filters and sensor.

#### LCD

A digital LCD (liquid crystal display) is visible through a clear plastic window in the top case. The LCD shows the gas reading. The LCD also shows information for each of the GasWatch 3's operating modes.

#### **Control Buttons**

Two control buttons, AIR and POWER/MODE, are located below the LCD.

**Table 3: GasWatch 3 Control Button Functions** 

Button	Function(s)	
AIR	<ul> <li>turns on LCD backlight</li> <li>resets alarm condition if LATCH is set to ON in Maintenance Mode</li> <li>enters User Mode, Maintenance Mode, and Gas Select Mode when used with POWER/MODE</li> <li>activates the demand zero function (adjusts the GasWatch 3's fresh air reading)</li> <li>changes the value of a parameter available for adjustment</li> <li>scrolls through parameter options</li> </ul>	
POWER/MODE	<ul> <li>scrolls through parameter options</li> <li>turns the GasWatch 3 on and off</li> <li>turns on LCD backlight</li> <li>enters and scrolls through Display Mode</li> <li>enters instructions into the GasWatch 3's microprocessor</li> <li>resets alarm condition if LATCH is set to ON in Maintenance Mode</li> <li>enters User Mode, Maintenance Mode, and Gas Select Mode when used with AIR</li> </ul>	

#### **Alarm LEDs**

The two alarm LEDs above the LCD alert you to gas, low battery, and failure alarms.

#### **Buzzer**

One solid-state electronic buzzer is located inside the case. Sound exits the case through a hole in the middle front of the case. The buzzer sounds for gas alarms, malfunctions, and low battery voltage. It also provides feedback for button presses and while in Display, User, Maintenance, or Gas Select Mode.

#### Vibrator

A vibrating motor inside the GasWatch 3 case vibrates for gas alarms and unit malfunctions.

**NOTE:** If **STEALTH** is set to **ON**, the vibrator only functions when **VIB** in the **STEALTH** Gas Select Mode item is set to **ON** (see pg.97).

#### Sensor

The sensor retainer holds the sensor in its socket. Only one sensor is needed to detect CO and  $O_2$ . The dual  $CO/O_2$  sensor is a combination electrochemical cell that consists of two precious metal electrodes in a dilute acid electrolyte. A gas permeable membrane covers the sensor face and allows gas to diffuse into the electrolyte. The gas reacts in the sensor and produces a current proportional to the concentration of the target gases. The GasWatch 3's circuitry amplifies the current, converts the current to a gas concentration, and displays the concentration on the LCD.

#### **Filters**

#### Charcoal Filter (Black)

A black charcoal filter is placed into a recess in the filter gasket over the sensor. The charcoal filter disk scrubs H<sub>2</sub>S and certain hydrocarbons out of the sample to avoid false CO readings. If false or elevated CO readings are noticed, especially in the presence of H<sub>2</sub>S, change the charcoal filter.

#### Hydrophobic Filter

The white, circular hydrophobic filter sits on the filter gasket, covering the sensor port and the charcoal filter.

#### Infrared Communications Port

An infrared (IR) communications port is located at the top of the instrument, near the LEDs. Logged data transmits through the port in standard IrDA protocol. A computer's infrared port or an IrDA/USB cable connected to a USB port can be used to download data to the GasWatch 3 Datalogging Program. See the GasWatch 3 Datalogging Program operator's manual for data logging and downloading instructions.

# **Battery**

A user-replaceable CR2450 button cell battery powers the GasWatch 3. At 25°C the battery lasts at least 2,000 hours (83 days). The battery icon in the upper right of the LCD shows remaining battery life.

A low battery warning activates when the GasWatch 3 detects a low battery voltage. The GasWatch 3 sounds a dead battery alarm when battery voltage is too low for Measuring Mode.

**NOTE:** Use of batteries not specified by RKI Instruments, Inc. compromises the CSA classification and may void the warranty. See "Replacing the Battery" on page 76.

WARNING: To prevent ignition of a hazardous atmosphere, the battery must only be changed in an area known to be nonhazardous.

AVERTISSEMENT: Pour éviter l'inflammation d'une atmosphère dangereuse, la batterie ne doit être remplacée que dans une zone non dangereuse.

# **Standard Accessories**

# **Alligator Clip**

An alligator clip is installed to a base clip that attaches to spring bars on the back of the GasWatch 3. Use the alligator clip to attach the GasWatch 3 to clothing or a belt. Teeth in the alligator clip's jaws prevent slipping. The alligator clip can be rotated to change the instrument's orientation.

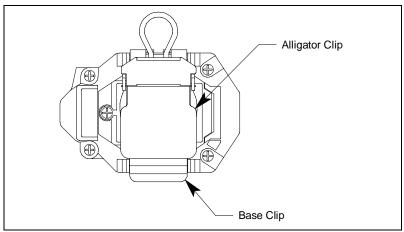


Figure 2: Alligator Clip

# **Optional Accessories**

#### **Watch Band**

The adjustable watch band allows the GasWatch 3 to be worn on the wrist. The watch band attaches to spring bars that are protected by hollow tubes.


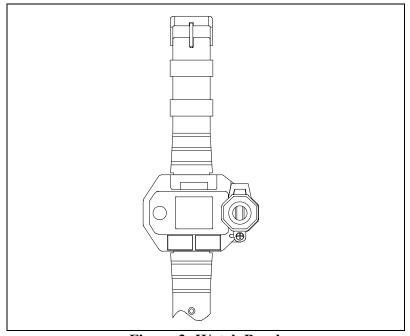


Figure 3: Watch Band

# **Calibration Cup**

The calibration cup installs over the sensor. You must use the calibration cup when performing a bump test, calibration, or gas test.

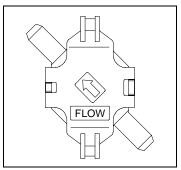

**Figure 4: Calibration Cup** 

# IrDA/USB Cable

Unless your computer has a built-in IrDA port, a IrDA/USB cable is needed to establish communication between the GasWatch 3 and the Datalogging Program or the Setup Program.

# **Chapter 3: Measuring Mode**

#### **Overview**


This chapter explains how to use the GasWatch 3 to perform confined space entry monitoring or general area monitoring in Measuring Mode.

# **Start Up**

This section explains how to start up the GasWatch 3, get it ready for operation, and turn it off. **Turning On the GasWatch 3** 

To illustrate certain functions, the following description of the GasWatch 3 start up sequence assumes that the following items in User Mode are turned on: LUNCH, CAL.RMDR, and BP.RMDR in User Mode, and ID DISP and A.ZERO in Maintenance Mode. If any of these items are turned off, then the corresponding screens do not appear.

- 1. Press and briefly hold down POWER/MODE. Release the button when you hear a beep.
- 2. If LUNCH is set to ON (factory setting if OFF, see pg.67), the Lunch Break Screen appears. The unit counts down from 5 seconds.

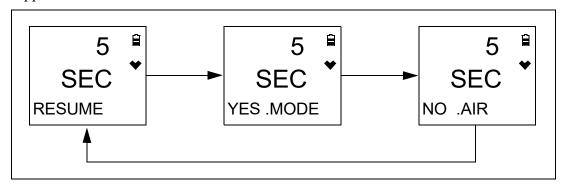

- a. <u>Continue Accumulating</u>: To continue accumulating peak and time-weighted average (TWA) readings from the last time the GasWatch 3 was used, press and release POWER/MODE or allow the countdown to reach 0. The short-term exposure limit (STEL) reading is reset each time the GasWatch 3 is turned on.
- b. <u>Reset Accumulation</u>: To reset the accumulation of peak and time-weighted average (TWA) readings, press and release AIR before the countdown reaches 0.

3. If **CAL.RMDR** is set to **ON** (factory setting) and <u>a calibration is due</u>, the screen that appears next depends on how **CAL.EXPD** is set in User Mode (see pg.60). The three possible screens are described below. If <u>a calibration is not due</u>, the instrument displays the number of days left until a calibration is due.

	CAL.EXPD set to CONFIRM (factory setting)	CAL.EXPD set to CANT.USE	CAL.EXPD set to NONE
LCD	CAL CAL - LMT  Buzzer sounds double pulsing	FAIL  CAL - LMT  Buzzer sounds double pulsing	0 d d NEXT.CAL
Action	• Option A, Perform calibration: Press and release POWER/ MODE to enter User Mode and perform a calibration. The instrument takes you straight to the calibration start screen in User Mode's GAS CAL\A- CAL(E-CAL) item. See pg.45 for calibration instructions.  NOTE: If Password Protection is set ton On (factory setting is Off) using the GW-3 Config Pro- gram, you will be prompted for a password to enter User Mode.  If the calibration is success- ful, the screen above will not appear again until the unit is due for calibration. If the cali- bration is not successful, the screen above will again appear in the startup sequence. • Option B, Bypass message: To continue without performing a calibration, press and release AIR.	The GasWatch 3 cannot be used until a successful calibration is performed. Press and release POWER/MODE to enter User Mode and perform a calibration. The instrument takes you straight to the calibration start screen in User Mode's GAS CAL/A-CAL (E-CAL) item. If you don't press POWER/MODE, the instrument automatically goes to the calibration start screen after 6 seconds. See pg.45 for calibration instructions.  **NOTE: If Password Protection is set ton On (factory setting is Off) using the GW-3 Config Program, you will be prompted for a password to enter User Mode.  If the calibration is successful, the screen above will not appear again until the unit is due for calibration. If the calibration is not successful, the screen above will again appear in the startup sequence.	Option A, Perform calibration:     If you want to enter User     Mode and perform a     calibration, press and release     POWER/MODE. The     instrument takes you straight     to the calibration start screen     in User Mode's GAS CAL/A-CAL (E-CAL) item.      Option B, Bypass message:     To continue without     performing a calibration, wait     a few seconds for the     instrument to continue with its     startup sequence.

4. If **BP.RMDR** is set to **ON** (factory setting is **OFF**) and <u>a bump test is due</u>, the screen that appears next depends on how **BP.EXPD** is set in User Mode (see pg.64). The three possible screens are described below. If <u>a bump test is not due</u>, the instrument displays the number of days left until a bump test is due.

	BP.EXPD set to CONFIRM (factory setting)	BP.EXPD set to CANT.USE	BP.EXPD set to NONE
LCD	CAL ♣ BP - LMT	FAIL ♥ BP - LMT	0 d d NEXT.BP
Sound	Buzzer sounds double pulsing tone	Buzzer sounds double pulsing tone	None
Action	Option A, Perform bump test:     Press and release POWER/     MODE to enter User Mode     and perform a bump test. The     instrument takes you straight     to the bump test start screen in     User Mode's BUMP item. See     pg.39 for bump test     instructions.      NOTE: If Password Protection     is set ton On (factory setting is     Off) using the GW-3 Config Program, you will be prompted for a     password to enter User Mode.      If the bump test is successful,     the screen above will not     appear again until the unit is     due for bump testing. If the     bump test is not successful,     the screen above will again     appear in the startup sequence.     Option B, Bypass message: To     continue without performing a     bump test, press and release     AIR.	The GasWatch 3 cannot be used until a successful bump test is performed. Press and release POWER/MODE to enter User Mode and perform a bump test. The instrument takes you straight to the bump test start screen in User Mode's BUMP item. If you don't press POWER/MODE, the instrument automatically goes to the bump test start screen after 6 seconds. See pg.39 for bump test instructions.  **NOTE: If Password Protection is set ton On (factory setting is Off) using the GW-3 Config Program, you will be prompted for a password to enter User Mode.  If the bump test is successful, the screen above will not appear again until the unit is due for bump testing. If the bump test is not successful, the screen above will again appear in the startup sequence.	Option A, Perform bump test:     If you want to enter User     Mode and perform a bump     test, press and release     POWER/MODE. The     instrument takes you straight     to the bump test start screen in     User Mode's BUMP item.      Option B, Bypass message:     To continue without     performing a bump test, wait     a few seconds for the     instrument to continue with its     startup sequence.


5. The Date/Time Screen appears for a few seconds.

2019 **2** . 13 **1** 10:42


6. The Battery Voltage Screen appears for a few seconds. An "AL-L" at the bottom of the screen indicates that the alarms are set to latching. An "AL-A" at the bottom of the screen indicates that the alarms are set to auto reset. See pg.87 for a description of how to change this parameter.




7. The following screens display for 1 second each: Gas Name, Full Scale, Warning Setpoint, Alarm Setpoint, Alarm H Setpoint, STEL Setpoint (CO only), and TWA Setpoint (CO only).

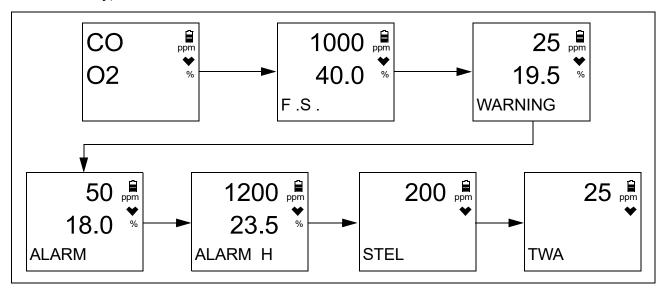

8. If **ID DISP** is set to **ON** (factory setting is **OFF**, see pg.89), the User ID Screen appears for a few seconds, followed by the Station ID Screen.



9. If the GasWatch 3 experiences a sensor failure during start up, a screen indicating that the sensor failed appears and the buzzer sounds a double pulsing tone once per second.




You cannot acknowledge the failure and continue to Measuring Mode. Replace the failed sensor as soon as possible.


10. If **A.ZERO** is set to **ON** (factory setting is **OFF**, see pg.88), the instrument prompts you to do an auto zero. An auto zero operation sets the reading to 0 ppm.

# WARNING: Make sure that the instrument is in a known fresh air environment (an environment free of combustible or toxic gases and of normal oxygen content, 20.9%) before performing an auto zero operation. If you perform an auto zero operation in an area with gases present, the adjustment will not be accurate.


You <u>must</u> press and release the POWER/MODE button to perform an auto zero function. If you do not press any key, after 15 seconds, the instrument enters Measuring Mode without performing an auto zero.

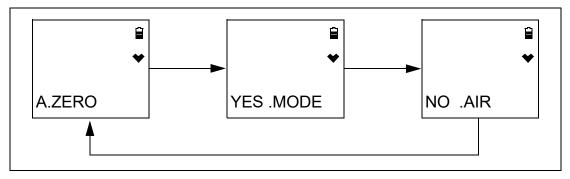

If **Password Protection** is turned **On** (factory setting is **Off**) using the GW-3 Setup Program, a user-set password is required to perform an auto zero. When the password screen appears, adjust each digit with the AIR button and press and release the POWER/MODE button to move on to the next digit. Once the password is entered, the instrument performs the auto zero.




11. The GasWatch 3 is now monitoring for gas in Measuring Mode. The Measuring Mode Screen displays the current gas readings. The CO reading displays on the top line and the O<sub>2</sub> reading displays on the middle line.



# Performing a Demand Zero

Perform a demand zero before using the GasWatch 3. This sets the CO reading to 0 ppm and the O<sub>2</sub> reading to 20.9%.


- 1. Find a fresh-air environment. This is an environment free of toxic or combustible gases and of normal oxygen content (20.9%).
- 2. Turn on the unit as described above in "Turning On the GasWatch 3".
- 3. Press and hold AIR. The buzzer pulses and the LCD prompts you to continue holding AIR (if **KEY.TONE** is set to **ON** in User Mode).
- 4. Continue to hold AIR until the LCD prompts you to release it. The GasWatch 3 sets the fresh air reading. Start up is complete and the unit is now ready for monitoring.
- 5. If **Password Protection** is turned **On** (factory setting is **Off**) using the GW-3 Setup Program, a user-set password is required to perform a demand ero. When the password screen appears, adjust each digit with the AIR button and press and release the POWER/MODE button to move on to the next digit. Once the password is entered, the instrument performs the demand zero.



# **Turning Off the GasWatch 3**


- 1. Press and hold POWER/MODE.
- 2. OFF appears on the display and the buzzer pulses for about five seconds (if **KEY.TONE** is set to **ON** in User Mode).
- 3. Release the button when OFF disappears from the display.

If **Password Protection** is turned **On** (factory setting is **Off**) using the GW-3 Setup Program, a user-set password is required to turn off the GasWatch 3. When the password screen appears, adjust each digit with the AIR button and press and release the POWER/MODE button to move on to the next digit. Once the password is entered, the instrument shuts off.



# **Measuring Mode Operation**

When the GasWatch 3 completes its startup sequence, it is in Measuring Mode. In Measuring Mode the GasWatch 3 continuously monitors the sampled atmosphere and displays the gas concentration. The GasWatch 3 is in Normal Operation if there are no alarm indications.



<u>Heart Symbol</u>: The heart symbol on the right side of the LCD indicates the operation status and flashes when normal. A microprocessor error causes the heart symbol to stop flashing or to disappear.

<u>Check Mark</u>: If **BP.RMDR** is set to **ON** <u>and</u> if a bump test is not due, a check mark appears in the lower left corner of the LCD.


"S": If the instrument is operating in Stealth Mode, an "S." appears at the bottom of the LCD.

<u>Backlight</u>: In a low-light environment, press and release either button to turn on the display backlight. See pg.69 to program backlight duration.

Confirmation/Non-Compliance Indicator: If the **BEEP** item in User Mode is set to anything other than **OFF**, the GasWatch 3 gives periodic indications to confirm that it's operating or to indicate a non-compliance (see pg.68).

# **Monitoring an Area**

1. Start up the GasWatch 3 as described above in "Start Up" on page 14. It is now in Measuring Mode.



- 2. Take the GasWatch 3 to the monitoring area.
- 3. Wait at least 15 seconds.
- 4. If a reading is observed, allow the reading to stabilize to determine the gas concentration present.
- 5. If a gas alarm occurs, take appropriate action. See pg.23.

#### **Alarms**

This section covers alarm indications in Measuring Mode. It also describes how to reset the GasWatch 3 after an alarm occurs and how to respond to an alarm condition.

**NOTE:** False alarms may be caused by radio frequency (RF) or electromagnetic (EMI) interference. Keep the GasWatch 3 away from RF and EMI sources such as radio transmitters or large motors.

#### **Alarm Indications**

The GasWatch 3 buzzer sounds an alarm, the LEDs flash, and the vibrator pulses when any sort of alarm condition or failure occurs. If the GasWatch 3 is operating in Stealth Mode, the buzzer does not sound and the vibrator's operation depends on the **VIB** setting in Gas Select Mode's **STEALTH** item. See pg.97 for more information.

**NOTE:** If an alarm condition occurs while you are in Display Mode, the GasWatch 3 automatically returns to the Measuring Mode screen.

The table below summarizes the types of alarms produced by the GasWatch 3 and their indications.

**Table 4: Alarm Types and Indications** 

Alarm Type	Visual Indications	Other Indications
Warning Concentration of gas rises above the Warning setting for CO or falls below the Warning setting for O <sub>2</sub> .	<ul> <li>Gas reading flashes</li> <li>WARNING appears at the bottom of the LCD</li> <li>Alarm LEDs flash once per second</li> <li>Backlight turns on</li> </ul>	<ul> <li>High-low tone sounds once per second</li> <li>Vibrator pulses once per second</li> </ul>
Alarm  Concentration of gas rises above the Alarm setting for CO or falls below the Alarm setting for $O_2$ .	<ul> <li>Gas reading flashes</li> <li>ALARM appears at the bottom of the LCD</li> <li>Alarm LEDs flash twice per second</li> <li>Backlight turns on</li> </ul>	<ul> <li>High-low tone sounds twice per second</li> <li>Vibrator pulses twice per second</li> </ul>
Alarm H Concentration of gas rises above the Alarm H setting.	<ul> <li>Gas reading flashes</li> <li>ALARM H appears at the bottom of the LCD</li> <li>Alarm LEDs flash twice per second</li> <li>Backlight turns on</li> </ul>	<ul> <li>High-low tone sounds twice per second</li> <li>Vibrator pulses twice per second</li> </ul>
TWA or STEL  Concentration rises above the TWA or STEL alarm setting (CO only).	<ul> <li>Gas reading flashes</li> <li>TWA or STEL appears at the bottom of the LCD</li> <li>Alarm LEDs flash once per second</li> <li>Backlight turns on</li> </ul>	<ul> <li>High-low tone sounds once per second</li> <li>Vibrator pulses once per second</li> </ul>

**Table 4: Alarm Types and Indications** 

Alarm Type	Visual Indications	Other Indications
Over Range	<ul> <li>Gas reading is replaced with a flashing □□□</li> <li>Gas name and units flash</li> <li>OVER appears at the bottom of the LCD</li> <li>Alarm LEDs flash twice per second</li> <li>Backlight turns on</li> </ul>	High-low tone sounds twice per second     Vibrator pulses twice per second
Minus Over Range	<ul> <li>Affected channel's gas reading is replaced with a flashing □□□□</li> <li>Gas name and units flash</li> <li>M OVER appears at the bottom of the LCD</li> <li>Alarm LEDs flash twice per second</li> <li>Backlight turns on</li> </ul>	High-low tone sounds twice per second     Vibrator pulses twice per second
Low Battery Warning	The last bar in the battery icon disappears and the battery icon starts flashing	None
Dead Battery Alarm	Gas reading disappears. FAIL     BATTERY appears on the LCD.     Alarm LEDs flash once per second	Double pulsing tone sounds once per second
Sensor Failure	<ul><li>FAIL SENSOR appears on the LCD.</li><li>Alarm LEDs flash once per second</li></ul>	Double pulsing tone sounds once per second
Clock Failure	FAIL 050 CLOCK appears on the LCD     Alarm LEDs flash once per second	Double pulsing tone sounds once per second
System Failure	FAIL SYSTEM and an error code appear on the LCD     Alarm LEDs flash once per second	Double pulsing tone sounds once per second

# **Responding to Alarms**

This section describes response to gas, over range, battery, sensor failure, clock failure, and system failure alarms.

#### Responding to Gas Alarms

- 1. Follow your established procedure for an increasing gas condition or a decreasing oxygen condition.
- 2. Reset the alarm as necessary or allowed.
  - a. If **LATCH** is set to **ON** (factory setting) in Maintenance Mode, the gas reading must fall below an alarm setting (or rise above for an oxygen Warning or Alarm) before you can reset the alarm condition using POWER/MODE or AIR.
    - If **Password Protection** is set to **On** using the GW-3 Config Program, you must press AIR and POWER/MODE at the same time and then enter a user-set password to reset the gas alarm.
  - b. If **LATCH** is set to **OFF** in Maintenance Mode, the alarm condition automatically resets when gas reading falls below (or rises above for an oxygen Warning or Alarm) an alarm setpoint.

## Responding to Over Range Alarms

#### **WARNING:**

An over range condition may indicate an extreme carbon monoxide or oxygen concentration or an explosive concentration. Confirm the gas concentration with a different GasWatch 3 or with another gas detecting device.

AVERTISSEMENT: Un dépassement de la plage peut indiquer une concentration extrême de monoxyde de carbone ou d'oxygène ou une concentration d'explosif.

Confirmez la concentration de gaz avec un GasWatch 3 différent ou avec un autre dispositif de détection de gaz.

- 1. Follow your established procedure for an extreme gas condition.
- 2. Reset the alarm using POWER/MODE or AIR once the alarm condition clears if **LATCH** is set to **ON** (factory setting) in Maintenance Mode.
  - If **Password Protection** is set to **On** using the GW-3 Config Program, you must press AIR and POWER/MODE at the same time and then enter a user-set password to reset the over range alarm.
- 3. Calibrate the GasWatch 3 as described on pg.45.
- 4. If the over range condition continues or if you are not able to successfully calibrate the unit, you may need to replace the sensor.
- 5. If the over range condition continues after you replace the sensor, contact RKI Instruments, Inc. for further instructions.

#### Responding to Battery Alarms

#### **WARNING:**

The GasWatch 3 is not operational as a gas monitoring device during a dead battery alarm. Take the GasWatch 3 to a non-hazardous area and replace the battery as described in "Replacing the Battery" on page 76.

The GasWatch 3 is fully functional during a low battery warning. However, only 10 days of operating time remain. The amount of time depends on LCD backlight use and alarm frequency. Replace the battery as described on pg.76 as soon as possible.


**NOTE:** Alarms and the LCD backlight consume battery power and reduce the amount of operating time remaining.

#### Responding to Sensor Failure Alarms

- 1. Calibrate the sensor as described on pg.45.
- 2. If the sensor failure continues, replace the sensor as described on pg.79.
- 3. If the sensor failure condition continues after replacing the sensor, contact RKI Instruments, Inc. for further instructions.

#### Responding to Clock Failure Alarms

A clock failure alarm occurs if the unit's internal clock malfunctions.



1. Press and release POWER/MODE to continue into Measuring Mode.

*CAUTION:* There is no datalogging function if you operate the instrument after a clock failure.

- 2. Attempt to set the date using the **DATE** item in User Mode (see pg.72).
- 3. If the date cannot be set correctly, contact RKI Instruments, Inc. as soon as possible.

#### Responding to System Failure Alarms

1. If a system failure occurs, the system failure screen displays an error code as shown below:



2. The error code meanings are shown in the table below:

**Table 5: Error Code Explanation** 

Error Code	Explanation
000	ROM failure
010	RAM failure
020	FRAM failure
031	FLASH memory failure
082	Temperature sensor failure

3. If the error code is anything but 031, the instrument cannot be used. Contact RKI Instruments, Inc. as soon as possible.

If the error code is 031, press and release POWER/MODE to continue into Measuring Mode if the instrument must be used temporarily.

CAUTION: There is no datalogging function if you operate the instrument after a 031

system failure. Contact RKI Instruments, Inc. as soon as possible.

# **Data Logging**

The GasWatch 3 logs Measuring Mode gas readings, alarm data, and calibration data to its internal memory. Logged data can be download it to a computer via the infrared communications port on the front of the unit.

The data logging capacity depends on how often the GasWatch 3 stores data and how often the GasWatch 3 is turned on and off. The table below illustrates how much data logging time is available for the various interval times. It assumes that the unit is only turned on once and there are no alarms. The data logging interval time must be set using the GasWatch 3 Datalogging Program.

**Table 6: Data Logging Capacity** 

Interval Time	Data Logging Capacity	
10 seconds	10 hours	
20 seconds	20 hours	
30 seconds	30 hours	
1 minute	60 hours	
3 minutes	180 hours	
5 minutes	300 hours	
10 minutes	600 hours	

To utilize the GasWatch 3's downloading capability, you need:

- PC with Windows 7, Windows 8, or Windows 10
- IrDA port or IrDA/USB cable (cable available from RKI Instruments, Inc.)
- GasWatch 3 Datalogging Program (available at www.rkiinstruments.com/gw3).

For a complete description of the Datalogging Program and procedures for downloading data to a computer, see the GasWatch 3 Datalogging Program Operator's Manual.

# **Chapter 4: Display Mode**

This section describes Display Mode which is accessible from Measuring Mode. See Table 7 below for a list of Display Mode's menu items, a short description of each item, and the page number for further description.

**Table 7: Display Mode Menu Items** 

Display Mode Menu Item	Description	
Gas Name (pg.28)	Displays the gas name for each line of readings.	
PEAK (pg.28)	Displays the Peak reading.	
STEL (pg.29)	Displays the STEL reading.	
TWA (pg.29)	Displays the TWA reading.	
USER ID (pg.29) <sup>A</sup>	View and/or change the User ID.	
STN ID (pg.30) <sup>A</sup>	View and/or change the Station ID.	
CAL.DATA (pg.31) <sup>B</sup>	Displays the last calibration date.	
BP.DATA (pg.32) <sup>C</sup>	Displays the last bump test date.	
DATE (pg.32)	Displays the current date and time.	
TEMP (pg.32)	Displays the current temperature.	
ALARMP (pg.33)	View alarm points.	
BUZZ.VOL (pg.34) <sup>D</sup>	Set the buzzer volume to <b>LO</b> or <b>HI</b> (factory setting).	

<sup>&</sup>lt;sup>A</sup> Only appears if **DISP.SET** is set to **ON** in User Mode (factory setting) <u>and</u> if **ID DISP** is set to **ON** in Maintenance Mode (factory setting is **OFF**).

# **Tips for Using Display Mode**

- To enter Display Mode and scroll from one item to the next or skip an item when a question is asked, press and release POWER/MODE.
- To enter an item, press and release AIR.

**B** Only appears if **CAL.RMDR** is set to **ON** in User Mode (factory setting).

<sup>&</sup>lt;sup>C</sup> Only appears if **BP.RMDR** is set to **ON** in User Mode (factory setting is **OFF**).

D Only appears if **DISP.SET** is set to **ON** in User Mode (factory setting).

- To change a flashing parameter, press and release AIR. To reverse the movement in a list (ie. from down to up or vice versa):
  - a. Press and hold AIR.
  - b. Immediately press POWER/MODE and then release both buttons.
- To exit from an entered-information screen and go back to Measuring Mode, press and release POWER/MODE until you get to the Measuring Mode screen.

**NOTE:** Each screen displays for 20 seconds. If you do not press a button within 20 seconds, the GasWatch 3 automatically returns to Measuring Mode.

# **Gas Name Screen**


**NOTE:** The gas name screen shows the gas name and units for each line of readings.



# Peak Screen (PEAK)

The peak screen displays the highest concentration (lowest for oxygen) detected since the GasWatch 3 was turned on. The peak reading is stored until a higher level (lower level for oxygen) is detected, the peak reading is cleared, or the GasWatch 3 is turned off.

The lunch break feature enables the GasWatch 3 to save the peak reading when it is turned off so it can continue with the same peak when it is turned on again (see pg.14).




To clear the peak reading, do the following:

**NOTE:** If **Password Protection** is set to **On** using the GW-3 Series Setup Program, the peak reading cannot be cleared.

1. After entering Display Mode, press and release POWER/MODE until **PEAK** appears.

2. Press and hold AIR until the screen prompts you to release it.




3. The peak reading is reset and the unit returns to the Peak Screen.

If you do not want to clear the peak reading, release AIR before the above screen sequence occurs. The unit returns to the Peak Screen.


# STEL Screen (STEL)

The STEL Screen displays the short term exposure limit (STEL) reading for the CO channel only. The STEL reading is the average reading *over the last 15 minutes*.



# TWA Screen (TWA)

The TWA Screen displays the time weighted average (TWA) reading for the CO channel only.



The TWA reading is the average reading *over the last 8 hours*. If 8 hours have not elapsed since the last time the TWA reading was cleared, the average is still calculated over 8 hours. The missing readings are assigned a value of 0. If **LUNCH** is set to **OFF** (factory setting), the TWA is cleared when the GasWatch 3 is turned off.

If LUNCH is set to ON, the GasWatch 3 remembers the TWA reading when it is turned off and can continue accumulation when it is turned on again (see pg.14).

# **Changing the User ID (USER ID)**


This screen only appears if **DISP.SET** in User Mode is set to **ON** (factory setting) <u>and</u> if **ID DISP** in Maintenance Mode is set to **ON** (factory setting is **OFF**).

Use this screen to select a user ID from the 128 user IDs that are stored in the GasWatch 3's memory. Before a user ID is selected on a brand new instrument, the user ID is "-----". The factory-installed user IDs have a "U ID XXX" format.


The user ID provides a way to identify the GasWatch 3 user during a data logging session.

User IDs can only be <u>selected</u> in this menu item. In order to <u>edit</u> the 128 user IDs, you must use the GasWatch 3 Datalogging Program or GasWatch 3 Setup Program.

1. After entering Display Mode, press and release POWER/MODE until the **USER ID** screen sequence appears.

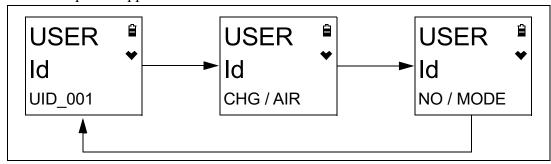

2. To change the User ID, press and release AIR. The current User ID flashes.



- 3. Use AIR to scroll to the desired User ID.
- 4. Press and release POWER/MODE to save the User ID and return to the **USER ID** screen in Display Mode.

# Changing the Station ID (STN ID)


This screen only appears if **DISP.SET** in User Mode is set to **ON** (factory setting) <u>and</u> if **ID DISP** in Maintenance Mode is set to **ON** (factory setting is **OFF**).

Use this screen to select a station ID from the 128 station IDs that are stored in the GasWatch 3's memory. Before a station ID is selected on a brand new instrument, the station ID is "-----". The factory-installed station IDs have a "S\_ID\_XXX" format.


The station ID provides a way to identify the GasWatch 3 location during a data logging session.

User IDs can only be <u>selected</u> in this menu item. In order to <u>edit</u> the 128 user IDs, you must use the GasWatch 3 Datalogging Program or GasWatch 3 Setup Program.

1. After entering Display Mode, press and release POWER/MODE until the **STN ID** screen sequence appears.

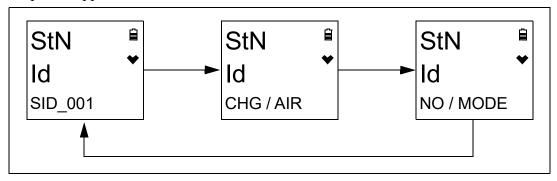

2. To change the Station ID, press and release AIR. The current Station ID flashes.




- 3. Use AIR to scroll to the desired Station ID.
- 4. Press and release POWER/MODE to save the Station ID and return to the **STN ID** screen in Display Mode.


# Last Successful Calibration Date (CAL.DATA)

The CAL.DATA screen shows the date of the last successful calibration. This screen only appears if CAL.RMDR is set to ON (factory setting).

1. After entering Display Mode, press and release POWER/MODE until the **CAL.DATA** screen sequence appears.

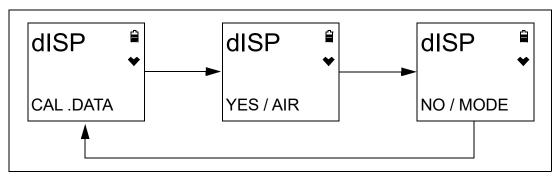

2. Press AIR to enter the CAL.DATA screen and switch between the channels.




3. Press and release POWER/MODE to return to the CAL.DATA screen in Display Mode.


# **Last Successful Bump Test Date (BP.DATA)**

The **BP.DATA** screen shows the date of the last successful bump test. This screen only appears if **BP.RMDR** is set to **ON** (factory setting is **OFF**).

1. After entering Display Mode, press and release POWER/MODE until the **BP.DATA** screen sequence appears.

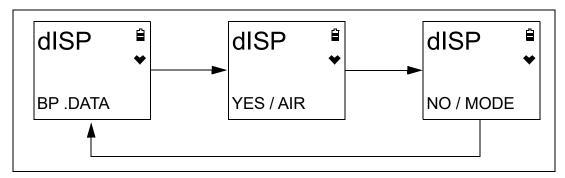

2. Press AIR to enter the **BP.DATA** screen and switch between the channels.




3. When you are done viewing the last bump test date, press and release POWER/MODE to return to the **BP.DATA** screen in Display Mode.

# **Date/Time Screen (DATE)**

The **DATE** screen shows the instrument's date and time.

# **Temperature Screen (TEMP)**


The **TEMP** screen shows the surrounding area's temperature.




# **Alarm Points Screen (ALARM--P)**

The Alarm Points Screen shows the gas alarm settings.

1. After entering Display Mode, press and release POWER/MODE until the **ALARM--P** screen sequence appears.

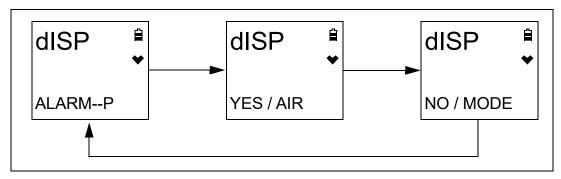

- 2. Press and release AIR. The Full Scale Setting screen appears.
- 3. Use AIR to scroll through the Warning, Alarm, Alarm H, STEL (CO only), and TWA (CO only) settings.

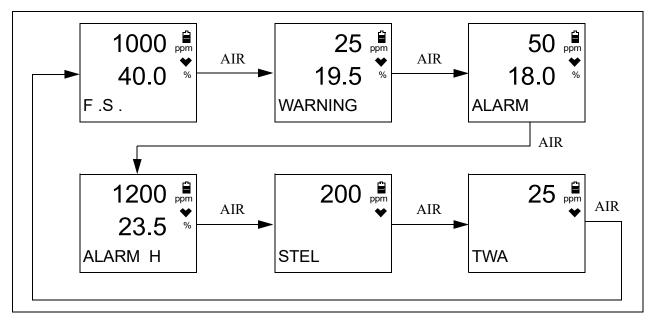

4. Press and release POWER/MODE to return to the Alarm Points Screen.


# Adjusting the Buzzer Volume (BUZZ.VOL)

The **BUZZ.VOL** screen allows you to adjust the volume of the instrument's buzzer. This screen only appears if **DISP.SET** in User Mode is set to **ON** (factory setting).

HI (factory setting): Buzzer volume is high.

LO: Buzzer volume is low.

1. While in Display Mode, press and release POWER/MODE until **BUZZ.VOL** appears. The current setting displays on the top line.

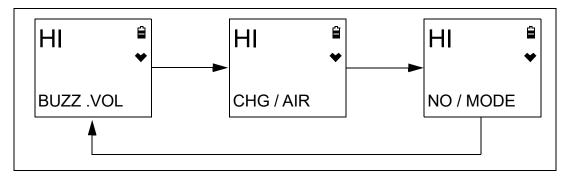

- 2. Press and release AIR. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **BUZZ.VOL** item in Display Mode.

# **Chapter 5: User Mode and Calibration**

# **Overview**

This section describes the GasWatch 3 in User Mode. See Table 8 below for a list of the items found in User Mode, the page that the item's instructions can be found on, and a short description of the item.

**Table 8: User Mode Menu Items** 

User Mode Menu Item	Description				
BUMP (pg.39)	Perform a bump test.				
	BUMP CYL X	Perform a bump test on the gases selected for Cylinder X (A-E cylinders available).			
	START	Begin the warmup sequence and enter Measuring Mode.			
	ESCAPE	Return to the <b>BUMP</b> menu item.			
GAS CAL (pg.45)	Perform a fresh air adjustment, perform a span adjustment, change the calibration gas concentration.				
	AIR (pg.45)	Perform a fresh air adjustment.			
	A-CAL (pg.46) or E-CAL (pg.51) depending on E-CAL User Mode setting*	A-CAL (or E-CAL) CYL X	Perform a span adjustment on the gases selected for Cylinder X (A-E cylinders available).		
		START	Begin the warmup sequence and enter Measuring Mode.		
		CAL-P	Set the calibration gas concentration.		
		CYL SEL	Assign a cylinder (A-E) to each gas. CO and O <sub>2</sub> are assigned to Cylinder A by default.		
		ESCAPE	Return to the A-CAL item in the GAS CAL menu.		
	ESCAPE	Return to the GAS CAL item in User Mode.			
CAL SET (pg.59)	Change parameters related to calibration.				
	CAL.RMDR (pg.60)	ON (factory setting): The instrument notifies the user upon startup when a calibration is due. Notification type depends on CAL.EXPD setting below. CAL.DATA screen appears in Display Mode.  OFF: No notification upon startup when a calibration is due. CAL.DATA screen does not appear in Display Mode.			
	CAL.INT (pg.60)	How often the instrument needs to be calibrated. Options: 1 - 1000 days (factory setting is 90 days)			

**Table 8: User Mode Menu Items** 

User Mode Menu Item	Description				
CAL SET (cont'd)	CAL.EXPD (pg.60)	Defines what action must be taken if a calibration is due upon startup.  CONFIRM (factory setting): Press and release AIR to acknowledge that calibration is due and continue to Measuring Mode.  CANT.USE: Cannot enter Measuring Mode until a successful calibration is performed.  NONE: A screen indicates that calibration is due but warmup sequence continues.			
	ESCAPE	Return to the CAL SET item in User Mode.			
BUMP.SET	Change parameters related to bump testing.				
(pg.61)	SETTING (pg.61)	GAS.TIME	How long gas is applied during a bump test. Choices: <b>30</b> (factory setting), <b>45</b> , <b>60</b> , <b>90</b> seconds		
		СНЕСК	Percentage of calibration gas concentration that the bump test reading must be within in order to pass bump. Options: 10%, 20%, 30%, 40%, 50% (factory setting)		
		CAL.TIME	How long gas is applied during a calibration.  GAS.TIME is deducted from this time.  Options: 90 (factory setting) or 120 seconds		
		A-CAL	ON (factory setting): If a bump test fails, a calibration automatically starts.  OFF: If a bump test fails, a calibration does not automatically start.		
		ESCAPE	Return to the <b>SETTING</b> item in the <b>BUMP SET</b> menu.		
	BP.RMDR (pg.63)	ON: The instrument notifies the user upon startup when a bump test is due. Notification type depends on BP.EXPD setting below. BP.DATA screen appears in Display Mode.  OFF (factory setting): No notification upon startup when a bump test is due. BP.DATA screen does not appear in Display Mode.			
	BP.INT (pg.64)	How often the instrument needs to be bump tested.  Options: 0 - 30 days (factory setting is 30 days)			
	BP.EXPD (pg.64)	Defines what action must be taken if a bump test is due upon startup.  CONFIRM (factory setting): Press and release AIR to acknowledge that bump test is due and continue to Measuring Mode.  CANT.USE: Cannot enter Measuring Mode until a successful bump test is performed.  NONE: A screen indicates that bump test is due but warmup sequence continues.			
	ESCAPE	Return to the <b>BUMP SET</b> item in User Mode.			
ALARM-P (pg.65)	Set alarm points (WARNING, ALARM, ALARM H, STEL, TWA) and/or reset all alarms to their default settings.				
LUNCH (pg.67)	ON: Lunch break feature is on. Instrument asks if you want to resume TWA and PEAK readings at startup.  OFF (factory setting): Lunch break feature is off. Instrument resets TWA and PEAK readings every time it's turned on.				

**Table 8: User Mode Menu Items** 

User Mode Menu Item	Description	
BEEP (pg.68)	Set confirmation	on beep parameters.
	BEEP.SEL (pg.68)	LED: LEDs flash and instrument vibrates based on interval defined in BEEP.INT to confirm instrument is still operating.  BUZZER: Buzzer sounds and instrument vibrates based on interval defined in BEEP.INT to confirm instrument is still operating.  LED+BUZ: LEDs flash, buzzer sounds, and instrument vibrates based on interval defined in BEEP.INT to confirm instrument is still operating.  BMP/CAL: LEDs flash based on interval defined in BEEP.INT if bump test or calibration is due regardless of whether BP.RMDR and/or CAL.RMDR are set to ON.  OFF (factory setting): No alerts to confirm instrument is still operating or that a bump test or calibration is due.
	BEEP.INT (pg.69)	Confirmation alert interval. Confirmation type defined in <b>BEEP.SEL</b> . Options: <b>0.5</b> minute and <b>1</b> to <b>99</b> minutes in 1 minute increments. The factory setting is <b>5</b> minutes.
	ESCAPE	Return to the <b>BEEP</b> item in User Mode.
BL TIME (pg.69)	How long the back light stays on after the last button press.  Options: 0 - 255 seconds or OFF. The factory setting is 30 seconds.	
KEY.TONE (pg.70)	ON (factory setting): Buzzer sounds when button is pressed. OFF: Buzzer does not sound when button is pressed.	
DISP.SET (pg.70)	OFF: USER ID, STN ID, and BUZZ.VOL items do not appear in Display Mode. ON (factory setting): BUZZ.VOL item appears in Display Mode. USER ID and STN ID items appear if ID DISP in Maintenance Mode is also set to ON.	
ZERO.SUP (pg.71)**	ON (factory setting): Not intended for field adjustment. The suppression values are: CO: 2 ppm O <sub>2</sub> : 0.5% volume	
ZERO.FLW (pg.71)***	ON (factory setting): Not intended for field adjustment. Oxygen channel does not support zero follower functionality.	
E-CAL (pg.71)	XX seconds: E-CAL appears in GAS CAL instead of A-CAL.  OFF (factory setting): E-CAL does not appear in GAS CAL.	
DATE (pg.72)	Set the instrument's date and time.	
PASS-W (pg.72)	ON: User Mode is password-protected. Factory-set password is 0405. OFF (factory setting): User Mode is not password-protected.	
ROM/SUM (pg.73)	View the firmware information for the GasWatch 3's sensor board and main board.	
START (pg.74)	Press and release POWER/MODE to begin the warmup sequence and enter Measuring Mode.	
	creen appears in	A-CAL/E-CAL, CYL.DISP is set to ON in Maintenance Mode. t to ON in Maintenance Mode.

<sup>\*\*\*</sup> Only appears if **ZFLW.DSP** is set to **ON** in Maintenance Mode.


# **Entering User Mode**

#### WARNING: The GasWatch 3 is not in operation as a gas detector while in User Mode.


- 1. Take the GasWatch 3 to a non-hazardous location and turn it off if it is on.
- 2. Press and hold AIR, then press and hold POWER/MODE. When you hear a beep, release the buttons.
- 3. The screen that appears depends on the setting of User Mode's **PASS-W** item.

If **PASS-W** is set to **OFF** (factory setting), continue with Step 6.

If **PASS-W** is set to **ON**, continue with Step 4.

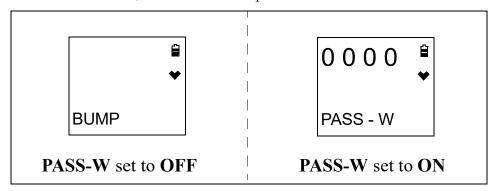

- 4. If **PASS-W** is set to **ON** in User Mode, a password screen appears and the first digit flashes. The factory-set password is **0405** but it can be changed.
- 5. Use AIR to select each password number then press POWER/MODE to save it and move on to the next number. To go back a number, press and hold AIR and POWER/MODE for a few seconds. To reverse the direction of change (ie. from increasing to decreasing or vice versa):
  - a. Press and hold AIR.
  - b. Immediately press POWER/MODE and then release both buttons.
- 6. The **BUMP** item displays.



7. Use AIR to move through the User Mode items.

# **Tips for Using User Mode**


- To scroll from one item to the next, press and release AIR. To reverse the scrolling direction:
  - a. Press and hold AIR.
  - b. Immediately press POWER/MODE and then release both buttons.
  - c. The scrolling direction returns to the original direction when you exit and reenter a menu.
- To skip an item when a question is asked, press and release AIR.
- To enter an item and to save any changes, press and release POWER/MODE.
- To change a flashing parameter, press and release AIR. To reverse the direction of change (ie. from increasing to decreasing or vice versa):
  - a. Press and hold AIR.
  - b. Immediately press POWER/MODE and then release both buttons.
- To exit an entered item without saving a change, press and hold AIR and POWER/MODE for a few seconds.

# Performing a Bump Test (BUMP)


Bump test the instrument before each day's use with a known concentration of each target gas. The instrument does not need to be calibrated unless it does not pass the bump test.

To bump test the GasWatch 3, you need:


- Calibration gas cylinder (RKI Instruments recommends using 50 ppm CO in N<sub>2</sub>)
- 0.25 LPM fixed flow regulator
- Non-absorbent tubing
- Calibration cup
- 1. Confirm that the GasWatch 3's calibration gas values match the concentrations listed on the calibration gas cylinder as described on pg.56.
- 2. Confirm that the regulator knob is turned all the way clockwise. Screw the 0.25 LPM fixed flow regulator onto the calibration cylinder.
- 3. Install the calibration cup onto the GasWatch 3. The calibration cup has an indicated flow direction. Be sure the calibration cup is installed in the correct direction and that it is pushed on all the way.

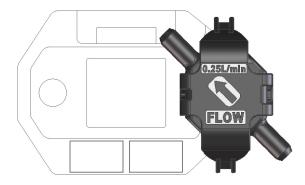

- 4. Use the tubing to connect the regulator to the inlet of the calibration cup.
- 5. While in User Mode, press AIR to scroll to **BUMP**.




6. Press and release POWER/MODE. The display shows the gases assigned to Cylinder A and their assigned calibration values (see pg.56 if the calibration values do not match the calibration gas cylinder's concentrations). The bottom of the screen alternates between "CYL A" and "BUMP".




- 7. If necessary, use AIR to scroll to the Bump screen for the gas(es) you want to bump test. As shipped from the factory, CO and O<sub>2</sub> are both assigned to Cylinder A.
- 8. Make sure the GasWatch 3 has been turned on for at least 45 seconds before continuing.
- 9. Turn the regulator knob counterclockwise to open the regulator.
- 10. Press and release POWER/MODE.
- 11. The gas reading flashes, the bottom of the screen alternates between "APLY" and "BUMP", and the bottom of the screen counts down from the time set in **BUMP.SET\SETTING\GAS.TIME**.

To back out of the gas application screen without performing the bump test, press and release AIR and POWER/MODE together.



12. At the end of the countdown, the instrument analyzes the results. Follow the flow chart to determine the bump test outcome.

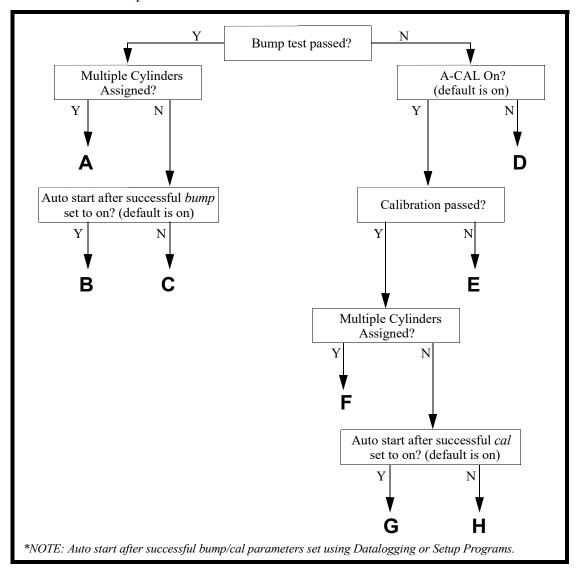


**Figure 5: Bump Test Flow Chart** 

Option A from Flow Chart	Option B from Flow Chart	Option C from Flow Chart
Bump test passed     Multiple cylinders assigned	Bump test passed     One cylinder assigned     Auto Start After Successful Bump set to ON (factory setting)	<ul> <li>Bump test passed</li> <li>One cylinder assigned</li> <li>Auto Start After Successful Bump set to OFF (factory setting is ON)</li> </ul>
<ol> <li>The instrument indicates that the bump test passed. Use AIR to scroll between the bump test result and the bump test gas reading.</li> <li>P AIR AIR AIR AIR AIR AIR AIR AIR AIR AIR</li></ol>	1. The instrument indicates that all channels passed the bump test. Use AIR to scroll between the bump test results and the bump test gas readings.  P P AIR P AIR O.5 BMP/ BMP/CAL  2. Close the regulator. 3. Unscrew the regulator. 4. Remove the calibration cup. 5. Press and release POWER/MODE to enter Measuring Mode.	1. The instrument indicates that all channels passed the bump test. Use AIR to scroll between the bump test results and the bump test gas readings.  P P AIR P AIR O.5 BMP/CAL  2. Close the regulator. 3. Unscrew the regulator. 4. Remove the calibration cup. 5. Press and release POWER/MODE to return to the START item in the BUMP menu. 6. Press and release POWER/MODE to enter Measuring Mode.

#### **Option D from Flow Chart Option E from Flow Chart Option F from Flow Chart** Bump test failed Bump test failed Bump test failed A-CAL set to ON (factory setting) A-CAL set to ON (factory setting) A-CAL set to OFF (factory setting is ON) Calibration failed Calibration passed Multiple cylinders assigned 1. The instrument shows which channels 1. A calibration immediately and 1. A calibration immediately and

 The instrument shows which channels passed or failed the bump test. The LEDs flash and the buzzer sounds. Use AIR to scroll between the results and the readings.




- 2. Close the regulator.
- 3. Unscrew the regulator.
- 4. Remove the calibration cup.
- Press and release POWER/MODE to return to the BUMP CYL A item in the BUMP menu.
- Use AIR to scroll to START and press and release POWER/MODE to enter Measuring Mode.
- 7. Calibrate the GW-3 as soon as possible.

- A calibration immediately and automatically starts for the channel that failed the bump test. Continue to apply the calibration gas.
- The calibration time is the difference between the GAS TIME and the CAL TIME values defined in the BUMP SET\SETTINGS item in User Mode.



 The instrument shows which channels passed or failed the bump test/ calibration. The LEDs flash and the buzzer sounds. Use AIR to scroll between the results and the readings.




- 4. Close the regulator.
- 5. Unscrew the regulator.
- 6. Remove the calibration cup.
- Press and release POWER/MODE to return to the BUMP CYL A item in the BUMP menu.
- 8. Use AIR to scroll to **START** and press and release POWER/MODE to enter Measuring Mode.

- automatically starts for the channel that failed the bump test. Continue to apply the calibration gas.

  The calibration time is the difference
- The calibration time is the difference between the GAS TIME and the CAL TIME values defined in the BUMP SET\SETTINGS item in User Mode.



3. The instrument shows pass/fail results of the bump test/calibration. Use AIR to scroll between the results and the readings.



- 4. Close the regulator.
- Press and release POWER/MODE to move to the BUMP CYL X screen for the next cylinder.
- Unscrew the regulator from the first cylinder and screw it into the next cylinder.
- 7. Repeat Step 9 through Step 12.
- 8. After the last cylinder is bump tested, press and release POWER/MODE to go to the **START** item in the **BUMP** menu.
- 9. Remove the calibration cup.
- 10. Press and release POWER/MODE to enter Measuring Mode.

# **Option G from Flow Chart** · Bump test failed • A-CAL set to ON (factory setting)


- Calibration passed
- · One cylinder assigned
- Auto Start After Successful Cal set to ON (factory setting)
- · Bump test failed
- A-CAL set to ON (factory setting)

**Option H from Flow Chart** 

- Calibration passed
- One cylinder assigned
- Auto Start After Successful Cal set to OFF (factory setting is ON)
- 1. A calibration immediately and automatically starts for the channel that failed the bump test. Continue to apply the calibration gas.
- 2. The calibration time is the difference between the GAS TIME and the CAL TIME values defined in the BUMP **SET\SETTINGS** item in User Mode.



3. The instrument shows which channels passed or failed the bump test/ calibration. Use AIR to scroll between the results and the readings.




- 4. Close the regulator.
- 5. Unscrew the regulator.
- 6. Remove the calibration cup.
- 7. Press and release POWER/MODE to enter Measuring Mode.

- 1. A calibration immediately and automatically starts for the channel that failed the bump test. Continue to apply the calibration gas.
- The calibration time is the difference between the GAS TIME and the CAL TIME values defined in the BUMP **SET\SETTINGS** item in User Mode.



3. The instrument shows which channels passed or failed the bump test/ calibration. Use AIR to scroll between the results and the readings.



- 4. Close the regulator.
- Unscrew the regulator.
- Remove the calibration cup.
- Press and release POWER/MODE to return to the **START** item in the **BUMP** menu.
- 8. Press and release POWER/MODE to enter Measuring Mode.

# Performing a Calibration (GAS CAL)

- Bump test the instrument before each day's use with a known concentration of each target gas. A bump test can be done in User Mode's **BUMP** item or by applying gas in Measuring Mode. The instrument does not need to be calibrated unless it does not pass the User Mode bump test or does not respond appropriately, as defined by the user, in Measuring Mode.
- To fully calibrate the sensors, you must do a fresh air adjustment (AIR CAL) and a span adjustment (A-CAL or E-CAL).
- The GasWatch 3 can be calibrated using either **A-CAL** or **E-CAL** depending on the setting of the **E-CAL** User Mode item.
  - **A-CAL** (appears if **E-CAL** User Mode item is set to **OFF**): Apply gas for a period of time, then press and release POWER/MODE to perform the adjustment.
  - **E-CAL** (appears if **E-CAL** User Mode item is set to something besides **OFF**): As soon as gas is applied and the reading reaches 10% of the auto calibration value, the instrument counts down from the number of seconds specified in the **E-CAL** User Mode item and automatically performs the adjustment.

# Performing a Fresh Air Adjustment (AIR)

- 1. Find a fresh air environment, an environment of normal oxygen content (20.9%) that is free of toxic and combustible gases.
- 2. While in User Mode, press AIR to scroll to GAS CAL.



3. Press and release POWER/MODE. The AIR item appears.




4. Press and release POWER/MODE to enter the AIR menu.



5. Make sure the GasWatch 3 has been turned on for at least 45 seconds before continuing.

- 6. To return to the **AIR** menu without performing a fresh air adjustment, press and release POWER MODE.
- 7. Press and hold AIR until the screen prompts you to release it.



- 8. If the fresh air adjustment passes, the instrument returns to the **AIR** item in the **GAS CAL** menu.
- 9. If the fresh air adjustment fails, "FAIL AIR" displays. Press and release POWER/MODE to acknowledge the failure. See pg.75.


# Performing a Span Adjustment in A-CAL

The **A-CAL** item only appears if **E-CAL** in User Mode is set to **OFF** (factory setting). If **E-CAL** is set to **ON**, see pg.51 for calibration instructions.

#### Preparing for Span Adjustment

To adjust the span on the GasWatch 3, you need:


- Calibration gas cylinder (RKI Instruments recommends using 50 ppm CO in N<sub>2</sub>)
- 0.25 LPM fixed flow regulator
- Non-absorbent tubing
- Calibration cup
- 1. Confirm that the GasWatch 3's calibration gas values match the concentrations listed on the calibration gas cylinder as described on pg.56.
- 2. Confirm that the regulator knob is turned all the way clockwise. Screw the 0.25 LPM fixed flow regulator onto the calibration cylinder.
- 3. Install the calibration cup onto the GasWatch 3. The calibration cup has an indicated flow direction. Be sure the calibration cup is installed in the correct direction and that it is pushed on all the way.

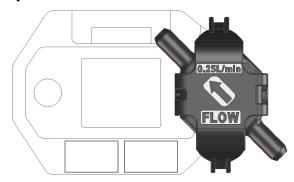


4. Use the tubing to connect the regulator to the inlet of the calibration cup.

# Performing a Span Adjustment


1. While in User Mode, press AIR to scroll to GAS CAL.




- 2. Press and release POWER/MODE. The AIR item appears.
- 3. Use AIR to scroll to the **A-CAL** item.



4. Press and release POWER/MODE. The display shows the gases assigned to Cylinder A and their assigned calibration values (see pg.56 if the calibration values do not match the calibration gas cylinder's concentrations). The bottom of the screen alternates between "CYL A" and "A-CAL".




- 5. If necessary, use AIR to scroll to the Auto Cal screen for the gas(es) you want to calibrate. As shipped from the factory, CO and O<sub>2</sub> are assigned to Cylinder A.
- 6. Make sure the GasWatch 3 has been turned on for at least 45 seconds before continuing.
- 7. Press and release POWER/MODE.
- 8. The gas reading flashes and the bottom of the screen alternates between "APPLY" and "A-CAL".



**NOTE:** To back out of the gas application screen without performing the calibration, press and release AIR and POWER/MODE together.

- 9. Turn the regulator knob counterclockwise to open the regulator.
- 10. Allow the gas to flow for 1 minute.

- 11. Press and release POWER/MODE.
- 12. Follow the flow chart to determine the calibration outcome.

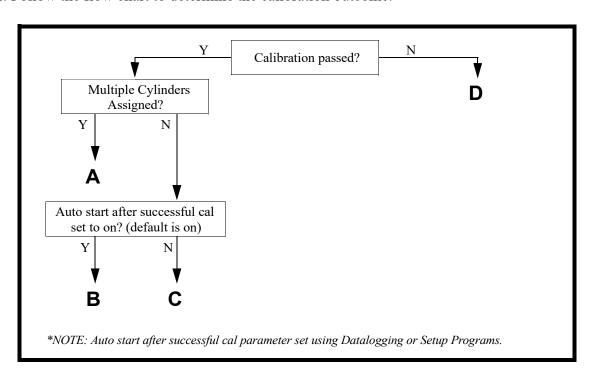

**Figure 6: Calibration Flow Chart** 

Option A from Flow Chart	Option B from Flow Chart
<ul><li>Calibration passed</li><li>Multiple cylinders assigned</li></ul>	<ul> <li>Calibration passed</li> <li>One cylinder assigned</li> <li>Auto Start After Successful Cal set to ON (factory setting)</li> </ul>
The instrument indicates that the calibration passed.	The instrument indicates that all channels passed the calibration.
PASS PPM +	PASS PPM PASS A-CAL
2. The instrument shows the current gas reading.	The instrument shows the current gas readings.
51 ₽₽₽ A-CAL	51 pm 0.5 **
3. If MAX.SPAN is set to ON (default is OFF, see pg.96), the response reading's maximum adjustment is displayed. A maximum span of 100 ppm on the CO channel indicates that the reading could have been adjusted up to 100 ppm. If the maximum span value is close to the calibration gas value, the sensor should be replaced soon.	3. If MAX.SPAN is set to ON (default is OFF, see pg.96), the response reading's maximum adjustment is displayed. A maximum span of 100 ppm on the CO channel indicates that the reading could have been adjusted up to 100 ppm. If the maximum span value is close to the calibration gas value, the sensor should be replaced soon.
The maximum CO adjustment is either twice the calibration value or full scale, whichever is lower. The maximum oxygen adjustment is 25.0% volume.	The maximum CO adjustment is either twice the calibration value or full scale, whichever is lower. The maximum oxygen adjustment is 25.0% volume.
91 ppm →	91 pm 24.0 *
MAX.SPAN	MAX.SPAN
<ul><li>4. Close the regulator.</li><li>5. The instrument continues to the A-CAL CYL X screen.</li></ul>	<ul><li>4. Close the regulator.</li><li>5. Unscrew the regulator.</li><li>6. Remove the calibration cup.</li></ul>
6. Unscrew the regulator from the first cylinder and screw it into the next cylinder.	7. The instrument automatically begins its warmup sequence and enters Measuring Mode.
7. Press and release POWER/MODE to start the next cylinder's calibration.	Wode.
<ul> <li>8. Repeat Step 9 through Step 12.</li> <li>9. After the last cylinder is calibrated, the instrument continues to the START item in the A-CAL menu.</li> <li>10. Remove the calibration cup.</li> </ul>	
11. Press and release POWER/MODE to enter Measuring Mode.	

Option C from Flow Chart	Option D from Flow Chart
<ul> <li>Calibration passed</li> <li>One cylinder assigned</li> <li>Auto Start After Successful Cal set to OFF (factory setting is ON)</li> </ul>	Calibration failed
1. The instrument indicates that all channels passed the calibration.  PASS ppm PASS %	1. The instrument indicates which channels failed the calibration.  FAIL ppm ppm FAIL %
A-CAL  2. The instrument shows the current gas readings.  51 pm 0.5 % A-CAL	A-CAL  2. Close the regulator. 3. Unscrew the regulator. 4. Remove the calibration cup. 5. Press and release POWER/MODE to return to the A-CAL CYL X screen in the A-CAL menu. 6. See "Troubleshooting" on page 75.
3. If MAX.SPAN is set to ON (default is OFF, see pg.96), the response reading's maximum adjustment is displayed. A maximum span of 100 ppm on the CO channel indicates that the reading could have been adjusted up to 100 ppm. If the maximum span value is close to the calibration gas value, the sensor should be replaced soon.	
The maximum CO adjustment is either twice the calibration value or full scale, whichever is lower. The maximum oxygen adjustment is 25.0% volume.  91 pm 24.0 MAX.SPAN	
<ol> <li>Close the regulator.</li> <li>Unscrew the regulator.</li> <li>Remove the calibration cup.</li> <li>The instrument continues to the START item in the A-CAL menu.</li> <li>Press and release POWER/MODE to enter Measuring Mode.</li> </ol>	


# Performing a Span Adjustment in E-CAL

The **E-CAL** item only appears if **E-CAL** in User Mode is set to **ON** (factory setting is **OFF**). If **E-CAL** is set to **OFF**, see pg.46 for calibration instructions.

#### Preparing for Span Adjustment

To adjust the span on the GasWatch 3, you need:


- Calibration gas cylinder (RKI Instruments recommends using 50 ppm CO)
- 0.25 LPM fixed flow regulator
- Non-absorbent tubing
- Calibration cup
- 1. Confirm that the GasWatch 3's calibration gas values match the concentrations listed on the calibration gas cylinder as described on pg.56.
- 2. Confirm that the regulator knob is turned all the way clockwise. Screw the 0.25 LPM fixed flow regulator onto the calibration cylinder.
- 3. Install the calibration cup onto the GasWatch 3. The calibration cup has an indicated flow direction. Be sure the calibration cup is installed in the correct direction and that it is pushed on all the way.

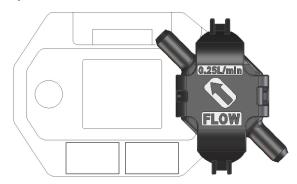


4. Use the tubing to connect the regulator to the inlet of the calibration cup.

# Performing a Calibration


1. While in User Mode, press AIR to scroll to GAS CAL.




- 2. Press and release POWER/MODE. The AIR item appears.
- 3. Use AIR to scroll to the **E-CAL** item.



4. Press and release POWER/MODE. The display shows the gases assigned to Cylinder A and their assigned calibration values (see pg.56 if the calibration values do not match the calibration gas cylinder's concentrations). The bottom of the screen alternates between "E-CAL" and "CYL A".




- 5. If necessary, use AIR to scroll to the Auto Cal screen for the gas(es) you want to calibrate. As shipped from the factory, CO and O<sub>2</sub> are assigned to Cylinder A.
- 6. Make sure the GasWatch 3 has been turned on for at least 45 seconds before continuing.
- 7. Press and release POWER/MODE.
- 8. The gas readings flash and the bottom of the screen says "GAS IN".



- 9. Turn the regulator knob counterclockwise to open the regulator.
- 10. Once the gas reading reaches 10% of the auto calibration value, the screen starts counting down from the time specified in the **E-CAL** User Mode item. In the example below, **E-CAL** is set to **60** seconds.


To back out of the gas application screen without performing the calibration, press and release AIR and POWER/MODE together.

If the reading never reaches 10% of the auto calibration value, press and release POWER/MODE to fail the calibration.



11. At the end of the countdown, the instrument makes the span adjustment.

12. Follow the flow chart to determine the calibration outcome.

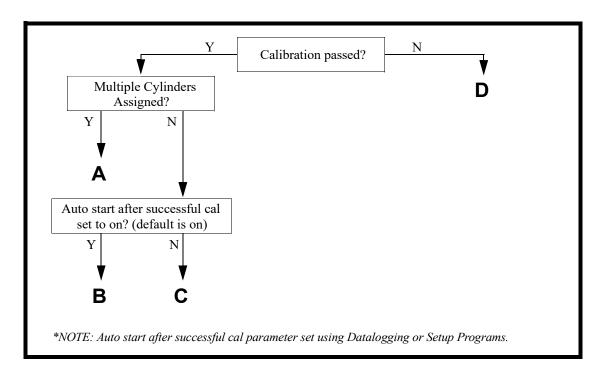


**Figure 7: Calibration Flow Chart** 

Option A from Flow Chart	Option B from Flow Chart	
Calibration passed     Multiple cylinders assigned	<ul> <li>Calibration passed</li> <li>One cylinder assigned</li> <li>Auto Start After Successful Cal set to ON (factory setting)</li> </ul>	
The instrument indicates that the calibration passed.	The instrument indicates that all channels passed the calibration.	
PASS ₽ PP P	PASS PRINTERS PASS **	
The instrument shows the current gas reading.	The instrument shows the current gas readings.	
51 ppm →	51 pm 0.5 * E-CAL	
3. If MAX.SPAN is set to ON (default is OFF, see pg.96), the response reading's maximum adjustment is displayed. A maximum span of 100 ppm on the CO channel indicates that the reading could have been adjusted up to 100 ppm. If the maximum span value is close to the calibration gas value, the sensor should be replaced soon.	3. If MAX.SPAN is set to ON (default is OFF, see pg.96), the response reading's maximum adjustment is displayed. A maximum span of 100 ppm on the CO channel indicates that the reading could have been adjusted up to 100 ppm. If the maximum span value is close to the calibration gas value, the sensor should be replaced soon.	
The maximum CO adjustment is either twice the calibration value or full scale, whichever is lower. The maximum oxygen adjustment is 25.0% volume.	The maximum CO adjustment is either twice the calibration value or full scale, whichever is lower. The maximum oxygen adjustment is 25.0% volume.	
91 ₽ PPM	91 pm 24.0 %	
<ol> <li>Close the regulator.</li> <li>The instrument continues to the E-CAL CYL X screen.</li> <li>Unscrew the regulator from the first cylinder and screw it into the next cylinder.</li> <li>Press and release POWER/MODE to start the next cylinder's calibration.</li> <li>Repeat Step 9 through Step 12.</li> <li>After the last cylinder is calibrated, the instrument continues to the START item in the E-CAL menu.</li> <li>Remove the calibration cup.</li> <li>Press and release POWER/MODE to enter Measuring Mode.</li> </ol>	4. Close the regulator. 5. Unscrew the regulator. 6. Remove the calibration cup. 7. The instrument automatically begins its warmup sequence and enters Measuring Mode.	

Option C from Flow Chart	Option D from Flow Chart
<ul> <li>Calibration passed</li> <li>One cylinder assigned</li> <li>Auto Start After Successful Cal set to OFF (factory setting is ON)</li> </ul>	Calibration failed
	1. The instrument indicates which channels failed the calibration.    FAIL   FA
whichever is lower. The maximum oxygen adjustment is 25.0% volume.  91 pm 24.0 % MAX.SPAN  4. Close the regulator. 5. Unscrew the regulator. 6. Remove the calibration cup. 7. The instrument continues to the START item in the E-CAL menu. 8. Press and release POWER/MODE to enter Measuring Mode.	

# Setting the Calibration Values in CAL--P


1. While in User Mode, press AIR to scroll to GAS CAL.




- 2. Press and release POWER/MODE. The AIR item appears.
- 3. Use AIR to scroll to the A-CAL item (E-CAL if E-CAL in User Mode is set to ON).




4. Press and release POWER/MODE. The Auto Cal screen for the gases assigned to Cylinder A displays.




5. Use AIR to scroll to CAL--P.




6. Press and release POWER/MODE. The CO channel displays.



7. Use AIR to scroll to the channel whose calibration gas value you want to change.

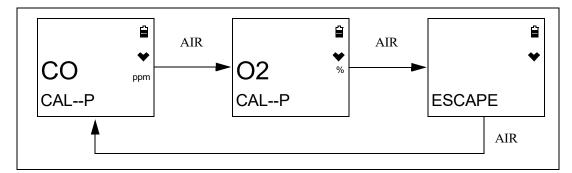

8. Press and release POWER/MODE. The calibration value begins to flash. In the example below, the CO channel is selected.



- 9. Use AIR to adjust the calibration gas value. The calibration gas value in the instrument must match the value listed on the calibration gas cylinder you are using.
- 10. Press and release POWER/MODE to save the change. The calibration gas value stops flashing and the unit returns to the gas name screen.
- 11. Use AIR to scroll to **ESCAPE**.
- 12. Press and release POWER/MODE to return to the CAL--P item in the A-CAL menu.
- 13. Press AIR to scroll to **ESCAPE**.
- 14. Press and release POWER/MODE to return to the A-CAL item in the GAS CAL menu.
- 15. See "Exiting the GAS CAL Menu" on page 59 to return to User Mode.

# **Making Cylinder Selections in CYL SEL**


The CYL SEL menu item allows you to assign cylinders for calibration. As shipped from the factory, CO and  $O_2$  are both assigned to Cylinder A. There are 5 cylinder assignments available: A, B, C, D, and E. To calibrate each channel separately, assign each channel to a different cylinder (ie. Cylinder A: CO, Cylinder B:  $O_2$ ).

1. While in User Mode, press AIR to scroll to **GAS CAL**.



2. Press and release POWER/MODE. The **AIR CAL** menu item appears.

3. Use AIR to scroll to the A-CAL item (E-CAL if E-CAL in User Mode is set to ON).



4. Press and release POWER/MODE. The Auto Cal screen for gases assigned to Cylinder A displays.




5. Use AIR to scroll to CYL SEL.




6. Press and release POWER/MODE. CO displays.



7. Use AIR to scroll to the gas whose cylinder assignment you want to change.

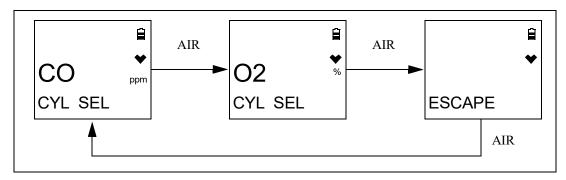

8. Press and release POWER/MODE. The current setting flashes. In the example below, CO is selected.



- 9. Use AIR to change the cylinder assignment. The choices are A, B, C, D, and E.
- 10. Press and release POWER/MODE to save the change. The cylinder assignment stops flashing and the unit returns to the gas selection screen.
- 11. Repeat steps Step 7 Step 10 for the other channel, if necessary.
- 12. Use AIR to scroll to **ESCAPE**.
- 13. Press and release POWER/MODE. The instrument returns to the **CYL SEL** menu item in the Auto Cal Menu.
- 14. Press AIR to scroll to **ESCAPE**.
- 15. Press and release POWER/MODE. The instrument returns to the **A-CAL** menu item in the **GAS CAL** menu.
- 16. See "Exiting the GAS CAL Menu" on page 59 to return to User Mode.

#### **Exiting the GAS CAL Menu**

- 1. While in the GAS CAL menu, press AIR to scroll to ESCAPE.
- 2. Press and release POWER/MODE to return to the GAS CAL item in User Mode.
- 3. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.


# **Setting Calibration Parameters (CAL SET)**

The CAL SET menu has 4 items: CAL.RMDR, CAL.INT, CAL.EXPD, and ESCAPE.

1. While in User Mode, press AIR to scroll to CAL SET.



2. Press and release POWER/MODE. The CAL.RMDR item appears.



#### **CAL.RMDR**

<u>ON</u> (factory setting): The GasWatch 3 gives an indication at start up if it is due for calibration. The type of indication depends on the **CAL.EXPD** setting (see pg.60).

**OFF**: The GasWatch 3 does not give an indication at start up if it is due for calibration.

1. After entering the CAL SET menu, press AIR to scroll to CAL.RMDR.




- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **CAL.RMDR** item in the **CAL SET** menu.
- 5. See "Exiting the CAL SET Menu" on page 61 to return to User Mode.

#### **CAL.INT**

This setting defines the amount of time between calibrations and can be set in 1 day increments. The minimum setting is 1 day and the maximum setting is 1000 days. The factory setting is 90 days.

1. After entering the CAL SET menu, press AIR to scroll to CAL.INT.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the CAL.INT item in the CAL.SET menu.
- 5. See "Exiting the CAL SET Menu" on page 61 to return to User Mode.

#### **CAL.EXPD**

This item defines what indication is given during start up when calibration is due and CAL.RMDR is set to ON (factory setting).

<u>CONFIRM</u> (factory setting): The GasWatch 3 gives an indication at start up if calibration is past due. Press and release AIR to continue without calibrating or press and release POWER/MODE to enter User Mode and perform a calibration.

<u>CANT.USE</u>: The GasWatch 3 gives an indication at start up that calibration is past due. Press and release POWER/MODE to enter User Mode and perform a calibration. Pressing AIR has no effect. A successful calibration must be performed in order to use the instrument.

<u>NONE</u>: The GasWatch 3 gives an indication at startup that calibration is past due. It is not necessary to acknowledge the indication. If desired, press POWER/MODE to enter User Mode and perform a calibration. The warm-up sequence continues on its own.

1. After entering the CAL SET menu, press AIR to scroll to CAL.EXPD.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **CAL.EXPD** item in the **CAL SET** menu.
- 5. See "Exiting the CAL SET Menu" on page 61 to return to User Mode.


# **Exiting the CAL SET Menu**

- 1. While in the CAL SET menu, press AIR to scroll to ESCAPE.
- 2. Press and release POWER/MODE to return to the CAL SET item in User Mode.
- 3. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.


# **Setting Bump Test Parameters (BUMP.SET)**

The BUMP.SET menu has 5 items: SETTING, BP.RMDR, BP.INT, BP.EXPD, and ESCAPE.

1. While in User Mode, press AIR to scroll to **BUMP.SET**.




2. Press and release POWER/MODE. The **SETTING** item appears.



#### **SETTING**

The **SETTING** menu has 5 items: **GAS.TIME**, **CHECK**, **CAL.TIME**, **A-CAL**, and **ESCAPE**.

1. After entering the **BUMP.SET** menu, press AIR to scroll to **SETTING**.



2. Press and release POWER/MODE. The **GAS.TIME** item appears.

#### **GAS.TIME**

The GAS.TIME is the amount of time that the instrument is exposed to gas during a bump test. The available choices are 30 seconds (factory setting), 45 seconds, 60 seconds, and 90 seconds.

1. After entering the **SETTING** menu, press AIR to scroll to **GAS.TIME**.




- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **GAS TIME** item in the **SETTING** menu.
- 5. See "Exiting the SETTING Menu" on page 63 to return to **BUMP.SET** menu.

#### CHECK

CHECK is the bump test tolerance value and is represented as a percentage of the calibration gas concentration. It is the percentage that the bump test reading can differ from the auto calibration value and still be considered a passed bump test. If the bump test reading differs more, the bump test fails. The available values are 10%, 20%, 30%, 40%, and 50% (factory setting).

1. After entering the **SETTING** menu, press AIR to scroll to **CHECK**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **CHECK** item in the **SETTING** menu.
- 5. See "Exiting the SETTING Menu" on page 63 to return to **BUMP.SET** menu.

#### **CAL.TIME**

The CAL.TIME is the total time the instrument is exposed to calibration gas if A-CAL is set to ON and a bump test fails. The bump test time is deducted from the calibration time. For example, if the CAL.TIME is set to 90 seconds and the GAS.TIME is set to 30 seconds, if the bump test fails, the GasWatch 3 is only exposed to gas for an additional 60 seconds. The available values are 90 seconds (factory setting), and 120 seconds.

1. After entering the **SETTING** menu, press AIR to scroll to **CAL.TIME**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **CAL.TIME** item in the **SETTING** menu.
- 5. See "Exiting the SETTING Menu" on page 63 to return to **BUMP.SET** menu.

#### A-CAL

**ON** (factory setting): If a bump test fails, the unit automatically begins a calibration.

**OFF**: If a bump test fails, the unit does not automatically begin a calibration.

1. After entering the **SETTING** menu, press AIR to scroll to **A-CAL**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **A-CAL** item in the **SETTING** menu.
- 5. See "Exiting the SETTING Menu" on page 63 to return to **BUMP.SET** menu.

#### Exiting the SETTING Menu


- 1. While in the **SETTING** menu, press AIR to scroll to **ESCAPE**.
- 2. Press and release POWER/MODE to return to the **SETTING** item in the **BUMP.SET** menu.
- 3. See "Exiting the BUMP.SET Menu" on page 65 to return to User Mode.

#### BP.RMDR

<u>ON</u>: The GasWatch 3 gives an indication at start up if it is due for bump testing. The type of indication depends on the **BP.EXPD** setting (see pg.64). If the instrument is not due for bump testing, a check mark appears in the lower left corner of the LCD.

**OFF** (factory setting): The GasWatch 3 does not give an indication at start up if it is due for bump testing.

1. After entering the **BUMP.SET** menu, press AIR to scroll to **BP.RMDR**.




- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **BP.RMDR** item in the **BUMP.SET** menu.
- 5. See "Exiting the BUMP.SET Menu" on page 65 to return to User Mode.

#### **BP.INT**

This setting defines the amount of time between bump tests and can be set in 1 day increments. The minimum setting is **0** days and the maximum setting is **30** days (factory setting).

1. After entering the **BUMP.SET** menu, press AIR to scroll to **BP.INT**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **BP.INT** item in the **BUMP.SET** menu.
- 5. See "Exiting the BUMP.SET Menu" on page 65 to return to User Mode.

#### **BP.EXPD**

This item defines what indication is given during start up when a bump test is due and **BP.RMDR** is set to **ON** (factory setting is **OFF**).

<u>CONFIRM</u> (factory setting): The GasWatch 3 gives an indication at start up if a bump test is past due. Press and release AIR to continue without bump testing or press and release POWER/MODE to enter User Mode and perform a bump test.

<u>CANT.USE</u>: The GasWatch 3 gives an indication at start up that a bump test is past due. Press and release POWER/MODE to enter User Mode and perform a bump test. Pressing AIR has no effect. A successful bump test must be performed in order to use the instrument.

<u>NONE</u>: The GasWatch 3 gives an indication at startup that a bump test is past due. It is not necessary to acknowledge the indication. If desired, press POWER/MODE to enter User Mode and perform a bump test. The warm-up sequence continues on its own.

1. After entering the **BUMP.SET** menu, press AIR to scroll to **BP.EXPD**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **BP.EXPD** item in the **BUMP.SET** menu.
- 5. See "Exiting the BUMP.SET Menu" on page 65 to return to User Mode.

# **Exiting the BUMP.SET Menu**

- 1. While in the **BUMP.SET** menu, press AIR to scroll to **ESCAPE**.
- 2. Press and release POWER/MODE to return to the **BUMP.SET** item in User Mode.
- 3. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.


# **Alarm Settings (ALARM--P)**

The ALARM--P menu has 3 items: ALARM--P, DEF.ALMP, and ESCAPE.

1. While in User Mode, press AIR to scroll to ALARM--P.




2. Press and release POWER/MODE. The first screen displays.




# **Setting the Alarm Points**

1. After entering the **ALARM-P** menu, press AIR to scroll to the instrument channel whose alarm points you want to change..

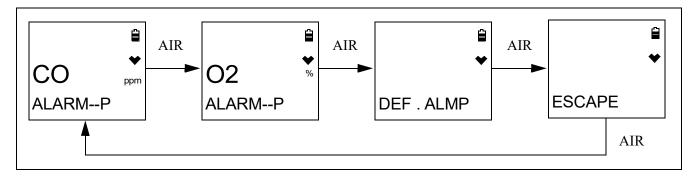

- 2. Press and release POWER/MODE.
- 3. The Warning setpoint for the channel flashes. In the example below, the CO channel is selected.

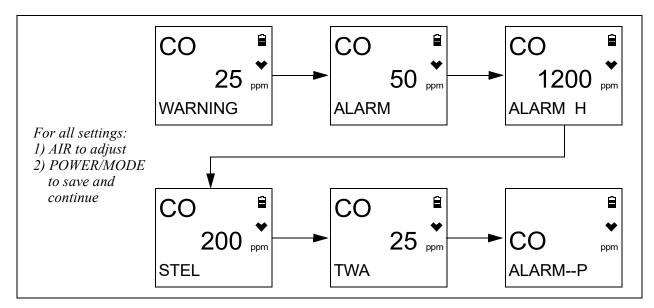

4. Use AIR to adjust the Warning setpoint. Alarm setpoint limitations are shown below.

Channel	Alarm Point Limitations	
СО	20 ppm ≤ WARNING ≤ ALARM ≤ ALARM H ≤ 2,000 ppm	
O <sub>2</sub>	• 0.0% ≤ ALARM ≤ WARNING ≤ 20.0%	
	• 21.8% ≤ ALARM H ≤ 40.0%	

- 5. Press and release POWER/MODE to save the setting.
- 6. Repeat Step 4 and Step 5 for the Alarm, Alarm H, STEL and TWA settings.
- 7. The instrument returns to the channel selection screen.
- 8. Repeat Step 1 Step 7 to change the alarm points for the other channel.
- 9. See "ESCAPE" on page 67 to return to User Mode.

# **Defaulting the Alarm Points**

Defaulting the alarm points defaults them back to factory settings as outlined in Table 1 on page 7 or to the settings saved in the **SAVE-AP** item in Gas Select Mode if you performed a **SAVE-AP** operation.

1. After entering the ALARM-P menu, press AIR to scroll to DEF.ALMP.



- 2. Press POWER/MODE to enter the **DEF.ALMP** item.
- 3. Press POWER/MODE to perform an alarm default. Press AIR to return to the **DEF.ALMP** item in the **ALARM-P** menu.
- 4. The instrument asks if you're sure you want to default the alarm points.
- 5. Press POWER/MODE to default the alarm points. Press AIR to return to the **DEF.ALMP** item in the **ALARM-P** menu.
- 6. See "ESCAPE" on page 67 to return to User Mode.

#### **ESCAPE**


- 1. While in the **ALARM-P** menu, press AIR to scroll to **ESCAPE**.
- 2. Press and release POWER/MODE to return to the ALARM--P item in User Mode.
- 3. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

# **Updating the Lunch Break Setting (LUNCH)**

**OFF** (factory setting): The GasWatch 3 automatically starts new TWA and PEAK reading collection and resets the time in operation at startup.

**ON**: The Lunch Break Screen displays during startup. From this screen, you can choose to continue accumulating TWA and PEAK readings and the time in operation from the last time the GasWatch 3 was used or start collecting new readings and reset the time in operation.

1. While in User Mode, press AIR to scroll to LUNCH.




- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **LUNCH** item in User Mode.
- 5. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.


# **Setting the Confirmation Beep and Non-Compliance Indicator (BEEP)**

The BEEP menu has 3 items: BEEP.SEL, BEEP.INT, and ESCAPE.

1. While in User Mode, press AIR to scroll to **BEEP**.



2. Press and release POWER/MODE. The **BEEP.SEL** item appears.



#### BEEP.SEL

**BEEP.SEL** defines what kind of confirmation or non-compliance indication you want to occur in Measuring Mode. The available choices are:

**OFF** (factory setting): The GasWatch 3 does not provide a confirmation alert or non-compliance indicator.

**LED**: The GasWatch 3's LEDs double flash as often as defined by the **BEEP.INT** parameter to verify that the instrument is operating.

**BUZZER**: The GasWatch 3's buzzer double beeps as often as defined by the **BEEP.INT** parameter to verify that the instrument is operating.

<u>**LED+BUZ**</u>: The GasWatch 3's LEDs double flash and the buzzer double beeps as often as defined by the **BEEP.INT** parameter to verify that the instrument is operating.

<u>BMP/CAL</u>: If a bump test or a calibration is due and if **BP.EXPD** or **CAL.EXPD** is set to **CONFIRM** (factory setting) or **NONE**, the GasWatch 3's LEDs double flash as often as defined by the **BEEP.INT** parameter to indicate a non-compliance. Once a bump test or calibration (depending on which is due) is done, the LEDs stop flashing.

1. While in the **BEEP** menu, press AIR to scroll to **BEEP.SEL**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.

- 4. Press and release POWER/MODE to save the setting and return to the **BEEP.SEL** item in the **BEEP** menu.
- 5. See "ESCAPE" on page 69 to return to User Mode.

#### **BEEP.INT**

The **BEEP.INT** parameter defines how often the confirmation alert or non-compliance indicator selected in **BEEP.SEL** occurs. This setting only applies if the **BEEP.SEL** parameter is set to something other than **OFF** (factory setting). The available choices are **0.5** minutes and **1-99** minutes in 1 minute increments. The factory setting is **5** minutes.

1. While in the **BEEP** menu, press AIR to scroll to **BEEP.INT**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **BEEP.INT** item in the **BEEP** menu.
- 5. See "ESCAPE" on page 69 to return to User Mode.

#### **ESCAPE**

- 1. While in the **BEEP** menu, press AIR to scroll to **ESCAPE**.
- 2. Press and release POWER/MODE to return to the **BEEP** item in User Mode.
- 3. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

# **Updating the Backlight Time (BL TIME)**

This setting defines how long the LCD backlight stays on when you press any button. The minimum setting is **OFF**; the maximum setting is **255** seconds. The factory setting is **30** seconds.

1. While in User Mode, press AIR to scroll to **BL TIME**.




- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **BL TIME** item in User Mode.
- 5. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

# **Turning the Key Tone On/Off (KEY.TONE)**

**ON** (factory setting): The instrument beeps when a button is pressed.

**OFF**: The instrument does not beep when a button is pressed.

1. While in User Mode, press AIR to scroll to **KEY.TONE**.




- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **KEY.TONE** item in User Mode.
- 5. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

# **Display Mode Items (DISP.SET)**

**OFF**: USER ID, STN ID, and BUZZ.VOL screens do not appear in Display Mode.

<u>ON</u> (factory setting): BUZZ.VOL screen appears in Display Mode. USER ID and STN ID screens appear in Display Mode if ID DISP in Maintenance Mode is also set to ON (factory setting is OFF).

1. While in User Mode, press AIR to scroll to **DISP.SET**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **DISP.SET** item in User Mode.
- 5. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

# **Zero Suppression (ZERO.SUP)**

This item only appears if **ZSUP.DSP** is set to **ON** in Maintenance Mode (factory setting is **OFF**).

The **ZERO.SUP** setting is not intended for field adjustment. The default setting is **ON**.

Sensor	Zero Suppression Value
СО	2 ppm
O <sub>2</sub>	0.5% volume

# Zero Follower (ZERO.FLW)

This item only appears if **ZFLW.DSP** is set to **ON** in Maintenance Mode (factory setting is **OFF**).

The **ZERO.FLW** setting is not intended for field adjustment. The default setting is **ON**. The oxygen channel does not support zero follower functionality.

# **Turning Easy Calibration On/Off (E-CAL)**

<u>OFF</u> (<u>factory setting</u>): Auto Calibration (A-CAL) item appears in GAS CAL menu instead of Easy Calibration (E-CAL).

<u>XX seconds</u>: Easy Calibration (E-CAL) item appears in GAS CAL menu instead of Auto Calibration (A-CAL). During a calibration, the instrument counts down from the number of seconds you select.


1. While in User Mode, press AIR to scroll to **E-CAL**.




- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **E-CAL** item in User Mode.
- 5. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

# **Setting the Date/Time (DATE)**

1. While in User Mode, place the cursor next to **DATE**.



2. Press and release POWER/MODE. The date and time display with the year flashing.




- 3. Use AIR to display the desired year.
- 4. Press and release POWER/MODE to save the setting. The month setting flashes.
- 5. Repeat Step 3 and Step 4 to enter the month, day, hours, and minutes settings. The date and time are saved and the instrument returns to the **DATE** item in User Mode.
- 6. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

# **Turning the Password On/Off (PASS-W)**

**ON**: The GasWatch 3 prompts you for a password when you enter User Mode. The factory-set password is **0405** but it can be changed.

**OFF** (factory setting): No password is required to enter User Mode.


1. While in User Mode, press AIR to scroll to PASS-W.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. If you selected **OFF**, press and release POWER/MODE to save the setting and return to the **PASS-W** item in User Mode.

If you selected **ON**, continue with Step 5.

5. Press and release POWER/MODE. The Set Password Screen appears. The current password appears and the first digit flashes.




- 6. Use AIR to display a number from 0 to 9.
- 7. Press and release POWER/MODE to enter the selection and advance to the next number. To go back a number, press and hold AIR and POWER/MODE for a few seconds.
- 8. Repeat Step 6 and Step 7 to select the remaining numbers. When you press and release POWER/MODE to enter the last number, the password is saved and the instrument returns to the **PASS-W** item in User Mode.
- 9. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

### Viewing the ROM/SUM (ROM/SUM)

The **ROM/SUM** screen shows the instrument's firmware version and firmware checksum.

1. While in User Mode, press AIR to scroll to **ROM/SUM**.




2. Press and release POWER/MODE. The screen cycles through the main board's ROM/SUM and the sensor board's ROM/SUM. The ROM is the top value and the SUM is the bottom value.



- 3. Press and release POWER/MODE to return to the **ROM/SUM** item in User Mode.
- 4. See "Entering Measuring Mode (START)" on page 74 to enter Measuring Mode.

# **Entering Measuring Mode (START)**

1. While in User Mode, press AIR to scroll to **START**.



2. Press and release POWER/MODE. The instrument begins its warmup sequence.

### **Chapter 6: Maintenance**

#### **Overview**

This chapter describes troubleshooting procedures for the GasWatch 3. It also includes procedures for replacing the battery and replacing various consumable parts.

**WARNING:** 

RKI Instruments recommends that service, calibration, and repair of RKI gas detectors be performed by personnel properly trained for this work. Replacing the sensor and other parts with original equipment does not affect the intrinsic safety of the instrument.

AVERTISSEMENT:RKI Instruments recommande que le service, l'étalonnage et la réparation des détecteurs de gaz RKI soient effectués par du personnel dûment formé à ces travaux. Le remplacement du capteur et d'autres pièces par l'équipement d'origine n'affecte pas la sécurité intrinsèque de l'instrument.

#### **Troubleshooting**

The troubleshooting table describes error messages, symptoms, probable causes, and recommended action for problems you may encounter with the GasWatch 3.

Table 9: Troubleshooting the GasWatch 3

Symptoms	Probable Causes	Recommended Action
The LCD is blank.	<ul> <li>The unit got turned off.</li> <li>The battery is inserted backwards.</li> <li>The battery needs to be replaced.</li> <li>The battery cover may not be completely closed.</li> </ul>	<ol> <li>To turn on the unit, press and briefly hold POWER/MODE.</li> <li>Reinstall the battery in the correct orientation.</li> <li>Replace the battery.</li> <li>Be sure the battery cover is completely closed and that the screw is tight.</li> <li>If the difficulties continue, contact RKI Instruments, Inc. for further instruction.</li> </ol>
The LCD shows an abnormally high reading but other gas detection instruments do not.	<ul> <li>Charcoal filter needs to be replaced.</li> <li>The GasWatch 3 needs to be recalibrated.</li> <li>The sensor needs replacement.</li> </ul>	<ol> <li>Replace the charcoal filter.</li> <li>Recalibrate the unit.</li> <li>If the difficulties continue, replace the sensor and calibrate.</li> <li>If the difficulties continue, contact RKI Instruments, Inc. for further instruction.</li> </ol>

**Table 9: Troubleshooting the GasWatch 3** 

Symptoms	Probable Causes	Recommended Action
Calibration fails.	<ul> <li>The calibration value does not match the cylinder gas concentration.</li> <li>The sample gas is not reaching the sensor because of a bad connection.</li> <li>The calibration cylinder is out of gas or is outdated.</li> <li>The sensor needs replacement.</li> </ul>	<ol> <li>Make sure the GasWatch 3 has been properly set up for calibration.</li> <li>Check all calibration tubing for leaks or for any bad connections.</li> <li>Verify that the calibration cylinder contains an adequate supply of fresh test sample.</li> <li>If the fail condition continues, replace the sensor.</li> <li>If the difficulties continue, contact RKI Instruments, Inc. for further instruction.</li> </ol>
Heart symbol at the top of the screen becomes steadily on or disappears.	A microprocessor error has occurred.	Contact RKI Instruments, Inc. for further instruction.

#### **Replacing the Battery**

WARNING: To prevent ignition of a hazardous atmosphere, battery must only be changed in an area known to be nonhazardous.

AVERTISSEMENT: Pour éviter l'inflammation d'une atmosphère dangereuse, la batterie ne doit être remplacée que dans une zone non dangereuse.

Replace the battery when the battery icon flashes and its lowest battery level indication bar disappears.

- 1. Make sure the GasWatch 3 is off.
- 2. For alligator clip versions, pry the base clip off so that it swings away from the instrument.

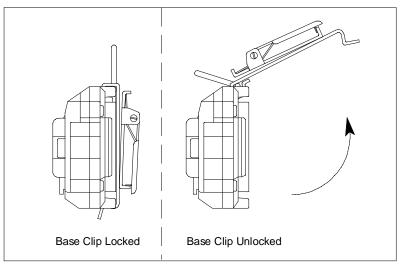


Figure 8: Releasing the Alligator Clip

3. Use a small Phillips screwdriver to unscrew the battery retainer's screw.

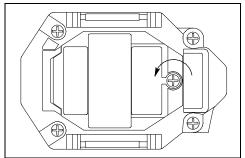


Figure 9: Removing the Battery Retainer

- 4. Remove the battery retainer.
- 5. Remove the old battery.
- 6. Install the new CR2450 button cell battery and reinstall the battery retainer and screw.

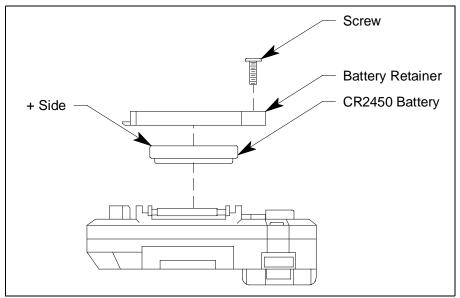


Figure 10: Installing a New Battery

7. If the instrument has been without batteries for more than 5 minutes, the date and time are reset and need to be set again. When the new batteries are installed, the instrument automatically turns on and displays the Date/Time Screen. Set the date and time as described on pg.72. Once the date and time are set, the instrument begins its warmup sequence. If you do not set the date and time within 30 seconds, the instrument automatically begins its warmup sequence.

## Replacing the Charcoal Filter

- 1. Verify that the GasWatch 3 is off.
- 2. Use a small Phillips screwdriver to unscrew the sensor retainer's screw.
- 3. Remove the sensor retainer.
- 4. The white hydrophobic filter and the sensor gasket should stay on the sensor.
- 5. Remove the white hydrophobic filter.
- 6. Remove the black charcoal filter from the center of the sensor gasket.

7. Install the new charcoal filter. It should be seated and recessed in the center of the sensor gasket.

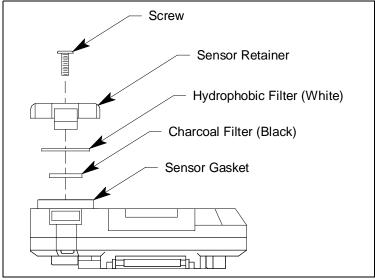


Figure 11: Replacing the Charcoal Filter

- 8. Reinstall the white hydrophobic filter. It should be seated and recessed in the sensor gasket and should not overlap the edge of the sensor gasket.
- 9. Reinstall the sensor retainer and tighten its screw.

#### Replacing the Hydrophobic Filter

- 1. Verify that the GasWatch 3 is off.
- 2. Use a small Phillips screwdriver to unscrew the sensor retainer's screw.
- 3. Remove the sensor retainer.
- 4. The hydrophobic filter and the sensor gasket should stay on the sensor.
- 5. Remove the old hydrophobic filter.
- 6. Install the new hydrophobic filter. It should be seated and recessed in the sensor gasket and should not overlap the edge of the sensor gasket.

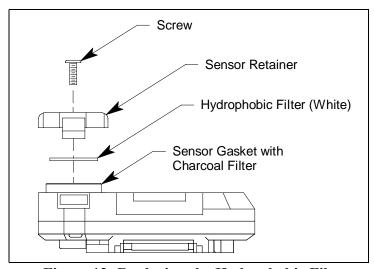


Figure 12: Replacing the Hydrophobic Filter

## **Replacing the Sensor**

- 1. Verify that the GasWatch 3 is off.
- 2. Use a small Phillips screwdriver to unscrew the sensor retainer's screw.
- 3. Remove the sensor retainer.
- 4. Remove the sensor gasket and filters. The filters may fall out. The sensor is exposed.

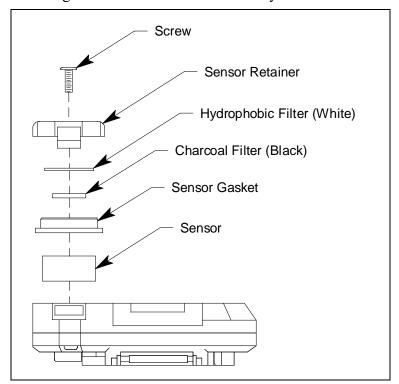


Figure 13: Replacing the Sensor

- 5. Remove the old sensor from its socket.
- 6. Carefully insert the replacement sensor. Be sure that the new sensor's orientation slots are aligned correctly. Do not force the sensor into its slot.
- 7. Reinstall the sensor gasket. Be sure to orient it as shown in Figure 13 above.
- 8. Reinstall the charcoal filter. It should be seated and recessed in the center of the sensor gasket.
- 9. Reinstall the hydrophobic filter. It should be seated and recessed in the sensor gasket and should not overlap the edge of the sensor gasket.
- 10. Reinstall the sensor retainer and tighten its screw.
- 11. Calibrate the new sensor as described on pg.45.

# **Chapter 7: General Parts List**

Table 10 lists part numbers for the GasWatch 3's replacement parts and accessories.

**Table 10: General Parts List** 

Part Number	Description
06-1248RK-03	Calibration kit tubing, 3 foot length
07-0056	Sensor gasket
10-1088	Screw, for sensor retainer and battery retainer
13-0105RK	Watch band
13-0126	Alligator clip
13-0204RK	Pins for connecting watch band/alligator clip
21-1955	Sensor retainer
21-1956	Battery retainer
33-0175	Hydrophobic filter
33-7100	Charcoal filter disk, 5 pack, for CO sensor
47-5084RK	USB/IrDA adapter module, Legasic, for use with all premier portables (without USB cable)
47-5084RK-01	USB/IrDA adapter assembly, Legasic, for use with all premier portables (with module and USB cable)
47-5085RK	Cable, USB A to USB mini, 6 feet, for 47-5084RK USB/IrDA adapter module
49-1404RK	Battery, CR 2450 coin type
71-0513	Operator's Manual, GasWatch 3 for CO (this document)
71-0514	Operator's Manual, GasWatch 3 Datalogging Program
71-0515	Operator's Manual, GasWatch 3 Setup Program
81-0062RK-01	Calibration cylinder, 50 ppm CO in N <sub>2</sub> , 34 liter steel
81-0062RK-03	Calibration cylinder, 50 ppm CO in N <sub>2</sub> , 103 liter
81-0076RK-01	Calibration cylinder, zero air, 34 liter steel
81-0076RK-03	Calibration cylinder, zero air, 103 liter
81-1050RK-25	Regulator, fixed flow, 0.25 LPM, with gauge and knob, for 17 liter and 34 liter steel cylinders (cylinders with external threads)
81-1051RK-25	Regulator, fixed flow, 0.25 LPM, with gauge and knob, for 34 liter aluminum, 58 liter, and 103 liter cylinders (cylinders with internal threads)
81-1194	Calibration cup
81-GW3CO	Calibration kit: 103 liter cylinder of 50 ppm CO in N <sub>2</sub> , regulator, tubing, calibration cup, case
81-GW3CO-LV	Calibration kit: 34 liter steel cylinder of 50 ppm CO in N <sub>2</sub> , regulator, tubing, calibration cup, case

#### **Table 10: General Parts List (cont.)**

Part Number	Description
ESR-X1DP-CX	Dual carbon monoxide (CO) and oxygen (O <sub>2</sub> ) sensor

# **Appendix A: Maintenance Mode**

#### **Overview**

This appendix describes the GasWatch 3 in Maintenance Mode. The GasWatch 3 is factory-set to suit most applications. Update settings in Maintenance Mode only if required for your specific application. Maintenance Mode items and their factory settings are listed in Table 11 below.

**Table 11: Maintenance Mode Menu Items** 

Maintenance Mode Menu Item	Description		
GAS CAL (pg.85)	Perform an air adjust, perform a span adjustment, change the calibration values.		
	AIR	Perform a fre	sh air adjustment.
	A-CAL or E-CAL depending on E-CAL User	Perform a spa	an adjustment and set the calibration gas concentration.
		A-CAL (or E-CAL)	Perform an automatic span adjustment.
	Mode setting	START	Begin the warmup sequence and enter Measuring Mode.
		CAL-P	Set the calibration gas concentration.
		CYL SEL	Assign a cylinder (A-E) to each gas. CO and O <sub>2</sub> are assigned to Cylinder A by default.
		ESCAPE	Return to the A-CAL item in the GAS CAL menu.
	ESCAPE	Return to the	GAS CAL item in Maintenance Mode.
GAS.TEST (pg.85)	Apply gas to test sensor response and observe alarm indications without an alarm event being recorded.		
SEN.DATE (pg.86)	View and/or set the replacement date for the sensor and the battery.		
BUMP (pg.87)	Perform a bump	Perform a bump test.	
LATCH (pg.87)	ON (factory setting): The GasWatch 3 remains in alarm until the alarm condition passes and POWER/MODE is pressed.  OFF: The GasWatch 3 automatically resets an alarm when the alarm condition passes.		
D.ZERO (pg.88)	ON (factory setting): You can manually perform a fresh air adjust in Measuring Mode by pressing AIR.  OFF: You cannot manually perform a fresh air adjust in Measuring Mode by pressing AIR.		
A.ZERO (pg.88)	ON: The GasWatch 3 asks if you want to perform a fresh air adjustment at the end of the startup sequence.  OFF (factory setting): The GasWatch 3 does not ask if you want to perform a fresh air adjustment at the end of the startup sequence.		

**Table 11: Maintenance Mode Menu Items** 

Maintenance Mode Menu Item	Description
ID DISP (pg.89)	ON: User ID and Station ID screens appear in startup sequence. IDs can be changed in Display Mode if DISP.SET in User Mode is also set to ON.  OFF (factory setting): User ID and Station ID screens do not appear in startup sequence. IDs cannot be changed in Display Mode.
ZERO.SUP (pg.89)	ON (factory setting): Not intended for field adjustment. The suppression value is 2 ppm.
ZERO.FLW (pg.89)	ON (factory setting): Not intended for field adjustment.
ZSUP.DSP (pg.89)	ON: Zero suppression item appears in User Mode. OFF (factory setting): Zero suppression item does not appear in User Mode. (Zero suppression item is always available in Maintenance Mode)
ZFLW.DSP (pg.90)	ON: Zero follower item appears in User Mode. OFF (factory setting): Zero follower item does not appear in User Mode. (Zero follower item is always available in Maintenance Mode)
CYL.DISP (pg.90)	ON (factory setting): CYL SEL item appears in GAS CAL.  OFF: CYL SEL item does not appear in GAS CAL.  (RKI Instruments, Inc. does not recommend adjusting this setting.)
DATE (pg.90)	Set the current date and time.
PASS-W (pg.91)	ON (factory setting): Maintenance Mode is password-protected. Factory-set password is 3000.  OFF: Maintenance Mode is not password-protected.
ROM/SUM (pg.91)	View the firmware information for the GasWatch 3's sensor board and main board.
M.DEF (pg.92)	Set all parameters back to their RKI factory settings.
START (pg.93)	Press and release POWER/MODE to begin the warmup sequence and enter Measuring Mode.


## **Entering Maintenance Mode**

WARNING: The GasWatch 3 is not in operation as a gas detector while in Maintenance Mode.


- 1. Take the GasWatch 3 to a non-hazardous location and turn it off if it is on.
- 2. Press and hold AIR, then press and hold POWER/MODE. You will hear a beep after one second. Continue to hold the buttons down.
- 3. When you hear a second beep, release the buttons.

4. The screen that appears depends on the setting of Maintenance Mode's **PASS-W** item. If **PASS-W** is set to **OFF**, continue with Step 8.

If **PASS-W** is set to **ON** (factory setting), continue with Step 5.

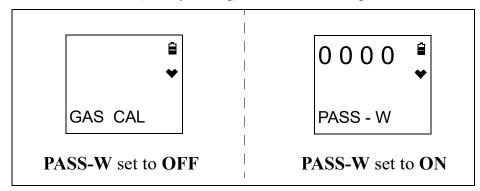

- 5. If **PASS-W** is set to **ON** in Maintenance Mode, a password screen appears and the first digit is flashing. The factory-set password is **3000** but it can be changed.
- 6. Use AIR to select each password number then press POWER/MODE to save it and move on to the next number. To go back a number, press and hold AIR and POWER/MODE for a few seconds. To reverse the direction of change (ie. from increasing to decreasing or vice versa):
  - a. Press and hold AIR.
  - b. Immediately press POWER/MODE and then release both buttons.
- 7. Continue to Step 6.
- 8. The **GAS CAL** item displays.



9. Use AIR to move through the Maintenance Mode items.

# **Tips for Using Maintenance Mode**

- To scroll from one item to the next, press and release AIR. To reverse the scrolling direction:
  - a. Press and hold AIR.
  - b. Immediately press POWER/MODE and then release both buttons.
  - c. The scrolling direction returns to the original direction when you exit and reenter a menu.
- To skip an item when a question is asked, press and release AIR.
- To enter an item and to save any changes, press and release POWER/MODE.

- To change a flashing parameter, press and release AIR. To reverse the direction of change (ie. from increasing to decreasing or vice versa):
  - a. Press and hold AIR.
  - b. Immediately press POWER/MODE and then release both buttons.
- To exit an entered item without saving a change, press and hold AIR and POWER/MODE for a few seconds.

#### Performing a Calibration (GAS CAL)

See pg.45 for a description of the GAS CAL item.

#### Performing a Gas Test (GAS.TEST)


The **GAS.TEST** item allows you to apply gas to the instrument and see all alarm indications except for the buzzer indication. There is no buzzer indication in the **GAS.TEST** menu even though the buzzer sounds in the event of a real gas alarm condition while in Measuring Mode.

A gas test is not saved in logged data.

#### Preparing for a Gas Test

To perform a gas test on the GasWatch 3, you need:


- A calibration gas cylinder. The concentrations should be above the alarm condition you want to check. Standard alarm points are listed on pg.7.
- A 0.25 LPM fixed flow regulator
- Non-absorbent tubing
- Calibration cup
- 1. Confirm that the regulator knob is turned all the way clockwise. Screw the 0.25 LPM fixed flow regulator onto the calibration cylinder.
- 2. Install the calibration cup onto the GasWatch 3. The calibration cup has an indicated flow direction. Be sure the calibration cup is installed in the correct direction and that it is pushed on all the way.

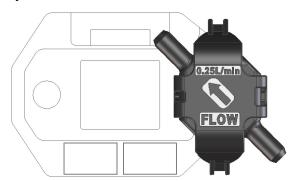


3. Use the tubing to connect the regulator to the inlet of the calibration cup.

#### Performing a Gas Test

1. While in Maintenance Mode, press AIR to scroll to **GAS.TEST**.



2. Press and release POWER/MODE. The current gas reading displays. The bottom of the LCD alternates between "GAS.TEST" and "BUZZ.OFF".



- 3. Turn the regulator knob counterclockwise to open the regulator.
- 4. The instrument initiates alarm indications <u>except</u> for the buzzer. There is no buzzer indication in the **GAS.TEST** menu even though the buzzer sounds in the event of a real gas alarm condition.
- 5. Turn the regulator knob clockwise to close the regulator.
- 6. Unscrew the regulator from the calibration cylinder.
- 7. Remove the calibration cup from the GasWatch 3.
- 8. Store the calibration kit in a safe and convenient place.
- 9. Press and release POWER/MODE to return to the **GAS.TEST** item in Maintenance Mode.
- 10. See "Entering Measuring Mode (START)" on page 93 to enter Measuring Mode.

#### Sensor/Battery Replacement Date (SEN.DATE)


The **SEN.DATE** item allows you to keep track of when the sensor and the battery were replaced.

1. While in Maintenance Mode, press AIR to scroll to **SEN.DATE**.



2. Press and release POWER/MODE. The sensor replacement date displays.

3. Use AIR to scroll to the item whose replacement date you want to view or change.

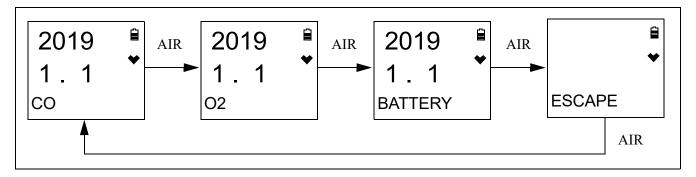

- 4. To change the replacement date:
  - a. With the desired item displayed, press and release POWER/MODE.
  - b. Press and release POWER/MODE again to set the replacement date to the current date.
- 5. Use the AIR button to scroll to **ESCAPE**.
- 6. Press and release POWER/MODE to return to the **SEN.DATE** item in Maintenance Mode.
- 7. See "Entering Measuring Mode (START)" on page 93 to enter Measuring Mode.

#### **Performing a Bump Test (BUMP)**

See "Performing a Bump Test (BUMP)" on page 39 for a description of the **BUMP** item.

#### **Setting Alarms to Latching or Self-Resetting (LATCH)**

**ON** (factory setting): The GasWatch 3 remains in alarm until the alarm condition passes *and* POWER/MODE is pressed.

**OFF**: The GasWatch 3 automatically resets an alarm when the alarm condition passes.

1. While in Maintenance Mode, press AIR to scroll to LATCH.




- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **LATCH** item in Maintenance Mode.
- 5. See "Entering Measuring Mode (START)" on page 93 to enter Measuring Mode.

## **Turning the Demand Zero Function On/Off (D.ZERO)**

**ON** (factory setting): You can manually perform a fresh air adjust in Measuring Mode by pressing AIR.

**OFF**: You cannot manually perform a fresh air adjust in Measuring Mode.

1. While in Maintenance Mode, press AIR to scroll to **D.ZERO**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **D.ZERO** item in Maintenance Mode.
- 5. See "Entering Measuring Mode (START)" on page 93 to enter Measuring Mode.

#### Turning the Auto Zero Function On/Off (A.ZERO)

**ON**: The GasWatch 3 asks if you want to perform a fresh air adjustment at the end of the startup sequence.

**OFF** (factory setting): The GasWatch 3 does not ask if you want to perform a fresh air adjustment at the end of the startup sequence.

1. While in Maintenance Mode, press AIR to scroll to **A.ZERO**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **A.ZERO** item in Maintenance Mode.
- 5. See "Entering Measuring Mode (START)" on page 93 to enter Measuring Mode.

#### **Turning the ID Display Function On/Off (ID DISP)**

<u>ON</u>: The User ID and Station ID screens appear in the startup sequence. If **DISP.SET** in User Mode is also set to **ON**, then the IDs can be changed in Display Mode.

**OFF** (factory setting): The User ID and Station ID screens do not appear in the startup sequence and the IDs cannot be changed in Display Mode.

1. While in Maintenance Mode, press AIR to scroll to **ID DISP**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **ID DISP** item in Maintenance Mode.
- 5. See "Entering Measuring Mode (START)" on page 93 to enter Measuring Mode.

#### **Turning the Zero Suppression On/Off (ZERO.SUP)**

The **ZERO.SUP** setting is not intended for field adjustment. The default setting is **ON**.

Sensor	Zero Suppression Value
СО	2 ppm
O <sub>2</sub>	0.5% volume

#### Turning the Zero Follower On/Off (ZERO.FLW)

The **ZERO.FLW** setting is not intended for field adjustment. The default setting is **ON**. The oxygen channel does not support zero follower functionality.

#### **User Mode Zero Suppression (ZSUP.DSP)**

**ON**: Zero suppression item appears in User Mode.

**OFF** (factory setting): Zero suppression item does not appear in User Mode. The zero suppression item is always available in Maintenance Mode.

It is not normally necessary to have the zero suppression item appear in User Mode. Contact RKI Instruments before turning this setting on.

#### **User Mode Zero Follower (ZFLW.DSP)**

**ON**: Zero follower item appears in User Mode.

**OFF** (factory setting): Zero follower item does not appear in User Mode. The zero follower item is always available in Maintenance Mode.

It is not normally necessary to have the zero follower item appear in User Mode. Contact RKI Instruments before turning this setting on.


#### Cylinder Setting (CYL.DISP)

**ON** (factory setting): **CYL SEL** item appears in User and Maintenance Modes' **GAS CAL** item.

OFF: CYL SEL item does not appear in User and Maintenance Modes' GAS CAL item.

#### **Setting the Date/Time (DATE)**

1. From the main menu, place the cursor next to **DATE**.



2. Press and release POWER/MODE. The date and time display with the year flashing.




- 3. Use AIR to display the desired year.
- 4. Press and release POWER/MODE to save the setting. The month setting flashes.
- 5. Repeat Step 3 and Step 4 to enter the month, day, hours, and minutes settings. The date and time are saved and the instrument returns to the **DATE** item in Maintenance Mode.
- 6. See "Entering Measuring Mode (START)" on page 93 to enter Measuring Mode.

### **Turning the Password On/Off (PASS-W)**

**ON** (factory setting): The GasWatch 3 prompts you for a password when you enter Maintenance Mode. The factory-set password is **3000** but it can be changed.

**OFF**: No password is required to enter Maintenance Mode.


1. While in Maintenance Mode, press AIR to scroll to **PASS-W**.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. If you selected **OFF**, press and release POWER/MODE to save the setting and return to the **PASS-W** item in User Mode.

If you selected **ON**, continue with Step 5.

5. Press and release POWER/MODE. The Set Password Screen appears. The current password displays and the first digit flashes.



- 6. Use AIR to display a number from 0 to 9.
- 7. Press and release POWER/MODE to enter the selection and advance to the next number. To go back a number, press and hold AIR and POWER/MODE for a few seconds.
- 8. Repeat Step 6 and Step 7 to select the remaining numbers. When you press and release POWER/MODE to enter the last number, the password is saved and the instrument returns to the **PASSWORD** item in Maintenance Mode.
- 9. See "Entering Measuring Mode (START)" on page 93 to enter Measuring Mode.

#### Viewing the ROM/SUM (ROM/SUM)

The ROM/SUM screen shows the instrument's firmware version and firmware checksum.

1. While in Maintenance Mode, press AIR to scroll to **ROM/SUM**.



2. Press and release POWER/MODE. The screen cycles through the main board's ROM/SUM and the sensor board's ROM/SUM. The ROM is the top value and the SUM is the bottom value.




- 3. Press and release POWER/MODE to return to the **ROM/SUM** item in Maintenance Mode.
- 4. See "Entering Measuring Mode (START)" on page 93 to enter Measuring Mode.


## Performing a Default (M.DEF)

Performing a default operation in Maintenance Mode returns all parameters to their RKI factory settings.


1. While in Maintenance Mode, press AIR to scroll to M.DEF.



2. Press and release POWER/MODE.

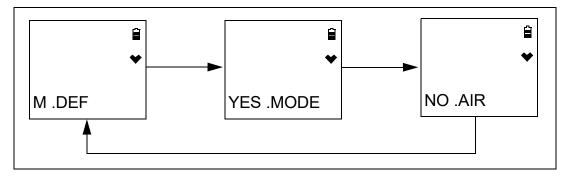


3. Press and release POWER/MODE to perform a default operation. The instrument asks if you are sure you want to perform a default operation.

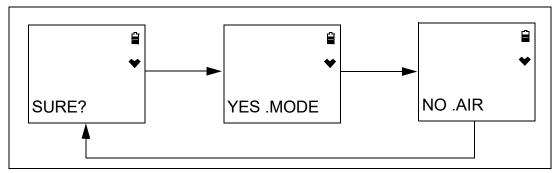

- 4. Press and release POWER/MODE to perform a default operation. The instrument beeps twice and returns to the **M.DEF** item in Maintenance Mode.
- 5. See "Entering Measuring Mode (START)" on page 93 to enter Measuring Mode.

#### **Entering Measuring Mode (START)**

1. While in Maintenance Mode, press AIR to scroll to **START**.



2. Press and release POWER/MODE. The instrument begins its warmup sequence.

## **Appendix B: Gas Select Mode**

#### **Overview**

This appendix describes the GasWatch 3 in Gas Select Mode. The GasWatch 3 is factory-set to suit most applications. Update settings in Gas Select Mode only if required for your specific application. A description of the Gas Select Mode items is shown in Table 12 below.


**Table 12: Gas Select Mode Menu Items** 

Menu Item (Page # of Description)	Description	
SAVE-AP (pg.95)	Set the current alarm points as the default alarm points.	
MAX SPAN (pg.96)	ON: Maximum span screen appears after a successful calibration. OFF (factory setting): No maximum span screen appears.	
STEALTH (pg.97)	STEALTH ON: No backlight, LED, or buzzer operation.  STEALTH OFF (factory setting): Backlight, LED, and buzzer operate normally.	
	This setting has no effect unless STEALTH is set to ON.  VIB ON: Vibrator activates for alarm conditions.  VIB OFF (factory setting): Vibrator does not activate in any situation.	
START (pg.97)	Enter Measuring Mode	


## **Entering Gas Select Mode**

WARNING: The GasWatch 3 is not in operation as a gas detector while in Gas Select Mode.

- 1. Take the GasWatch 3 to a non-hazardous location and turn it off if it is on.
- 2. Press and hold AIR, then press and hold POWER/MODE. You will hear a beep after one second. Continue to hold the buttons down.
- 3. You will hear a second beep. Continue to hold the buttons down.
- 4. When you hear a third beep, release the buttons.
- 5. A password screen appears and the first digit flashes. The password is **2014**.



- 6. Use AIR to select each password number then press POWER/MODE to save it and move on to the next number. To go back a number, press and hold AIR and POWER/MODE for a few seconds.
- 7. The **SAVE-AP** item displays.



8. Use AIR to move through the Gas Select Mode items.

#### Tips for Using Gas Select Mode

- To scroll from one item to the next, press and release AIR. To reverse the scrolling direction:
  - a. Press and hold AIR.
  - b. Immediately press POWER/MODE and then release both buttons.
  - c. The scrolling direction returns to the original direction when you exit and reenter a menu.
- To skip an item when a question is asked, press and release AIR.
- To enter an item and to save any changes, press and release POWER/MODE.
- To change a flashing parameter, press and release AIR. To reverse the direction of change (ie. from increasing to decreasing or vice versa):
  - a. Press and hold AIR.
  - b. Immediately press POWER/MODE and then release both buttons.
- To exit an entered item without saving a change, press and hold AIR and POWER/MODE for a few seconds.


#### **Saving the Alarm Points (SAVE-AP)**

Performing a SAVE-AP operation saves the current alarm setpoints.


Performing a **DEF.ALMP** operation in the **ALARM-P** User Mode menu sets the instrument's alarm points to those saved during the **SAVE-AP** operation (if performed).

Performing a **SAVE-AP** has no effect on an **M.DEF** in Maintenance Mode. An **M.DEF** operation returns all instrument settings to the RKI default regardless of if a **SAVE-AP** operation was performed.

1. While in Gas Select Mode, press AIR to scroll to **SAVE-AP**.



2. Press and release POWER/MODE. The display cycles through the following screens.

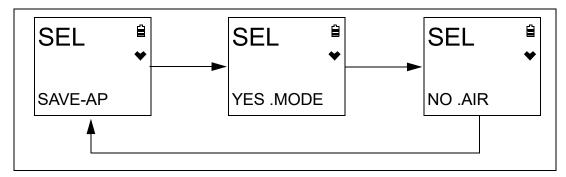


- 3. Press and release POWER/MODE to save the current alarm point settings as the default.
- 4. The instrument returns to the **SAVE-AP** item in Gas Select Mode.
- 5. See "Exiting Gas Select Mode (START)" on page 97 to enter Measuring Mode.

#### **Turning Calibration Max Span On/Off (MAX.SPAN)**

<u>ON</u>: After a passed calibration, the GasWatch 3 displays the response reading's maximum adjustment. A maximum span of 100 ppm on the CO channel indicates that the reading could have been adjusted up to 100 ppm. If the maximum span value is close to the calibration value, the sensor should be replaced soon. The upper limit on the maximum CO adjustment is either twice the calibration value or full scale, whichever is lower. The upper limit on the maximum oxygen adjustment is 25.0% volume.

**OFF** (factory setting): There is no maximum span indication at the end of a calibration.

1. While in Gas Select Mode, press AIR to scroll to MAX.SPAN.



- 2. Press and release POWER/MODE. The current setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE to save the setting and return to the **MAX.SPAN** item in Gas Select Mode.
- 5. See "Exiting Gas Select Mode (START)" on page 97 to enter Measuring Mode.

#### **Stealth and Vibrator Settings (STEALTH)**

#### **STEALTH**

#### ON:

- The instrument's backlight does not come on, regardless of the **BL TIME** setting.
- The instrument's LEDs do not come on for any reason, even alarm conditions.
- The instrument's buzzer does not sound for any reason, even alarm conditions.
- An "S" appears at the bottom of the LCD.

**OFF** (factory setting): The instrument's backlight, LEDs, and buzzer operate normally.

#### **VIB**

The VIB setting only affects instrument operation if STEALTH is set to ON.

**ON**: The vibrator activates for alarm conditions. It can be useful to have this feature turned on if you have also turned **STEALTH** on.

**OFF** (factory setting): The vibrator does not activate for any reason.

1. While in Gas Select Mode, press AIR to scroll to **STEALTH**.



- 2. Press and release POWER/MODE. The current **STEALTH** setting flashes.
- 3. Use AIR to display the desired setting.
- 4. Press and release POWER/MODE. The current **VIB** setting flashes.
- 5. Use AIR to display the desired setting.
- 6. Press and release POWER/MODE to save the setting and return to the **STEALTH** item in Gas Select Mode.
- 7. See "Exiting Gas Select Mode (START)" on page 97 to enter Measuring Mode.

#### **Exiting Gas Select Mode (START)**

1. While in Gas Select Mode, press AIR to scroll to START.



2. Press and release POWER/MODE. The instrument begins its warm-up sequence.

#### **Warranty**

RKI Instruments, Inc. warrants the GasWatch 3 sold by us to be free from defects in materials, workmanship, and performance for a period of three years from the date of shipment from RKI Instruments, Inc. This includes the instrument and the original sensor. Replacement parts are warranted for 1 year from the date of their shipment from RKI Instruments, Inc. except for replacement sensors which are warranted for 3 years. Any parts found defective within their warranty period will be repaired or replaced, at our option, free of charge. This warranty does not apply to those items which by their nature are subject to deterioration or consumption in normal service, and which must be cleaned, repaired, or replaced on a routine basis. Examples of such items are:

Absorbent cartridges

Filter elements, disks, or sheets

Pump diaphragms and valves

Warranty is voided by abuse including mechanical damage, alteration, rough handling, or repair procedures not in accordance with the instruction manual. This warranty indicates the full extent of our liability, and we are not responsible for removal or replacement costs, local repair costs, transportation costs, or contingent expenses incurred without our prior approval.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY AND ALL OTHER WARRANTIES AND REPRESENTATIONS, EXPRESSED OR IMPLIED, AND ALL OTHER OBLIGATIONS OR LIABILITIES ON THE PART OF RKI INSTRUMENTS, INC. INCLUDING BUT NOT LIMITED TO THE WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL RKI INSTRUMENTS, INC. BE LIABLE FOR INDIRECT, INCIDENTAL, OR CONSEQUENTIAL LOSS OR DAMAGE OF ANY KIND CONNECTED WITH THE USE OF ITS PRODUCTS OR FAILURE OF ITS PRODUCTS TO FUNCTION OR OPERATE PROPERLY.

This warranty covers instruments and parts sold to users only by authorized distributors, dealers, and representatives as appointed by RKI Instruments, Inc.

We do not assume indemnification for any accident or damage caused by the operation of this gas monitor and our warranty is limited to replacement of parts or our complete goods.