

Portable Toxic Gas Monitor  
SC-8000  
Data Logger Management Program  
SW-SC-8000  
**Operating Manual**

**Request for the Customers**

- Read and understand this operating manual before using the management program.
- Use the management program in accordance with the operating manual.

**RIKEN KEIKI Co., Ltd.**

**2-7-6 Azusawa, Itabashi-ku, Tokyo, 174-8744, Japan**

Phone : +81-3-3966-1113

Fax : +81-3-3558-9110

E-mail : [intdept@rikenkeiki.co.jp](mailto:intdept@rikenkeiki.co.jp)

Web site : <http://www.rikenkeiki.co.jp/>

## 1

# Preface

The operation procedures and precautions mentioned in this operating manual apply only for the specified use of the program. We do not hold ourselves responsible for uses not described in this operating manual.

This operating manual will not explain the basic common operations of Microsoft Windows 2000, Windows XP, Windows Vista and Windows 7, such as selecting commands or setting dialog boxes. First-time users of Windows should read the Windows manual in advance to learn common operations of the operating system.



## WARNING

This product is distributed on a special type of CD called "CD-ROM".  
Do not try to play this CD on a common audio CD player.  
Ignoring this warning may cause loud noise, resulting in hearing impairment or speaker damage.



## CAUTION

### Necessity of pointing devices

This software requires pointing devices such as a mouse or touchpad.  
Keyboard-only operation is not supported.

## 1-1. Purpose and features of this program

This program is used to download data collected by the data logger function featured in SC-8000 to a PC to use the data effectively.

There are the following advantages in downloading data collected by the data logger function:

- Gathered data can be viewed in a list.
- Gathered data can be viewed in graph and chart formats.
- Graph and chart data can be printed and stored on paper.
- Past data can be stored.
- Manual copying of data is no longer necessary.
- Able to know quickly which unit needs calibration, and perform calibration automatically.
- Able to manage more than one unit easily.

## Notice

- Copying or duplicating the content of this manual without our knowledge, in whole or in part, is prohibited unless otherwise specified in law.
- Due to the improvement of the product, the content of this operating manual might be amended without prior notice.
- It is necessary to agree with the Software License Agreement, separately provided, before using this product. Please consent that we assume you have agreed to this agreement when the package is opened.
- Utilization of the software other than for intended purposes is prohibited. If the operating manual is ignored when using the software, or the software is altered in any way, the safety and quality of the product might not be maintained. We will not be liable for any accidents caused by these conditions.

(c) Copyright 2010 Riken Keiki Co.,Ltd. All rights reserved.  
The copyright of this software is owned by RIKEN KEIKI.

Microsoft, Windows 2000, Windows XP, Windows Vista and Windows 7 are registered trademarks of Microsoft Corporation in the United States and other countries.

## <Contents>

1	Preface .....	1
1-1.	Purpose and features of this program .....	1
2	Installation and Uninstallation .....	4
2-1.	Precautions on operating environment.....	4
2-2.	Software installation.....	4
2-3.	Installation procedure .....	5
2-4.	Uninstallation .....	9
3	How to Operate .....	11
3-1.	Download screen.....	11
(1)	Download data from SC-8000 .....	13
(2)	Download instrument information .....	14
(3)	Download various data .....	15
(4)	Complete download.....	16
(5)	Clear data in the SC-8000 main unit .....	17
(6)	Turn off the power of the SC-8000 main unit.....	17
(7)	Switch to automatic mode .....	18
3-2.	Instrument Information screen.....	19
(1)	Data source type .....	20
(2)	Status information.....	20
(3)	Calibration history information .....	21
(4)	Alarm setpoint information.....	21
3-3.	Data screen .....	22
(1)	Delete data .....	23
(2)	View details of data.....	23
(3)	Summary pane .....	24
3-4.	Data View screen.....	27
(1)	Switch between table and graph views .....	28
(2)	Output to a printer.....	30
(3)	Save to a file.....	33
(4)	To view data summary simultaneously .....	34
(5)	Table details.....	35
(6)	Graph details .....	36
3-5.	Last Calibration screen.....	37
(1)	Change displayed contents .....	38
(2)	Output to a printer.....	39
(3)	Delete data .....	40
(4)	Change password.....	41
3-6.	Set screen .....	42
(1)	Change font and graph colors .....	43
(2)	Change status of the main unit.....	44
(3)	Send updates to the SC-8000 main unit.....	45
4	Data Maintenance .....	46
4-1.	Details of data storage structure.....	46
4-2.	Backup.....	46
5	Operating Precautions .....	47
6	Troubleshooting .....	48
7	IrDA Specifications.....	49
7-1.	About infrared communication.....	49
7-2.	Display of communication ready status .....	49
7-2-1.	Task bar icon when the operating system recognized SC-8000 .....	49
7-2-2.	Task bar icon when communication between the data logger program and the SC-8000 main unit is in progress .....	50
8	File Structure .....	51
8-1.	Current directory immediately after installation .....	51
8-2.	Current directory during operation.....	51
9	Software Specifications .....	52

## 2

# Installation and Uninstallation

## 2-1. Precautions on operating environment

This program can be used on Microsoft operating systems Windows 2000, Windows XP, Windows Vista and Windows 7. Please note that it cannot be used on other operating systems.

This program requires a maximum of 40 MB hard disk when it is installed. Moreover, on operation of the system, it requires hard disk capacity depending on the amount of data. Please use the program with sufficient disk capacity.



### CAUTION

#### Precautions on handling the CD-ROM

1. CD-ROM storage  
Do not store the CD-ROM in a place exposed to direct sunlight or a place with high temperature and humidity.
2. CD-ROM drive to use  
Avoid using a slot-loading CD-ROM drive.  
The label attached on the CD-ROM might prevent CD-ROM from ejecting properly.  
Use a tray-type CD-ROM drive.

## 2-2. Software installation

Insert a disk which stores data of the program to a CD-ROM drive of a Windows-based PC. After a while, an installation screen will automatically start.


When the PC does not support the auto-start function of the CD-ROM, operate as follows:

1. From Explorer, open the CD-ROM drive.
2. Double-click the "setup.exe" file.

## 2-3. Installation procedure

- Start the setup program


After inserting the CD-ROM and starting setup.exe, the following screen is displayed.

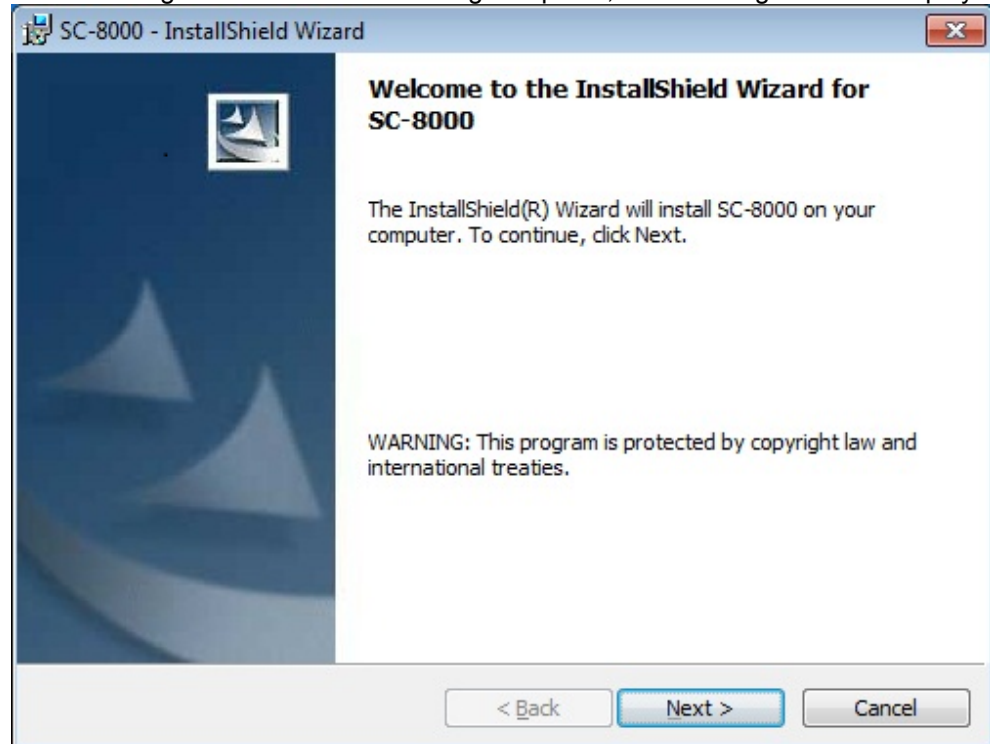

Click the Next button.

- Accept the license agreement

The following screen is displayed.

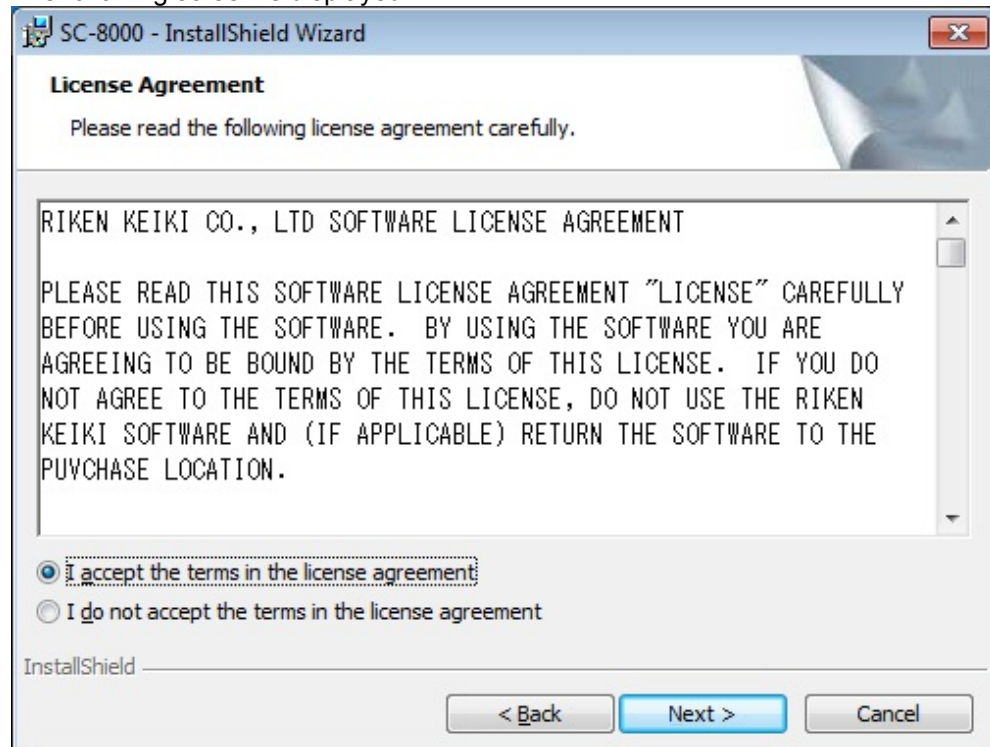


Click the Next button to continue the installation, or the Cancel button to abort the installation.

**Caution:** Fully understand the license agreement before continuing with the installation of the software.

- **Customer information**


Click the Next button to display the following screen.

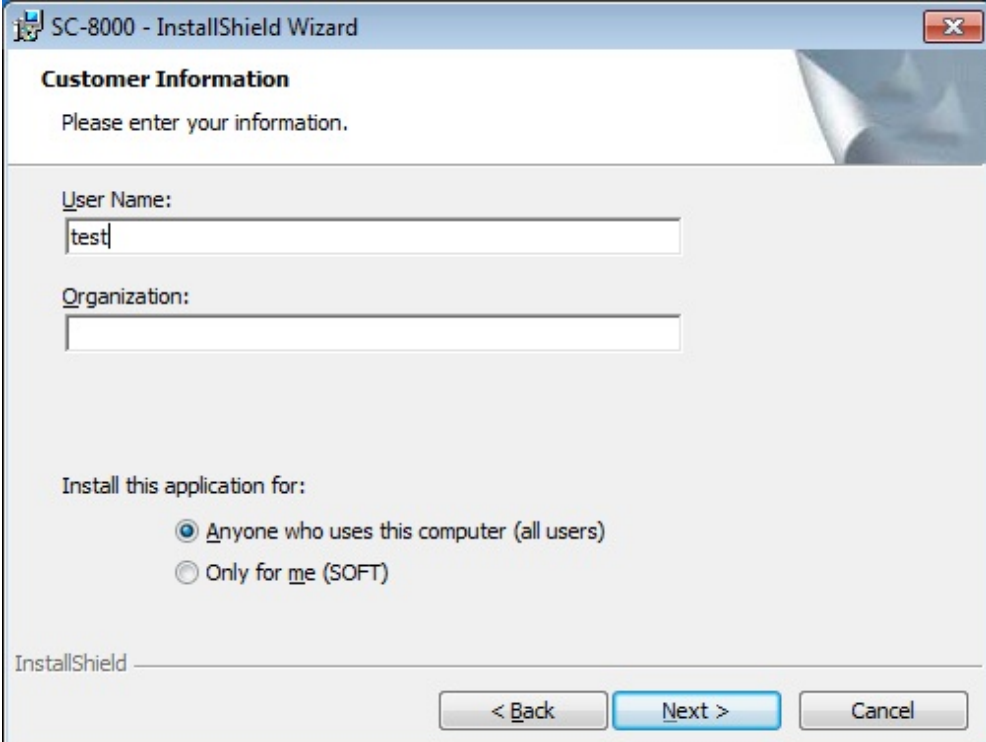

The screenshot shows the 'Customer Information' window of the SC-8000 - InstallShield Wizard. The window has a title bar with the text 'SC-8000 - InstallShield Wizard' and a close button. The main content area is titled 'Customer Information' and contains the instruction 'Please enter your information.' Below this, there are two text input fields: 'User Name:' with the text 'test' entered, and 'Organization:' which is empty. Further down, there is a section titled 'Install this application for:' with two radio button options: 'Anyone who uses this computer (all users)' (which is selected) and 'Only for me (SOFT)'. At the bottom of the window, there is a status bar with the text 'InstallShield' and three buttons: '< Back', 'Next >', and 'Cancel'.

Click the Next button.


- **Destination folder**

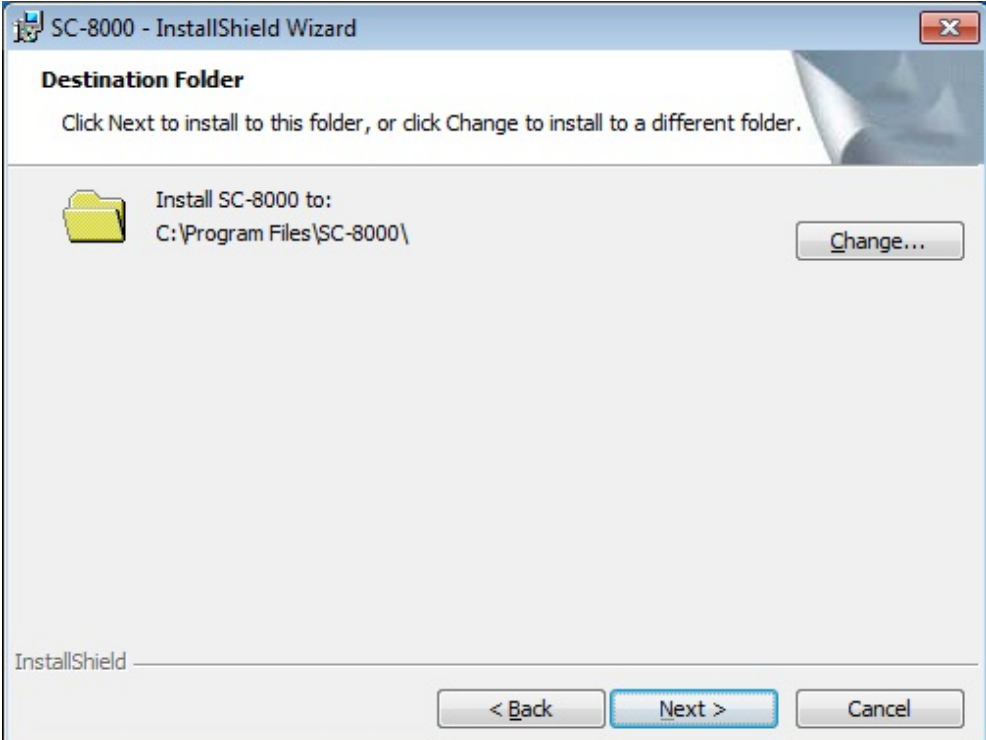

The screenshot shows the 'Destination Folder' window of the SC-8000 - InstallShield Wizard. The window has a title bar with the text 'SC-8000 - InstallShield Wizard' and a close button. The main content area is titled 'Destination Folder' and contains the instruction 'Click Next to install to this folder, or click Change to install to a different folder.' Below this, there is a folder icon and the text 'Install SC-8000 to: C:\Program Files\SC-8000\'. To the right of this text is a 'Change...' button. At the bottom of the window, there is a status bar with the text 'InstallShield' and three buttons: '< Back', 'Next >', and 'Cancel'.

Click the Next button.


- **Start setup**

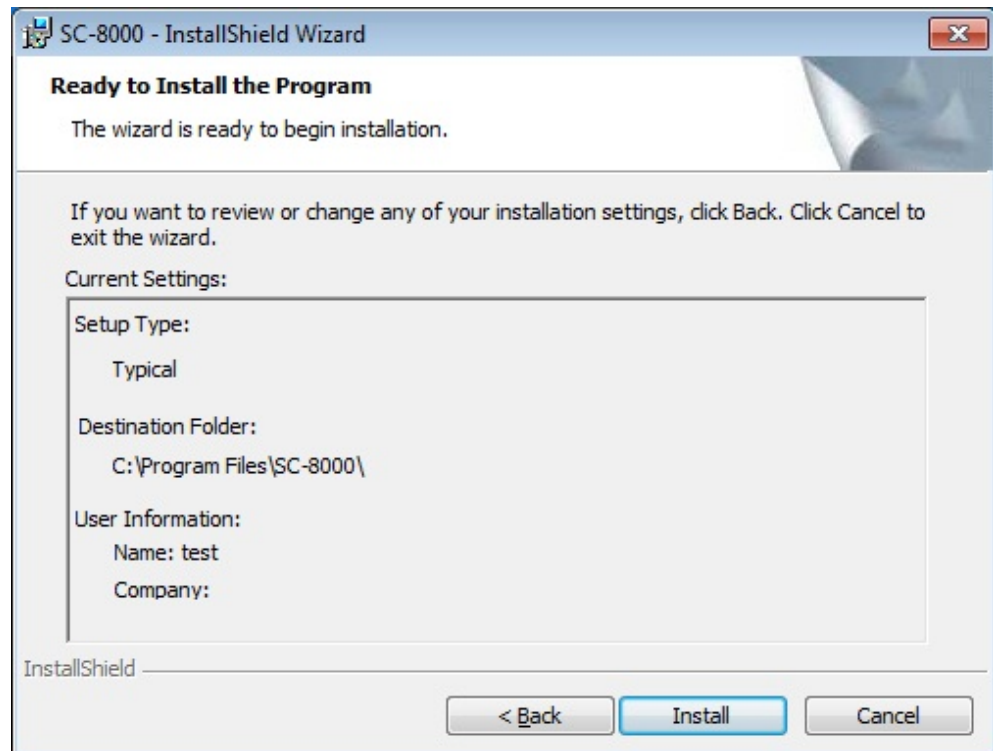

Click the Install button to start installation.

- **Complete**

When the setup process is completed, the following screen is displayed.

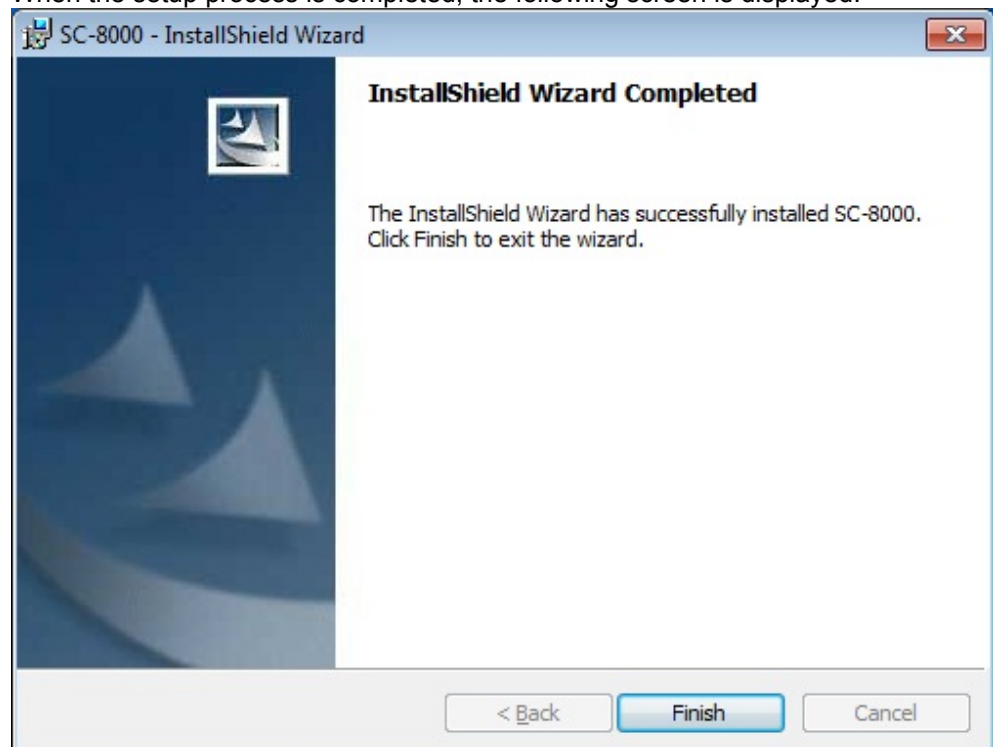

The program can be used immediately after setup.





## CAUTION

### Save past data for reinstallation

Please note the followings when reinstalling the software:

1. Uninstall the software before reinstallation.
2. If the software is uninstalled after some operation, some files will remain on the PC. Of these files, SC8000.mdb is a database file. If past data needs to be saved, copy this file to a different location, and then delete the folder.



## CAUTION

### Precautions when installing on Windows 2000/XP/Vista/7

This software requires a library, which consists of files such as various drivers, installed on the Windows system. The files are installed automatically during the installation of the software.

When using Windows 2000, XP, Vista or 7, installation of the system library requires administrator privileges.

In this case, follow the instructions to log in as an administrator, and then install the system library. After installation, a dialog prompts to restart the system. Restart, log on again as a general user, and install the application.

(Both the library and the application are installed by clicking setup.exe in the CD-ROM. Installation with an administrator privilege is required only when the required library is not installed in the system folder.)

### When using the software under a network-connected environment

When installed on a network-connected PC running Windows 2000/XP/Vista/7, check the following points.

IrDA communication utilizes a subset of TCP/IP technology (the communication technology used for the Internet, etc.) and uses a special set of communication groups and IP addresses.

Because of this, some strong Internet security software might reject communication.

If possible, use a computer that is not connected to the network.


When using a computer connected to the network, use with sufficient considerations on security settings.

## 2-4. Uninstallation

- **Startup**

To uninstall the software, from the Start menu of the Windows bar, click Settings and then start Control Panel.

Control Panel (example)

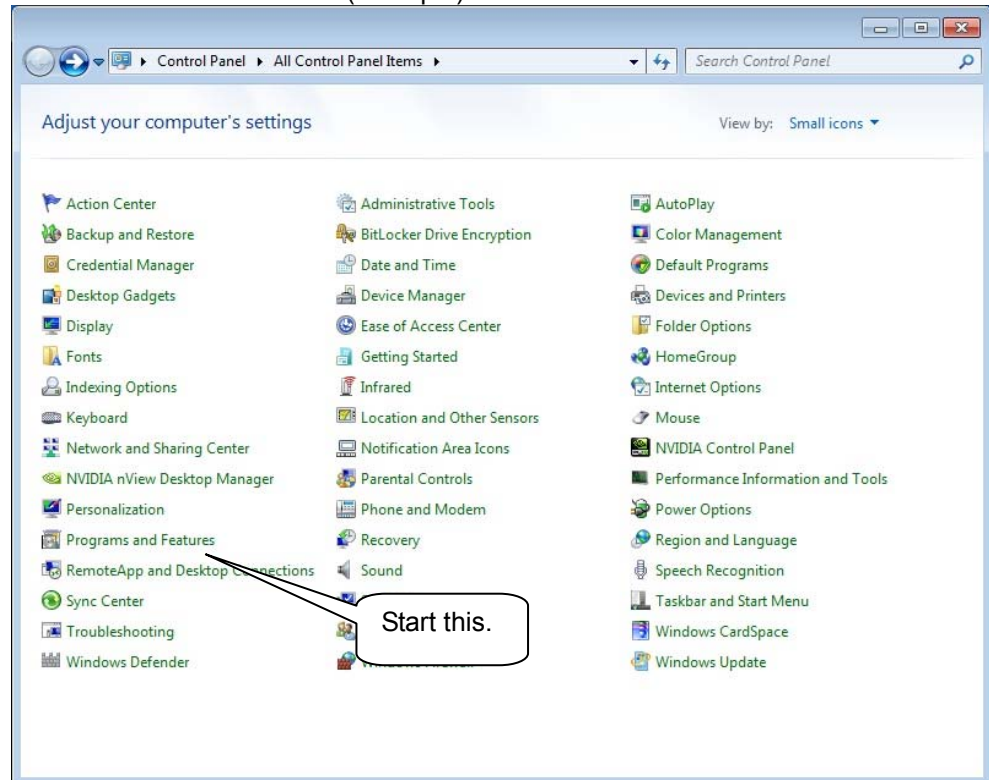


From the Control Panel, double-click Add or Remove Programs or Uninstall a Program to start.

- **Select SC-8000**


When Add or Remove Programs or Uninstall a Program is double-clicked, the following screen is displayed.

Uninstallation Screen (example)

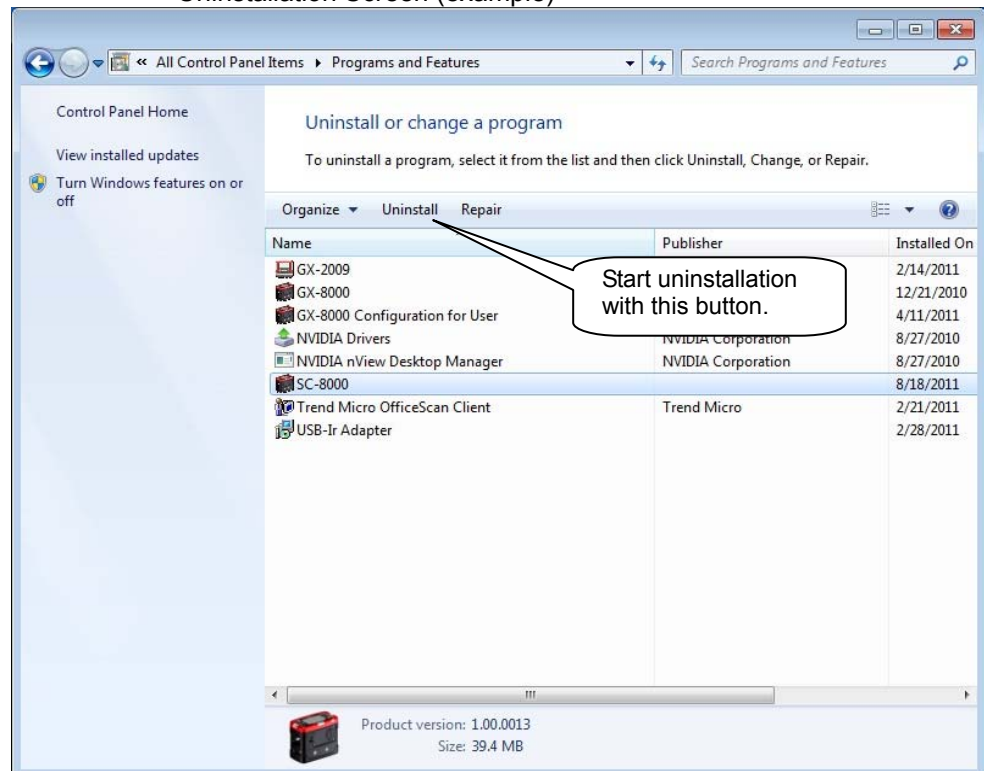

- **Start deletion**

Select SC-8000 and click the Remove button.

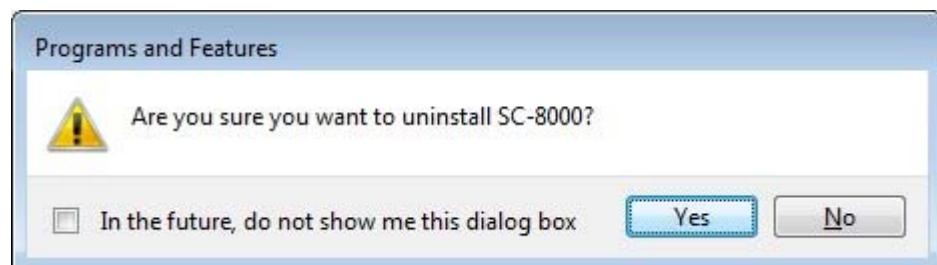

Click Yes to start the uninstallation.

**CAUTION:** A message, "Do you want to remove the shared file?" might be displayed during uninstallation. Select No to All. Selecting Yes to All might affect other applications.


## 3

# How to Operate

Double-click the SC-8000 desktop shortcut, or click the Start Menu, select Programs and click the SC-8000 program icon.

## 3-1. Download screen

After the splash screen, the download screen is displayed.

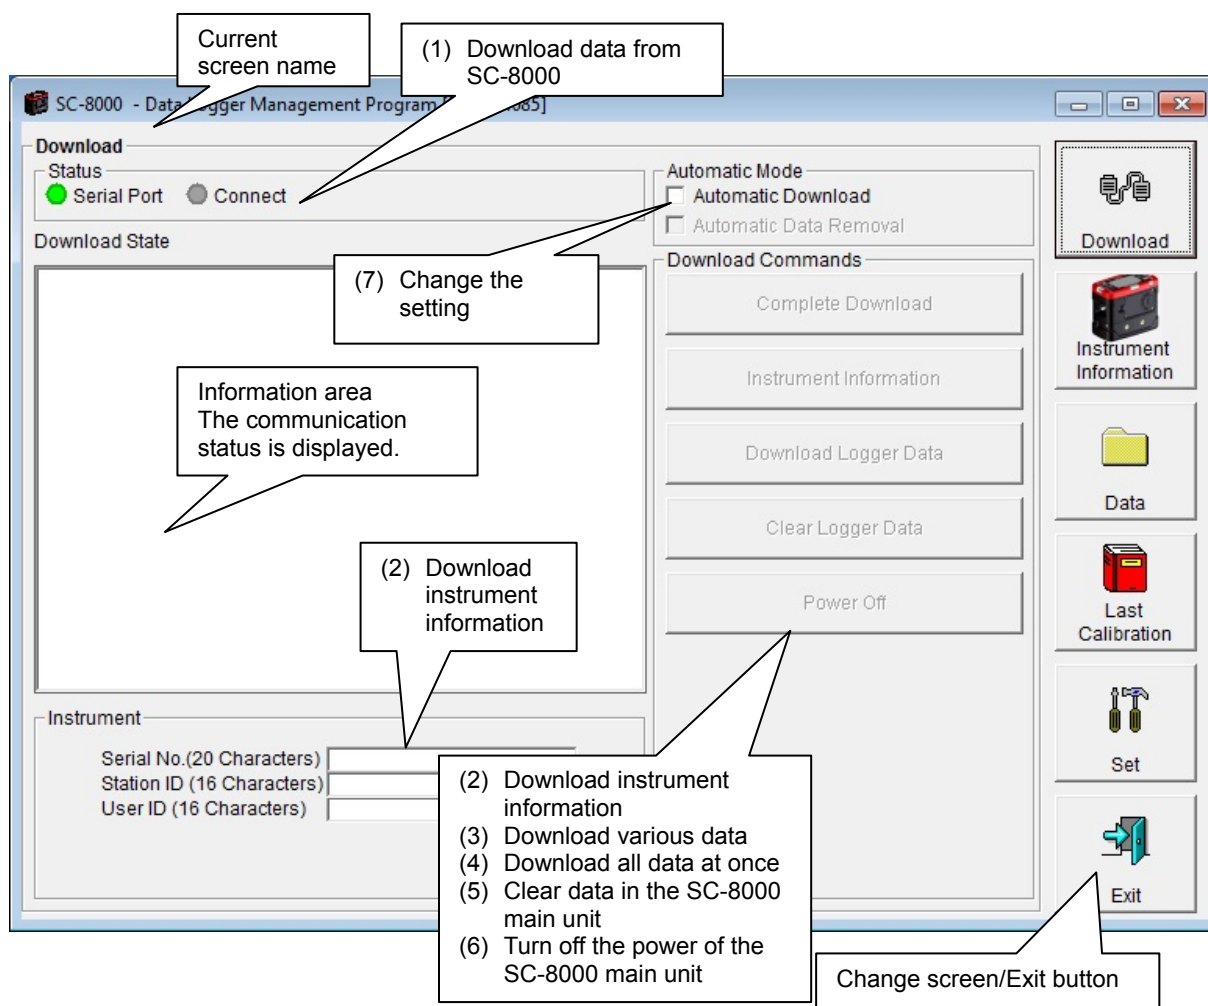

To perform data communication, place the SC-8000 main unit to an appropriate position, and with the program activated, turn on the power of the main unit. The program automatically judges whether or not communication is possible. If possible, the PC will be ready to receive the data.

\* When communicating, place the SC-8000 main unit and the IrDA port of the PC face-to-face at a distance under 10 cm.

**CAUTION:**

Communication is not performed when the SC-8000 main unit is performing a measurement. To perform communication when measurement is in progress, turn off the SC-8000 main unit, and then turn on the SC-8000 main unit with the program activated.

## (1) Download data from SC-8000

- Prepare the main unit

1. Start the software.
2. With the SC-8000 main unit powered off, move it to a position capable of communication.
3. Turn on the SC-8000 main unit.

**CAUTION:**


**Make sure to turn on the power of SC-8000 after placing it to a position capable of communication.**

**Communication will not be established when it is placed at a position capable of communication with the power turned on.**

The message will be displayed as shown on the right on the LCD screen of the SC-8000 main unit. →  
(Due to the display resolution of SC-8000, the message will be somewhat difficult to read.)

PC  
■TRANSMIT

The following message is displayed in the Information Area.

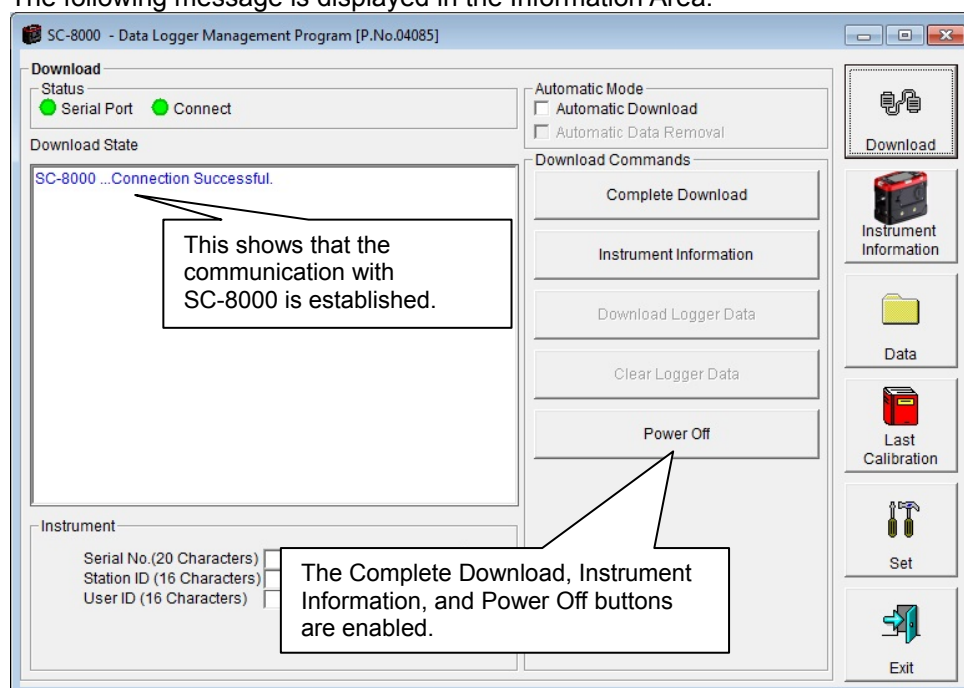**CAUTION:**

**If the content of the Information Area is different from above, turn off the power of the SC-8000 main unit, check the position of the unit, and then turn on the power again.**

When communication is established, the Status area changes as follows.

**Serial Port:**

Communication available: Green (PC port ready)

Communication not available: Red

**Connect:**


Communication ready: Gray

Communication in progress: Green

## (2) Download instrument information



- **Download instrument information**

First, click the Instrument Information button to download instrument information data.

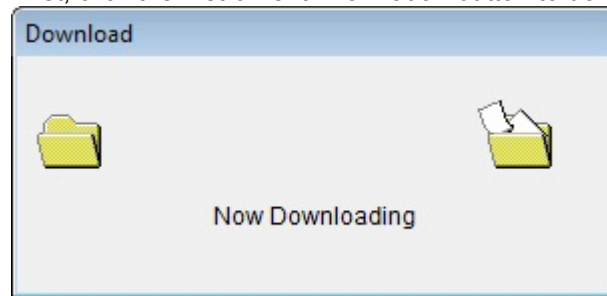

An animation is displayed during download.

When the Instrument Information data is downloaded, the content of the Instrument Information area is updated and the Download Logger Data and Clear Logger Data buttons are enabled.

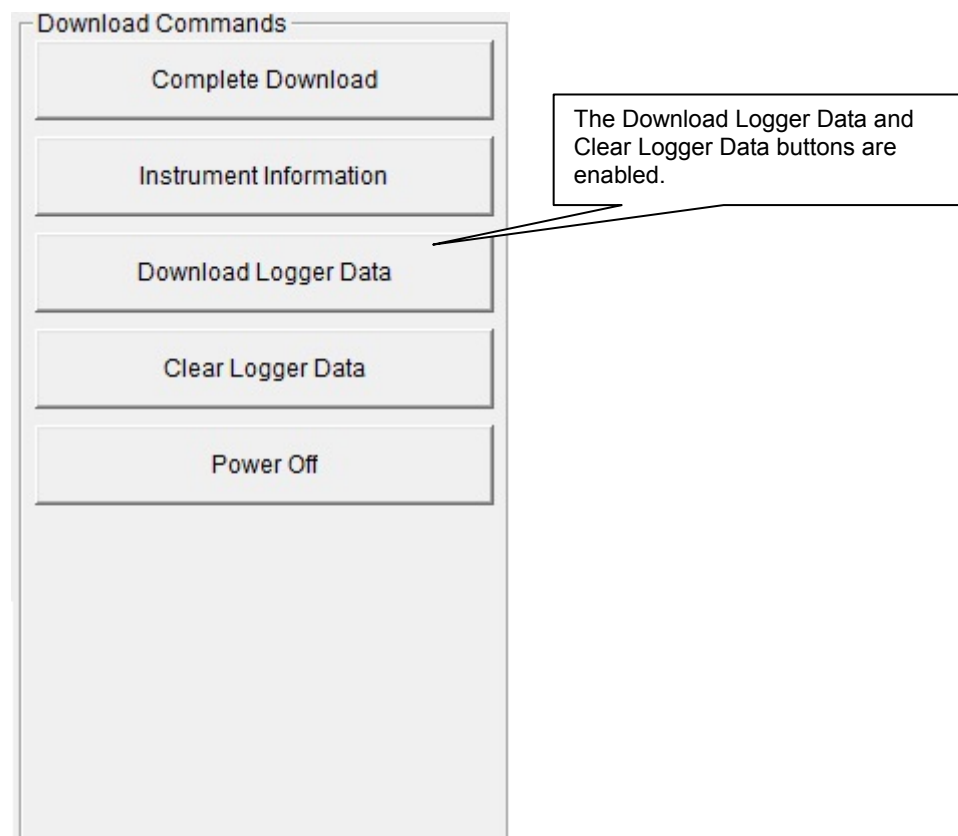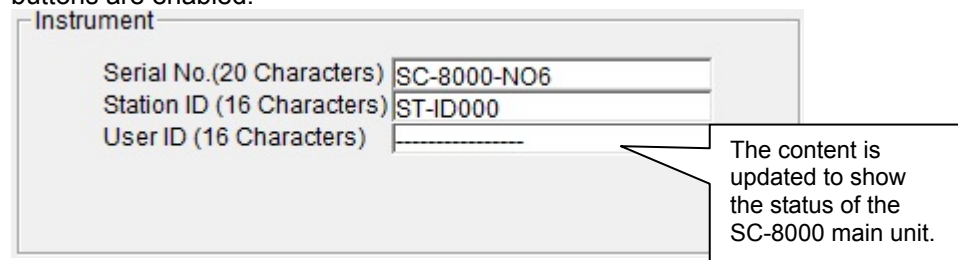


## (3) Download various data

- Trend data
- Event data

After the instrument information data is downloaded using the Instrument Information button, the Download Logger Data button is enabled.

Click the Download Logger Data button.

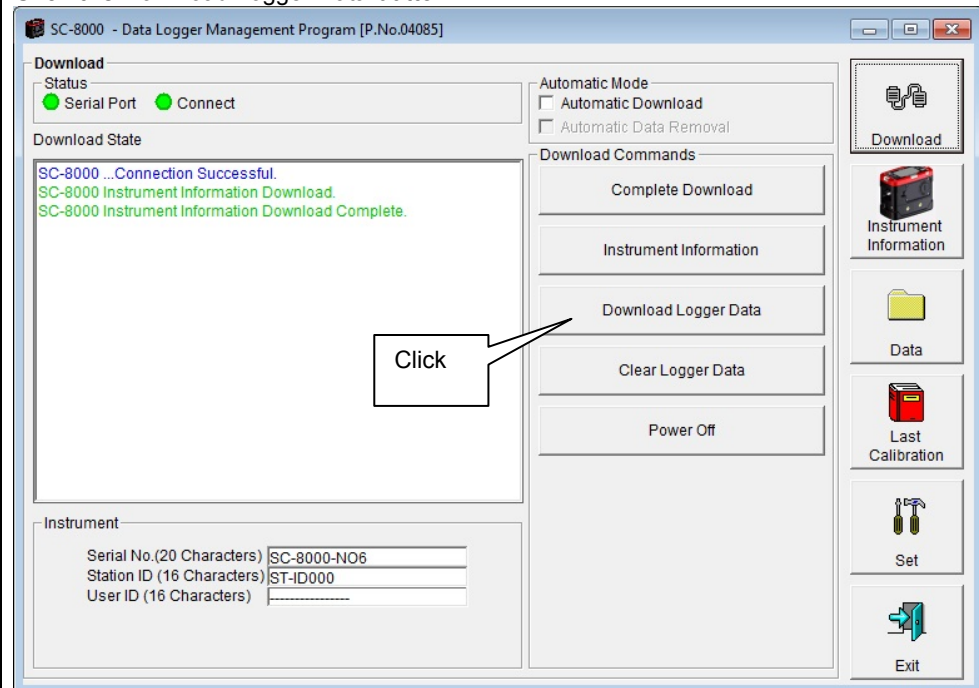

The download status is displayed in the information area.

**CAUTION:**

During download of each data, other data accesses are prohibited. Therefore, other download buttons and the Set button are disabled.




## (4) Complete download

- **Complete download**

The Complete Download button downloads Instrument Information, Interval Trend, Alarm Trend, Alarm Events, Trouble Events, and Power Events data at once.

Click the Complete Download button.

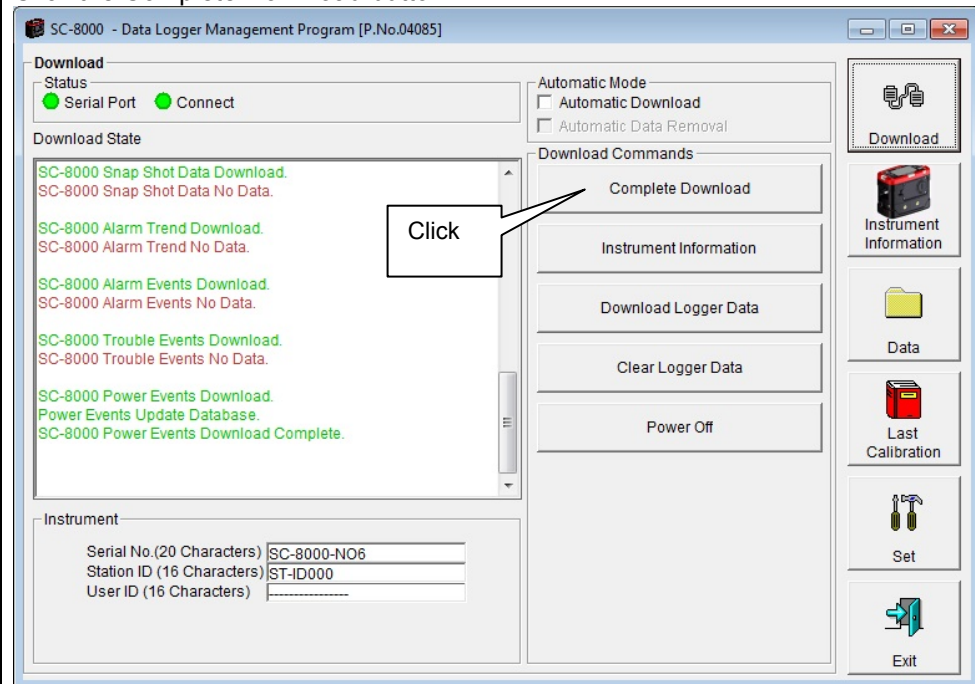

The download status is displayed in the information area.

**CAUTION:**


During download of each data, other data accesses are prohibited. Therefore, other download buttons and the Set button are disabled.

## (5) Clear data in the SC-8000 main unit

• **Clear data**

Use the Clear Logger Data button to delete various data stored inside SC-8000.

Click the Clear Logger Data button.

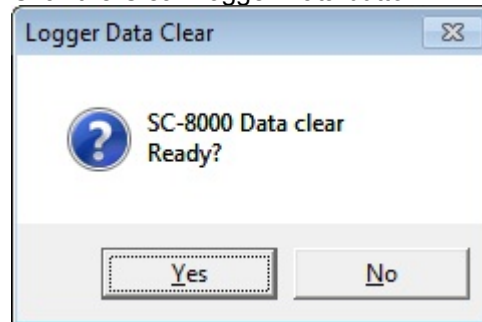


Click Yes to start clearing the data.

## (6) Turn off the power of the SC-8000 main unit

• **Power OFF**

Use the Power Off button to turn off the power of the SC-8000 main unit and initialize the serial port of the PC.

1. Click the Power Off button.


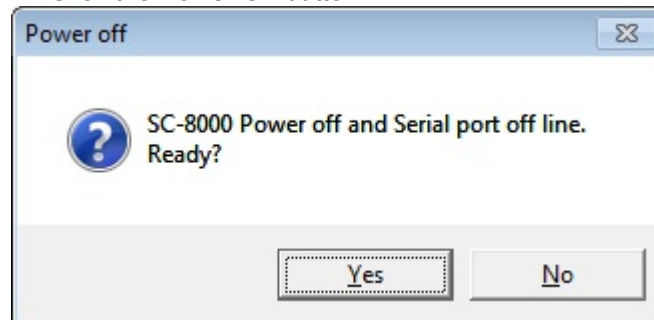


Click the Yes button to start the power off process of the SC-8000 main unit. After the serial port of the PC is initialized, it will be reset to the data download ready status.

## (7) Switch to automatic mode

- **Automatic Download**

1. Mark the Automatic Download checkbox. (If not marked yet.)

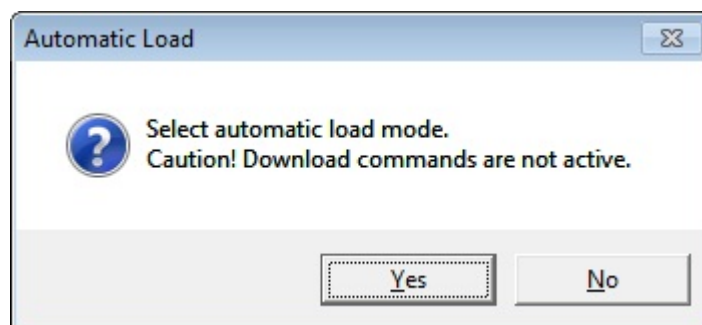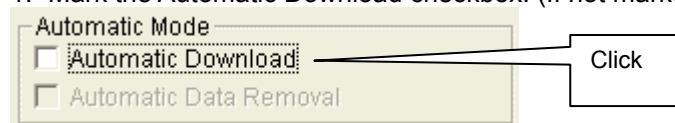



Click Yes to switch to Automatic Download.  
Click No to cancel mode change.

- **Automatic Data Removal**

In this mode, after the SC-8000 main unit is powered on, the PC automatically downloads complete data and then turns off the power of the SC-8000 main unit. During automatic download, manual download is not available.

When Automatic Download is used, downloaded data can be automatically removed after download.

1. Mark the Automatic Data Removal checkbox.

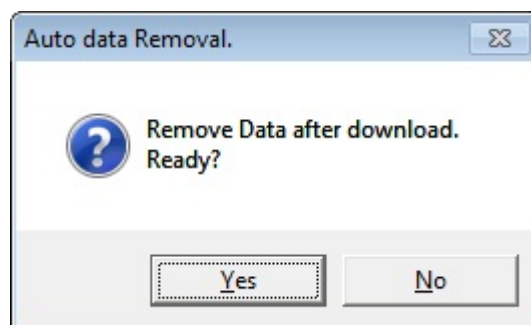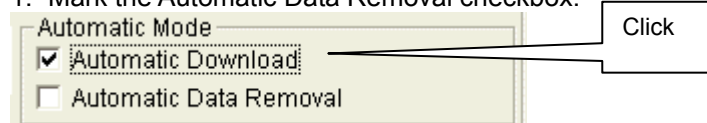

Click Yes to **automatically remove data stored in SC-8000 after downloading complete data.**

\* This setting is useful for shortening download time when repeating download and data removal processes.

## 3-2. Instrument Information screen

Click the Instrument Information button at the right side of the screen to switch to the following screen. This screen lists instrument information data for the currently connected SC-8000 main unit.

The screenshot shows the 'Instrument Information [Connected]' window. It contains several sections and a sidebar on the right.

**Callouts:**

- (1) Data source type: Points to the 'SC-8000 Status' section.
- (2) Status information: Points to the 'Serial No. (20 Characters)' field.
- (3) Calibration history information: Points to the 'Calibration History' table.
- (4) Alarm setpoint information: Points to the 'Warning and Alarm point' table.
- Click this button: Points to the 'Instrument Information' button in the sidebar.

**Instrument Information [Connected]**

SC-8000 Status

Serial No. (20 Characters)  
SC-8000-NO6

Station ID (16 Characters)  
ST-ID000

User ID (16 Characters)  
\_\_\_\_\_

**Calibration History**

Gas	Calib.Date	Before	After	A.Cal.	Cal.Due(Days)
CO(300ppm)	4/14/2011	----	----	20	Now

**Warning and Alarm point**

Gas	Warning	Alarm	STEL	TWA
CO(300ppm)	100	200	----	----

**Sidebar:**


- Download
- Instrument Information (Selected)
- Data
- Last Calibration
- Set
- Exit

**CAUTION:** This screen is read-only. Modification of data is not supported. -> See "3-6. Set screen". When the Instrument Information data is not downloaded, no data is displayed.

## (1) Data source type

- **Data source information**


When the information of the multi-gas monitor main unit is displayed, the text Connected is displayed.

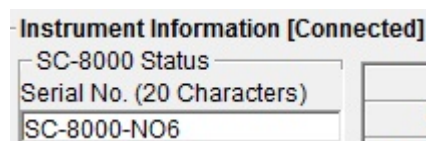

The screenshot shows a window titled "Instrument Information [Connected]". Inside, there is a section for "SC-8000 Status" which includes a label "Serial No. (20 Characters)" and a text box containing "SC-8000-NO6".

## (2) Status information

- **Information details**

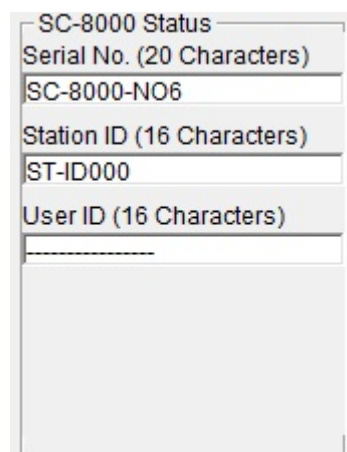

The screenshot shows a window titled "SC-8000 Status". It contains three labels with corresponding text boxes: "Serial No. (20 Characters)" with "SC-8000-NO6", "Station ID (16 Characters)" with "ST-ID000", and "User ID (16 Characters)" with an empty box.

Serial No, Station ID, and User ID stored inside the main unit are displayed.

**CAUTION: This column is read-only. Modification of the data is not supported.**

## (3) Calibration history information

- Calibration history details

Calibration History					
Gas	Calib.Date	Before	After	A.Cal.	Cal.Due(Days)
CO(300ppm)	4/14/2011	----	----	20	Now

Details:

Gas: Measured gas name (unit)  
 Calib.Date: Date of last calibration  
 Before: Concentration before last calibration  
 After: Concentration after last calibration/calibration failure  
 A.Cal.: Calibration gas concentration  
 Cal.Due (Days): Guaranteed operating time without another calibration (when the remaining time reaches 1 month, this item is displayed in red to indicate a warning).

## (4) Alarm setpoint information

- Details


Warning and Alarm point				
Gas	Warning	Alarm	STEL	TWA
CO(300ppm)	100	200	----	----

Details:

Gas: Measured gas name  
 Warning: Concentration at first alarm setpoint  
 Alarm: Concentration at second alarm setpoint  
 STEL: Concentration at STEL alarm setpoint  
 TWA: Concentration at TWA alarm setpoint

## 3-3. Data screen

Click the Data button at the right side of the screen to switch to the following screen and view the list of downloaded data.

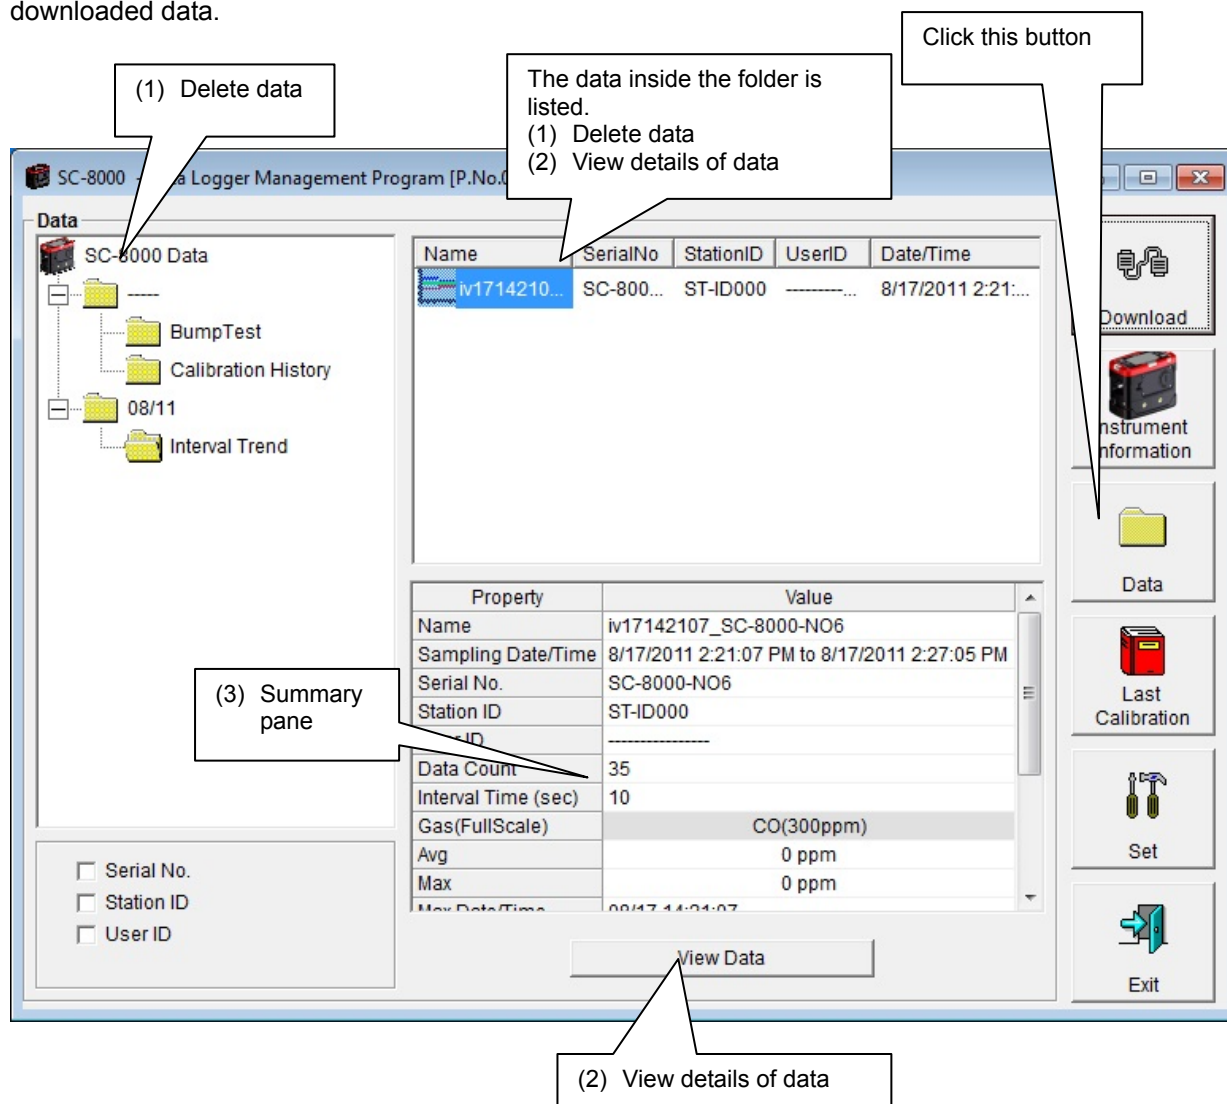

The operation of this screen is similar to the Windows Explorer. However, the following operations are not supported.

1. Rename data.
2. Move the data to another location.

Folders are displayed in an Explorer-like manner, with serial numbers, station IDs, and User IDs displayed hierarchically in this order.

Folders and data names are formed under the following rules.

Folder name: 12/09 = Data of December 2009.

File name: iv15152831\_12345678901234567890 = Interval trend, 15th day, 15:28:31 (Start date and time of logging)


al18144738\_12345678901234567890 = Alarm trend, 18th day, 14:47:38 (Date and time of alarm occurrence)

The limit of data items to be stored in each folder depends on the memory limit of the PC. However, to maintain response speed, back up data files at least once a year. See "4. Data Maintenance".

## (1) Delete data

## • Delete


1. Click to select the data or folder to delete.
2. Right-click there (without moving the mouse).

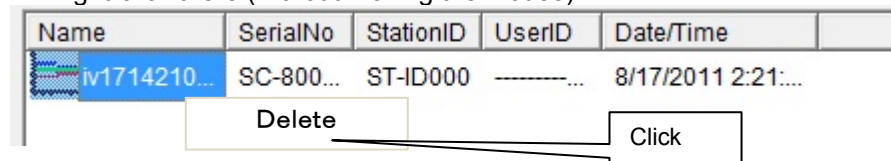

The Delete menu is displayed. Click Delete.


## • Input password

1. The Password dialog is prompted. Enter the password and press the Continue button.

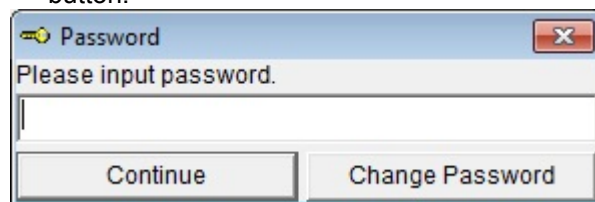

**CAUTION:** When Continue is pressed without entering the password, the delete operation is canceled.

2. When Continue is pressed with an appropriate password, the following message is displayed.

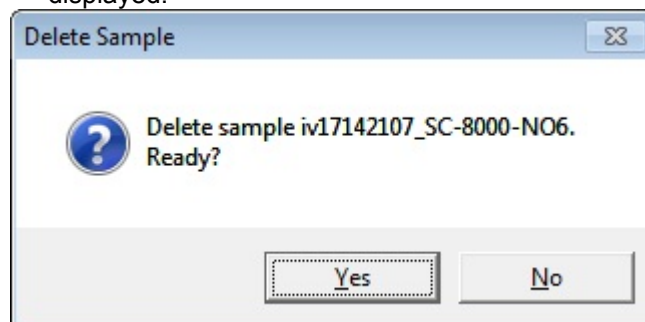

Click the Yes button to delete the data.

Click the No button to cancel deletion of data.

## (2) View details of data

## • View data

1. Click the data to be viewed in detail. Check that the summary of the data is displayed in the summary pane, and click the View Data button.

or

2. Double-click the data to be viewed in detail.

For details on how to use the data details screen, see -> "3-4. Data View screen".



## (3) Summary pane

## • Details

When the selected data is a normal data, the summary of the data is displayed.  
Interval trend

Property	Value
Name	iv17142107_SC-8000-NO6
Sampling Date/Time	8/17/2011 2:21:07 PM to 8/17/2011 2:27:05 PM
Serial No.	SC-8000-NO6
Station ID	ST-ID000
User ID	-----
Data Count	35
Interval Time (sec)	10
Gas(FullScale)	CO(300ppm)
Avg	0 ppm
Max	0 ppm
Max Date/Time	08/17 14:21:07
Min	*****
Min Date/Time	*****
Warning	100 ppm
Alarm	200 ppm
STEL	*****
TWA	*****

Name: Name of data  
 Sampling Date/Time: Start and end of sampling date/time  
 Serial No./Station ID/User ID: Status of the SC-8000 main unit  
 Data Count: Number of sampled data  
 Interval Time (sec): Sampling interval (sec)  
 Gas(FullScale): Gas (full scale)  
 Avg: Average value of gas  
 Max: Maximum value of gas data  
 Max Date/Time: Date/time when the maximum value is logged  
 Min: Minimum value of gas data  
 Min Date/Time: Date/time when the minimum value is logged  
 Warning: First alarm setpoint  
 Alarm: Second alarm setpoint  
 STEL: STEL alarm setpoint  
 TWA: TWA alarm setpoint

## Alarm trend

Property	Value
Name	al02002801_-----
Alarm Date/Time	1/2/2009 12:28:01 AM
Serial No.	-----
Station ID	-----
User ID	-----
Data Count	720
Interval Time (sec)	5
Gas(FullScale)	CO(75.0ppm)
Value	29.0 ppm
Warning	25.0 ppm
Alarm	50.0 ppm
STEL	*****
TWA	*****

Name: Name of data  
 Alarm Date/Time: Date/time when the alarm occurred  
 Serial No./Station ID/User ID: Status of the SC-8000 main unit  
 Data Count: Number of sampled data  
 Interval Time (sec): Sampling interval  
 Gas(FullScale): Gas (full scale)  
 Value: Concentration when the alarm is occurred  
 Warning: First alarm setpoint  
 Alarm: Second alarm setpoint  
 STEL: STEL alarm setpoint  
 TWA: TWA alarm setpoint

## Calibration history

DateTime	Gas	Before	After
8/17/2011 11:28:28 AM	CO(300ppm)	0 ppm	----
8/17/2011 11:26:57 AM	CO(300ppm)	0 ppm	----

DateTime: Date and time when the event occurred  
 Gas: Gas  
 Before: Concentration before calibration  
 After: Concentration after calibration

## Alarm events

DateTime	Gas	Event
4/4/2011 1:12:22 PM	CO(150ppm)	WARNING
3/30/2011 4:25:27 PM	CO(150ppm)	WARNING
3/30/2011 4:14:12 PM	CO(150ppm)	WARNING
3/23/2011 3:42:40 PM	CO(150ppm)	WARNING
3/17/2011 2:04:12 PM	CO(150ppm)	WARNING
3/4/2011 3:25:38 PM	CO(150ppm)	WARNING
3/3/2011 5:10:45 PM	CO(150ppm)	WARNING
2/23/2011 4:11:55 PM	CO(150ppm)	WARNING
...	Total	24 Datas

DateTime:

Date and time when the event occurred

Gas:

Naturally occurring or produced gas

Event:

Event type

## Trouble events

DateTime	Gas/Body	Event
6/7/2011 10:49:55 AM	Body	Fail(Li-ion)
6/7/2011 10:48:53 AM	Body	Fail(Li-ion)
6/7/2011 10:47:07 AM	Body	Fail(Li-ion)
6/7/2011 10:40:29 AM	Body	Fail(Li-ion)
6/6/2011 3:07:59 PM	Body	Fail(Li-ion)
5/30/2011 1:18:45 PM	Body	Fail(Li-ion)
5/28/2011 2:40:04 PM	Body	Fail(Li-ion)
5/23/2011 9:56:13 AM	Body	Fail(Li-ion)
...	Total	23 Datas

DateTime:

Date and time when the event occurred

Gas/Body:

Naturally occurring or produced gas, or the SC-8000 main unit (Body)

Event:

Event type

## Bump test

DateTime	Gas	Test Result	Concentration	Judge
8/17/2011 2:16:10 PM	CO(300ppm)	14 ppm	20 ppm	PASS
8/17/2011 2:14:42 PM	CO(300ppm)	14 ppm	20 ppm	PASS
8/17/2011 2:12:51 PM	CO(300ppm)	14 ppm	40 ppm	FAIL
8/17/2011 2:12:09 PM	CO(300ppm)	14 ppm	40 ppm	FAIL
8/17/2011 11:27:57 AM	CO(300ppm)	0 ppm	200 ppm	FAIL
8/17/2011 11:26:27 AM	CO(300ppm)	0 ppm	200 ppm	FAIL

DateTime:

Date and time when the event occurred

Gas:

Gas

Test Result:

Test result concentration

Concentration:

Test gas concentration

Judge:

Test judgment

## 3-4. Data View screen

This screen displays the details of each data in a table or a graph.

The screenshot shows the 'Data View(Interval Trend)' window. It has a menu bar with 'Table', 'Graph', 'Event Only', and 'Condensed'. Below the menu are buttons for 'Print', 'Export', 'Summary', and 'Return'. The main area displays a table of data with columns 'No', 'Date/Time', and 'CO(75.0ppm)'. The table contains 9 rows of data. To the right of the table is a sidebar with icons for 'Download', 'Instrument Information', 'Data', 'Last Calibration', 'Set', and 'Exit'. Callouts point to the 'Table' button (1), the 'Print' button (2), the 'Export' button (3), and the 'Summary' button (4).

(1) Switch between table and graph views

(2) Output to a printer

(3) Save to a file

(4) To view data summary simultaneously

No	Date/Time	CO(75.0ppm)
1	1/2/2009 12:27:06 AM	Fail(BIAS)
2	1/2/2009 12:28:01 AM	WARNING
3	1/2/2009 12:28:04 AM	NORMAL
4	1/2/2009 12:28:04 AM	Fail(FLOW)
5	1/2/2009 12:28:05 AM	WARNING
6	1/2/2009 12:28:05 AM	NORMAL
7	1/2/2009 12:28:32 AM	NORMAL
8	1/2/2009 12:28:32 AM	Fail(FLOW)
9	1/2/2009 12:28:34 AM	NORMAL

☐ Event Only: Displays event data only.

☐ Condensed: Displays data which shows some change in sample data.

**CAUTION: Graph is not available when the number of samples is five or less.**

In the table for the Alarm Trend data, the data where the alarm occurred is painted in red.

Among the event data, when the mouse cursor is pointed to WARNING, ALARM, or OVER, the cursor changes to the following.

When in this state, clicking the cell triggers a search for the corresponding trend data. If it exists, it can be displayed in a separate screen.



In case of WARNING, ALARM, OVER

The separate screen displayed in case of WARNING, ALARM, OVER.  
Click the Return button to turn off the screen.


No	Date/Time	CO(75.0ppm)
300	1/2/2009 12:27:06 AM	0.0 ppm
301	1/2/2009 12:27:11 AM	0.0 ppm
302	1/2/2009 12:27:16 AM	0.0 ppm
303	1/2/2009 12:27:21 AM	0.0 ppm
304	1/2/2009 12:27:26 AM	0.0 ppm
305	1/2/2009 12:27:31 AM	0.0 ppm
306	1/2/2009 12:27:36 AM	0.0 ppm
307	1/2/2009 12:27:41 AM	0.0 ppm
308	1/2/2009 12:27:46 AM	0.0 ppm
309	1/2/2009 12:27:51 AM	0.0 ppm
310	1/2/2009 12:27:56 AM	0.0 ppm
311	1/2/2009 12:28:01 AM	41.5 ppm
312	1/2/2009 12:28:06 AM	40.5 ppm
313	1/2/2009 12:28:11 AM	40.5 ppm
314	1/2/2009 12:28:16 AM	40.5 ppm
315	1/2/2009 12:28:21 AM	0.0 ppm
316	1/2/2009 12:28:26 AM	0.0 ppm
317	1/2/2009 12:28:31 AM	0.0 ppm
318	1/2/2009 12:28:36 AM	0.0 ppm
319	1/2/2009 12:28:41 AM	0.0 ppm
320	1/2/2009 12:28:46 AM	0.0 ppm
321	1/2/2009 12:28:51 AM	0.0 ppm
322	1/2/2009 12:28:56 AM	0.0 ppm
323	1/2/2009 12:29:01 AM	0.0 ppm

\* In the table for the Alarm Trend data, the data where the alarm occurred is painted in red.


## (1) Switch between table and graph views

- Switch to graph view

1. From the Table and Graph radio buttons at the top left of the screen, select Graph.

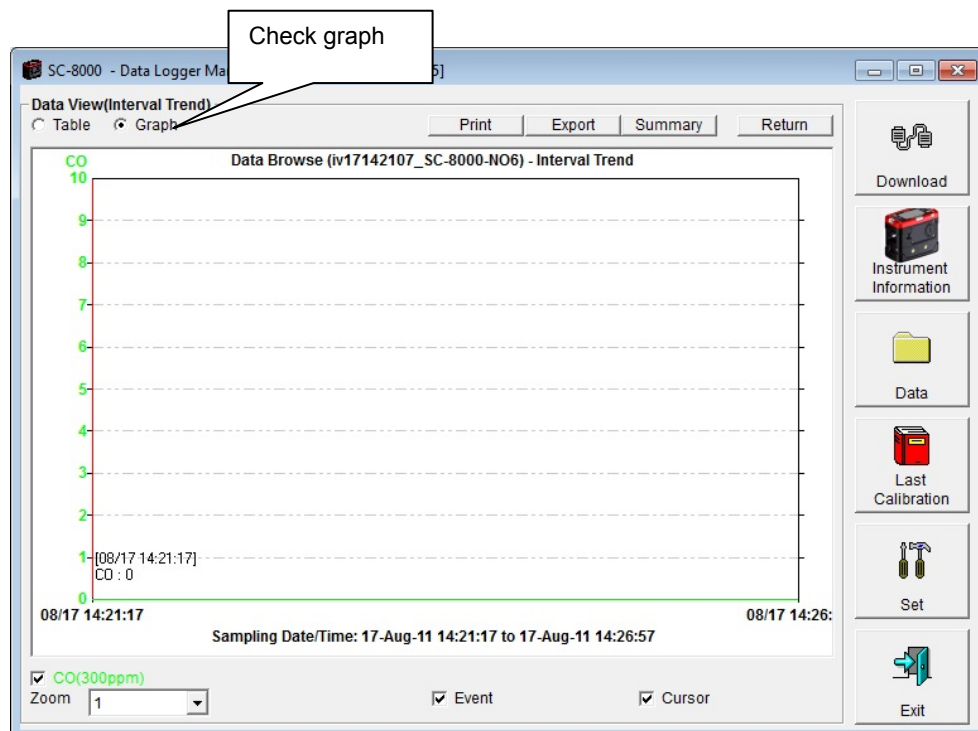

Use checkboxes and a combo box at the bottom of the screen to perform various operations on the view.

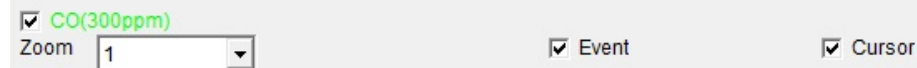

Checkboxes at the bottom of the screen (gas name):

Zoom combo box:

Event checkbox:

Cursor checkbox:

Select these boxes to toggle on/off each gas data.

Use this box to select the magnification ratio of the horizontal axis, according to the number of samples.

Select this box to display event information markers, such as alarms.

Select this box to display a cursor on the graph.

**CAUTION:**

The maximum value of the graph's vertical axis is automatically adjusted based on the following definitional equations.

In the case that "x" is the maximum value of data without an event, when the full scale is above 10,  $Y_{max} = \{ \text{int}(x / 10) + 1 \} * 10$ ; when the full scale is below 10,  $Y_{max} = \{ \text{int}(x) + 1 \}$ , where "int" means to round off the decimal part.

**CAUTION:**

A graph is not displayed unless there are five or more normal concentration data.


Data that contains only events cannot be drawn as a graph, because no concentration data is included.

Among the event data, when the mouse cursor is pointed to WARNING, ALARM, or OVER, the cursor changes to the following. When in this state, clicking the graph triggers a search for the corresponding alarm trend data. If it exists, it can be displayed in a separate screen.



In case of WARNING, ALARM, OVER

The separate screen displayed in case of WARNING, ALARM, OVER.  
Click the Return button to turn off the screen.

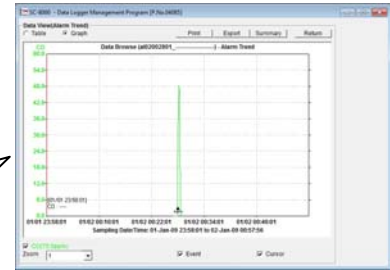


## (2) Output to a printer

## • Print


The content currently displayed on the Data View screen can be output to a printer.

1. Click the Print button on the screen.

Click Print

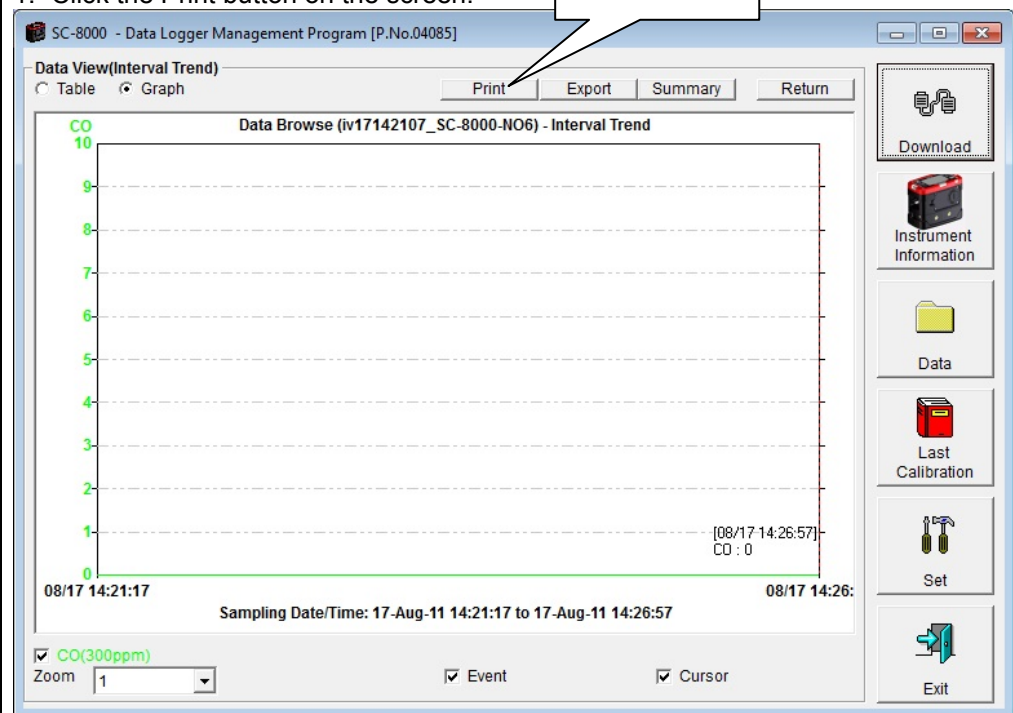


The Printer List screen is displayed. Select the printer to use and click the OK button.

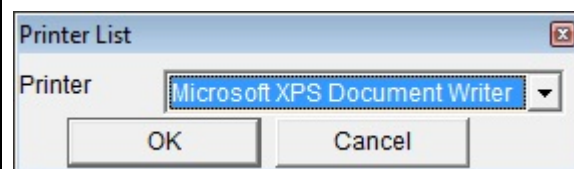

Click the OK button to start the printout.

Click the Cancel button to cancel the printout and return to the previous screen.

## Printout example (graph printout)

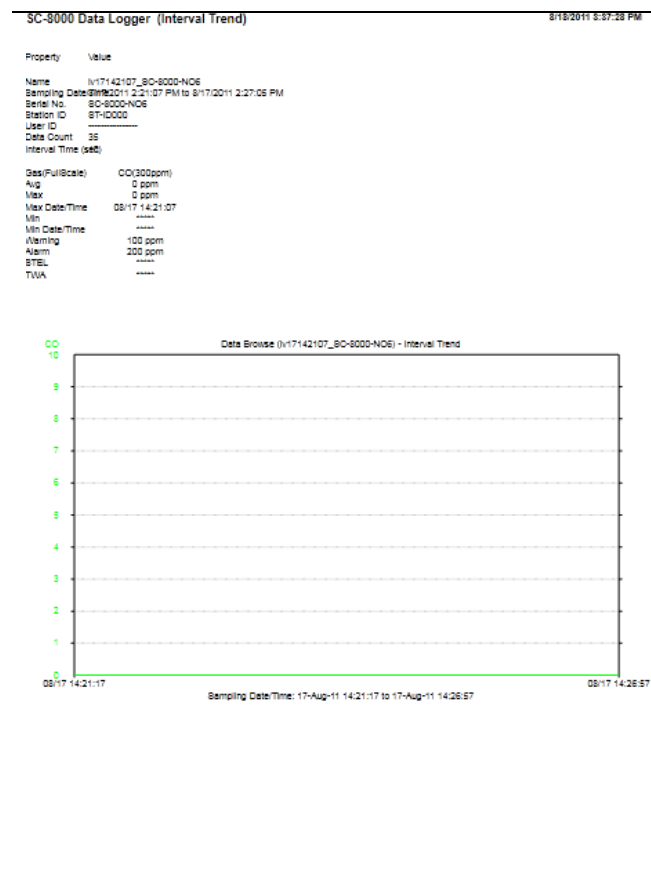

## Printout example (table printout)

SC-8000 Data Logger (Interval Trend) 8/18/2011 5:38:44 PM

Property Value

Name I:\17142107\_SC-8000-NO6  
 Sampling Date 8/17/2011 2:21:07 PM to 8/17/2011 2:27:05 PM  
 Serial No. SC-8000-NO6  
 Station ID ST-ID000  
 User ID  
 Data Count 35  
 Interval Time (sec)

Gas(FullScale) CO(300ppm)  
 Avg 0 ppm  
 Max 0 ppm  
 Max Date/Time 08/17 14:21:07  
 Min  
 Min Date/Time  
 Warning 100 ppm  
 Alarm 200 ppm  
 STEL  
 TWA

No	Date/Time	CO(300ppm)
1	8/17/2011 2:21:17 PM	0 ppm
2	8/17/2011 2:21:27 PM	0 ppm
3	8/17/2011 2:21:37 PM	0 ppm
4	8/17/2011 2:21:47 PM	0 ppm
5	8/17/2011 2:21:57 PM	0 ppm
6	8/17/2011 2:22:07 PM	0 ppm
7	8/17/2011 2:22:17 PM	0 ppm
8	8/17/2011 2:22:27 PM	0 ppm
9	8/17/2011 2:22:37 PM	0 ppm
10	8/17/2011 2:22:47 PM	0 ppm
11	8/17/2011 2:22:57 PM	0 ppm
12	8/17/2011 2:23:07 PM	0 ppm
13	8/17/2011 2:23:17 PM	0 ppm
14	8/17/2011 2:23:27 PM	0 ppm
15	8/17/2011 2:23:37 PM	0 ppm
16	8/17/2011 2:23:47 PM	0 ppm
17	8/17/2011 2:23:57 PM	0 ppm
18	8/17/2011 2:24:07 PM	0 ppm
19	8/17/2011 2:24:17 PM	0 ppm
20	8/17/2011 2:24:27 PM	0 ppm
21	8/17/2011 2:24:37 PM	0 ppm
22	8/17/2011 2:24:47 PM	0 ppm
23	8/17/2011 2:24:57 PM	0 ppm
24	8/17/2011 2:25:07 PM	0 ppm
25	8/17/2011 2:25:17 PM	0 ppm
26	8/17/2011 2:25:27 PM	0 ppm
27	8/17/2011 2:25:37 PM	0 ppm
28	8/17/2011 2:25:47 PM	0 ppm
29	8/17/2011 2:25:57 PM	0 ppm
30	8/17/2011 2:26:07 PM	0 ppm
31	8/17/2011 2:26:17 PM	0 ppm
32	8/17/2011 2:26:27 PM	0 ppm
33	8/17/2011 2:26:37 PM	0 ppm
34	8/17/2011 2:26:47 PM	0 ppm
35	8/17/2011 2:26:57 PM	0 ppm

## Printout example (calibration history)

SC-8000 Data Logger (Calibration History) 8/18/2011 5:38:26 PM

Property Value

Serial No. SC-8000-NO6  
 Station ID ST-ID000  
 User ID  
 Last Download 8/18/2011 2:14:08 PM

No	Date/Time	Before	After	CO(300ppm)
1	8/17/2011 11:28:28 AM	Before	After	0 ppm
2	8/17/2011 11:28:57 AM	Before	After	0 ppm

## Printout example (alarm events)

SC-8000 Data Logger (Alarm Event) 8/18/2011 4:33:13 PM

Property Value

Serial No. SERIAL2  
 Station ID ST-ID000  
 User ID  
 Last Download 8/18/2011 3:53:14 PM

No	Date/Time	Gas	Event
1	4/4/2011 1:12:22 PM	CO(150ppm)	WARNING
2	3/30/2011 4:25:27 PM	CO(150ppm)	WARNING
3	3/30/2011 4:14:12 PM	CO(150ppm)	WARNING
4	3/23/2011 3:42:40 PM	CO(150ppm)	WARNING
5	3/17/2011 2:04:12 PM	CO(150ppm)	WARNING
6	3/4/2011 3:25:35 PM	CO(150ppm)	WARNING
7	3/3/2011 5:10:48 PM	CO(150ppm)	WARNING
8	2/23/2011 4:11:55 PM	CO(150ppm)	WARNING
9	2/23/2011 8:51:35 AM	CO(150ppm)	WARNING
10	2/22/2011 4:10:12 PM	CO(150ppm)	WARNING
11	2/17/2011 3:27:27 PM	CO(150ppm)	WARNING
12	2/15/2011 5:00:30 PM	CO(150ppm)	WARNING
13	2/10/2011 4:05:44 PM	CO(150ppm)	ALARM
14	2/10/2011 4:05:30 PM	CO(150ppm)	WARNING
15	2/8/2011 1:45:17 PM	CO(150ppm)	ALARM
16	2/8/2011 1:44:54 PM	CO(150ppm)	WARNING
17	2/7/2011 3:54:39 PM	CO(150ppm)	ALARM
18	2/7/2011 3:54:18 PM	CO(150ppm)	WARNING
19	2/2/2011 4:47:51 PM	CO(150ppm)	ALARM
20	2/2/2011 4:47:14 PM	CO(150ppm)	WARNING
21	2/2/2011 1:05:53 PM	CO(150ppm)	ALARM
22	2/2/2011 1:05:36 PM	CO(150ppm)	WARNING
23	12/28/2010 11:35:05 AM	CO(150ppm)	WARNING
24	12/16/2010 4:33:13 PM	CO(150ppm)	WARNING

## Printout example (bump test)

SC-8000 Data Logger (Bump Test) 8/18/2011 5:40:55 PM

Property Value

Serial No. SC-8000-NO6  
 Station ID ST-ID000  
 User ID  
 Last Download 8/18/2011 2:14:08 PM

No	Date/Time	Test Result	CO(300ppm)
1	8/17/2011 2:16:10 PM	Test Result Concentration Judge	14 ppm 20 ppm PASS
2	8/17/2011 2:14:42 PM	Test Result Concentration Judge	14 ppm 20 ppm PASS
3	8/17/2011 2:12:51 PM	Test Result Concentration Judge	14 ppm 40 ppm FAIL
4	8/17/2011 2:12:09 PM	Test Result Concentration Judge	14 ppm 40 ppm FAIL
5	8/17/2011 11:27:57 AM	Test Result Concentration Judge	0 ppm 200 ppm FAIL
6	8/17/2011 11:26:27 AM	Test Result Concentration Judge	0 ppm 200 ppm FAIL



Printout example (trouble events)				Printout example (snapshot)			
SC-8000 Data Logger (Trouble Event)		8/18/2011 4:12:34 PM		SC-8000 Data Logger (Snap Shot)		8/18/2011 4:13:11 PM	
Property Value				Property Value			
Serial No.	SERIAL2			Name	9909105527_SERIAL2		
Station ID	ST-ID000			Sampling Date	8/18/2011 10:55:27 AM		
User ID	-----			Serial No.	SERIAL2		
Last Download	8/18/2011 3:53:15 PM			Station ID	ST-ID000		
User ID	-----			User ID	-----		
No	Date/Time	Gas/Body	Event	No	Date/Time	CO(150ppm)	
1	6/7/2011 10:49:55 AM	Body	Fall(L-Hon)	1	6/9/2011 10:55:27 AM	0 ppm	
2	6/7/2011 10:48:53 AM	Body	Fall(L-Hon)				
3	6/7/2011 10:47:07 AM	Body	Fall(L-Hon)				
4	6/7/2011 10:42:29 AM	Body	Fall(L-Hon)				
5	6/6/2011 3:07:59 PM	Body	Fall(L-Hon)				
6	5/30/2011 1:16:48 PM	Body	Fall(L-Hon)				
7	5/28/2011 2:40:04 PM	Body	Fall(L-Hon)				
8	5/23/2011 9:56:13 AM	Body	Fall(L-Hon)				
9	5/17/2011 11:21:47 AM	Body	Fall(FLOW)				
10	5/14/2011 8:37:48 AM	Body	Fall(L-Hon)				
11	5/11/2011 11:33:07 AM	Body	Fall(FLOW)				
12	4/6/2011 10:42:17 PM	Body	Fall(L-Hon)				
13	3/16/2011 10:46:14 AM	Body	Fall(BIAS)				
14	3/16/2011 10:46:12 AM	Body	Fall(BIAS)				
15	2/16/2011 4:05:47 PM	Body	Fall(FLOW)				
16	2/10/2011 4:54:56 PM	Body	Fall(L-Hon)				
17	2/10/2011 4:04:06 PM	Body	Fall(FLOW)				
18	2/7/2011 3:52:37 PM	Body	Fall(FLOW)				
19	1/23/2011 6:51:44 AM	Body	Fall(L-Hon)				
20	1/17/2011 4:57:31 PM	Body	Fall(FLOW)				
21	1/6/2011 5:09:06 PM	Body	Fall(L-Hon)				
22	12/16/2010 9:02:15 AM	Body	Fall(FLOW)				
23	12/15/2010 4:59:56 PM	Body	Fall(L-Hon)				



## CAUTION


### Notes on printer settings

- (1) Detailed printer settings depend on the printer used. Please see the operation manual of the printer.
- (2) This program does not support Print Area setting. Therefore, usage such as printing only part of the selected data is not possible.
- (3) Copies can be changed only when the setting is available from the printer.  
When the setting is changed in this way, the change affects other applications subsequently used. (For example, when Copies is changed to 2, a printout operation from another application might also result in two copies.)  
If Print Setting is changed in this program, when a printout is required from another application, check Print Setting of that application before printing.

## (3) Save to a file

## • Save

1. Click the Save button on the screen.

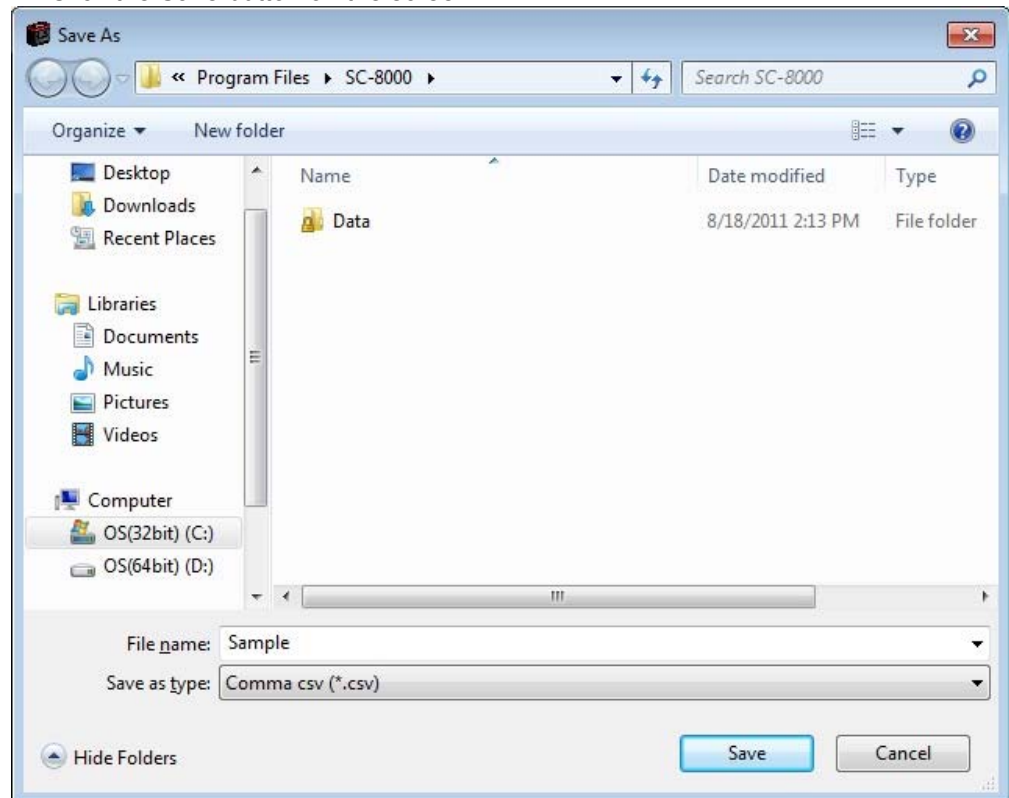

Specify the location and the file name, and click the Save button to store the data. Click the Cancel button to cancel the save operation.

**CAUTION:**


**When a table is displayed, the content of the table is saved in the Excel CSV format.**

**When a graph is displayed, the bitmap of the graph is saved.**

(4) To view data summary simultaneously

- **Summary view**

1. Click the Summary button on the screen.

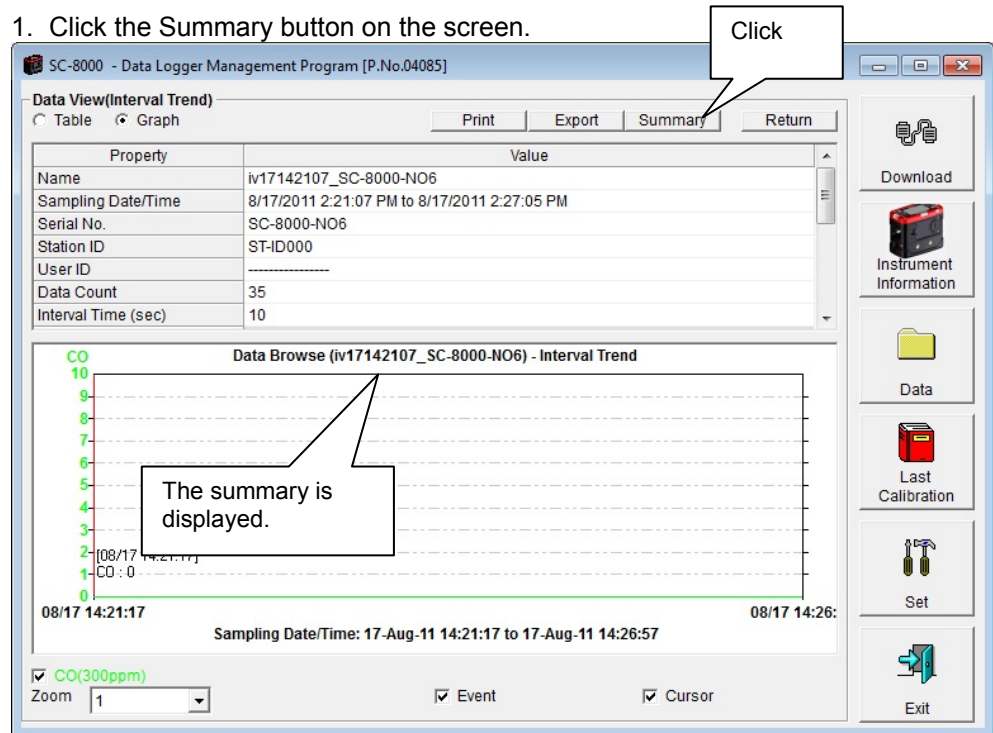

When the Summary button is clicked, the summary view is cleared.

(5) Table details

• Event color

The cells that display gas concentration are painted according to the event occurred at that time.

CO(500ppm)
----
ALARM
WARNING
NORMAL
WARNING
ALARM
32
203
206
206
206
OVER
401
500
500
500
500
STEL
500
500


The cells are identified by background color.

Fail:	Gray	Fault
Warning:	Orange	First alarm
Alarm:	Red	Second alarm
STEL:	Pink	STEL alarm
TWA:	Light purple	TWA alarm
Normal:	Deep green	Recover from above states
Over:	Light red	Over full scale

## (6) Graph details

## • Cursor

1. Click the Cursor checkbox to display a cursor on the graph.

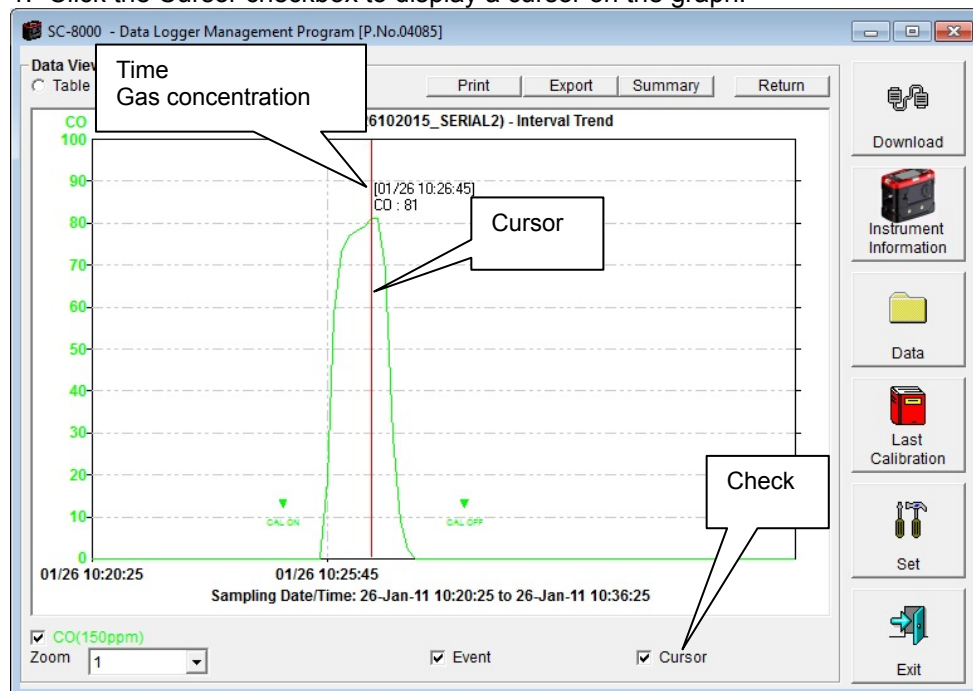


Use the left and right keys to move the cursor left and right, and the up and down keys to move the time and concentration views up and down.

The Shift key can be used together to speed up the cursor.

**CAUTION:**


Cursor operation is not available when a window irrelevant to the program is opened and the focus is moved outside the graph area.

The cursor itself is displayed as a dashed line. To restore focus, click inside the graph area.

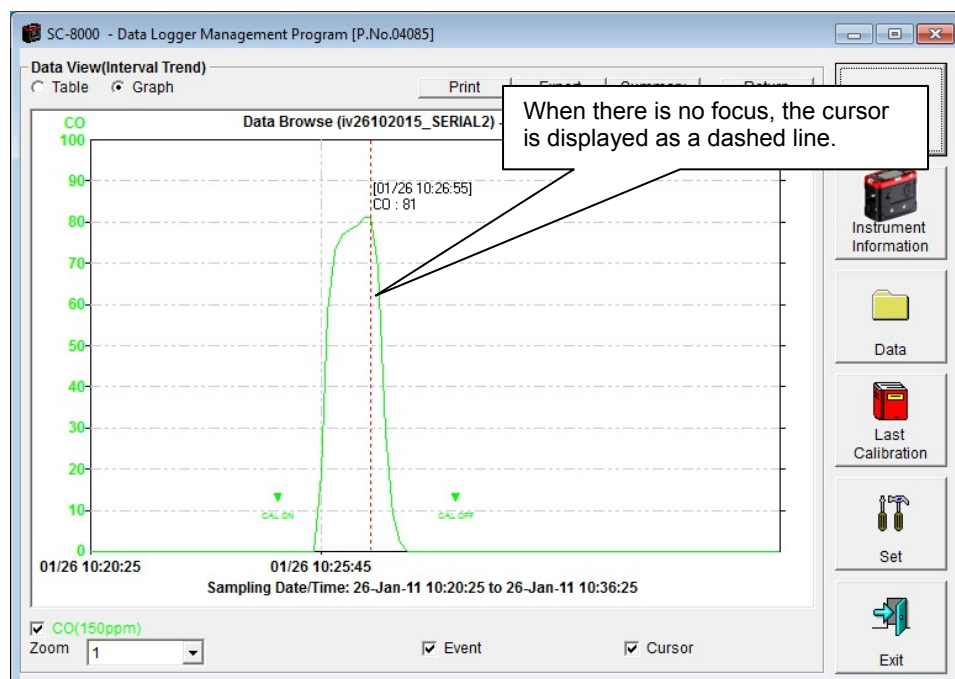

## 3-5. Last Calibration screen

The expiration dates of the data downloaded in the past can be checked.

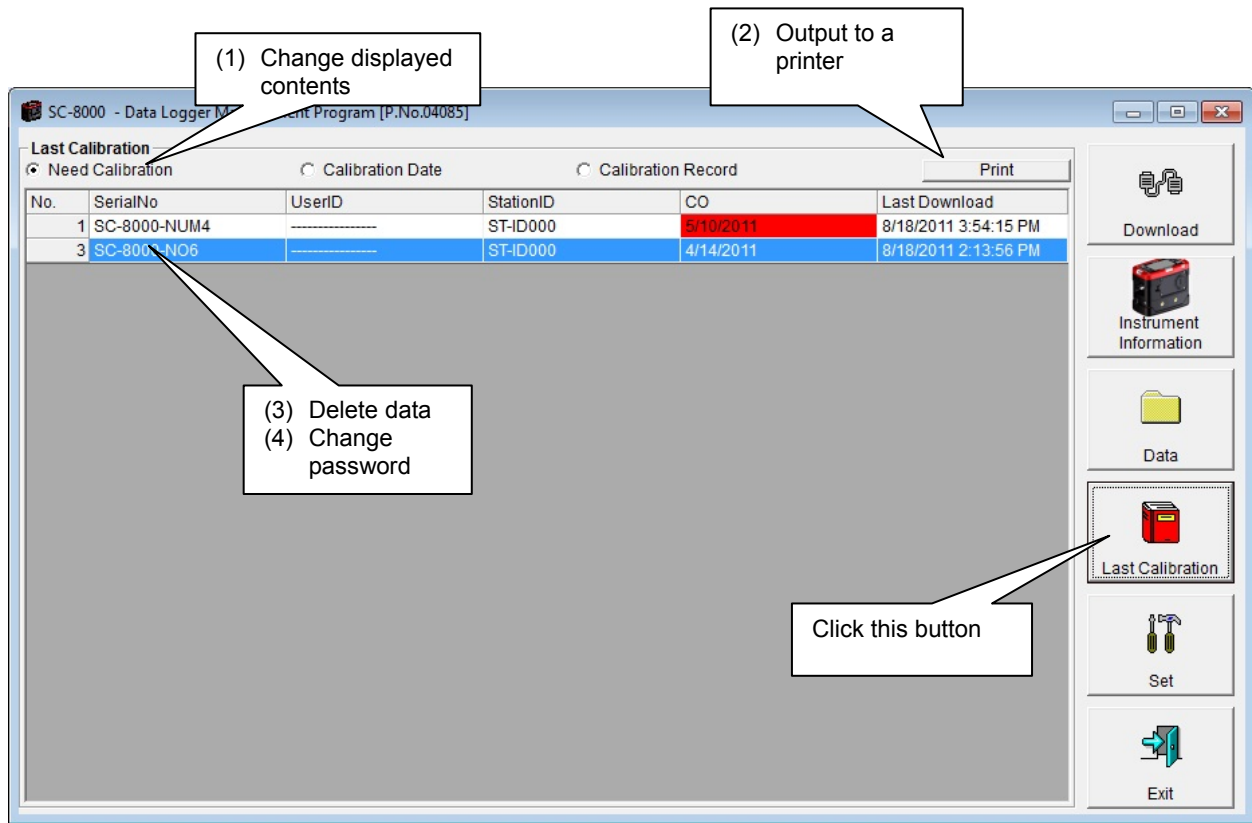

**CAUTION:** This table is read-only. Modification of the table is not supported.

## (1) Change displayed contents

- Expired data

1. Click the Need Calibration radio button.

Last Calibration					
<input checked="" type="radio"/> Need Calibration <input type="radio"/> Calibration Date <input type="radio"/> Calibration Record <input type="button" value="Print"/>					
No.	SerialNo	UserID	StationID	CO	Last Download
1	SC-8000-NUM4	-----	ST-ID000	5/10/2011	8/18/2011 3:54:15 PM
3	SC-8000-NO6	-----	ST-ID000	4/14/2011	8/18/2011 2:13:56 PM

Among the SC-8000 main units connected in the past (in other words, the main units from which Instrument Information data is downloaded), this table extracts and displays the records which have an expired calibration date.

1. Click the Calibration Date radio button.

Last Calibration					
<input type="radio"/> Need Calibration <input checked="" type="radio"/> Calibration Date <input type="radio"/> Calibration Record <input type="button" value="Print"/>					
No.	SerialNo	UserID	StationID	CO	Last Download
1	SC-8000-NUM4	-----	ST-ID000	5/10/2011	8/18/2011 3:54:15 PM
2	SERIAL2	-----	ST-ID001	6/15/2011 10:37:55 AM	8/18/2011 3:52:16 PM
3	SC-8000-NO6	-----	ST-ID000	4/14/2011	8/18/2011 2:13:56 PM

- List view

Data for the SC-8000 main units connected in the past is listed. (Of the data with the same serial number, user ID, and Station ID, the newest data is displayed.)

1. Click the Calibration Record radio button.

Last Calibration								
<input type="radio"/> Need Calibration <input type="radio"/> Calibration Date <input checked="" type="radio"/> Calibration Record <input type="button" value="Print"/>								
No.	SerialNo	UserID	StationID	Gas	Before	After	A.Cal.	Cal.Due(C
1	SC-8000-NUM4	-----	ST-ID000	CO	---	---	50.0	Now
2	SERIAL2	-----	ST-ID001	CO	58	51	50	Remainin
3	SC-8000-NO6	-----	ST-ID000	CO	---	---	20	Now

- Display details

Data for SC-8000 main units connected in the past is listed in the same format as the Instrument Information screen.


For details on the items, see "3-2. Instrument Information screen", "(3) Calibration history information".

## (2) Output to a printer

• **Print**

The last calibration date of each unit can be printed out using Need Calibration or Calibration Date.

The Printer List screen is displayed. Select the printer to use and click the OK button.

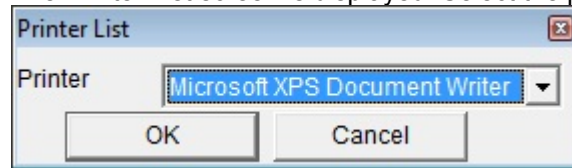


SC-8000 Data Logger (Last Calibration)						8/18/2011 4:20:20 PM
No.	SerialNo	UserID	StationID	CO	Last Download	
1	SC-8000-NUM4	_____	8T-ID000	8/10/2011	8/18/2011 3:54:15 PM	
3	SC-8000-N06	_____	8T-ID000	4/14/2011	8/18/2011 2:13:56 PM	



## (3) Delete data

## • Delete

1. Move the mouse to the data that needs to be deleted, and right-click the data.

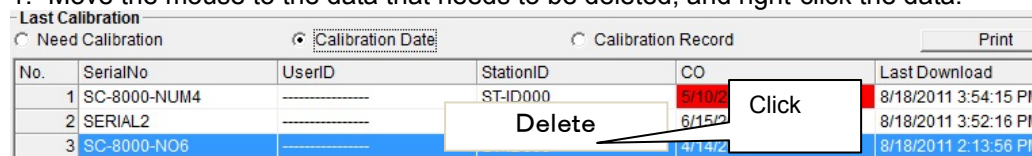


**CAUTION:** Deletion of data is available only in Need Calibration and Calibration Date views.

It is not available in the Calibration Record view.


1. When the Delete button is clicked, the Password dialog is prompted. Enter the password and press the Continue button.

## • Input password

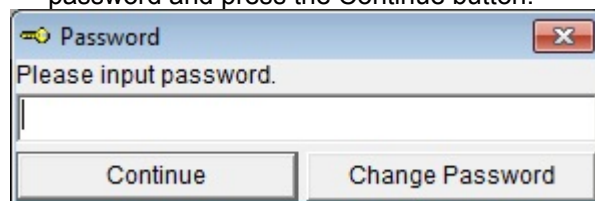

**CAUTION:** When Continue is pressed without entering the password, the delete operation is canceled.

2. When Continue is pressed with an appropriate password, the following message is displayed.

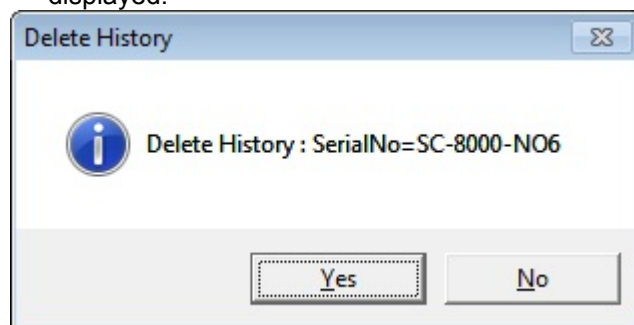


Click the Yes button to delete the data.

Click the No button to cancel deletion of data.


## (4) Change password

## • Input password

1. Display the Password dialog in the same way as deleting the data, and click Change Password.

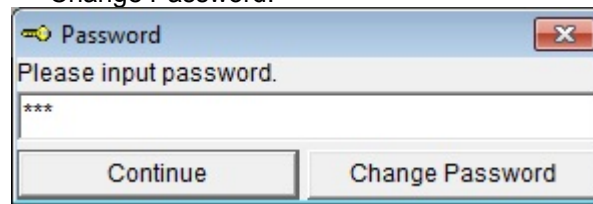

2. Enter an appropriate password and click the Current password button. The following message is displayed.

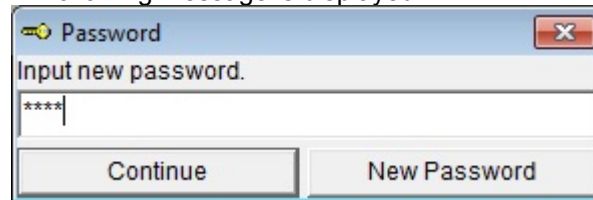

3. Enter the new password and click the New Password button.
4. The Password dialog is prompted again. Enter the same new password and click New Password.




Click OK to update the password.

**CAUTION:** The password immediately after installation is "Riken".  
(Case-sensitive)

**CAUTION:** Clicking the Continue button during a password change process can execute the data delete command. When the Continue button is clicked with an old password, data will be deleted even in the process of password change.

## 3-6. Set screen

In this screen, display settings of the screen and the detailed settings of the unit can be specified.

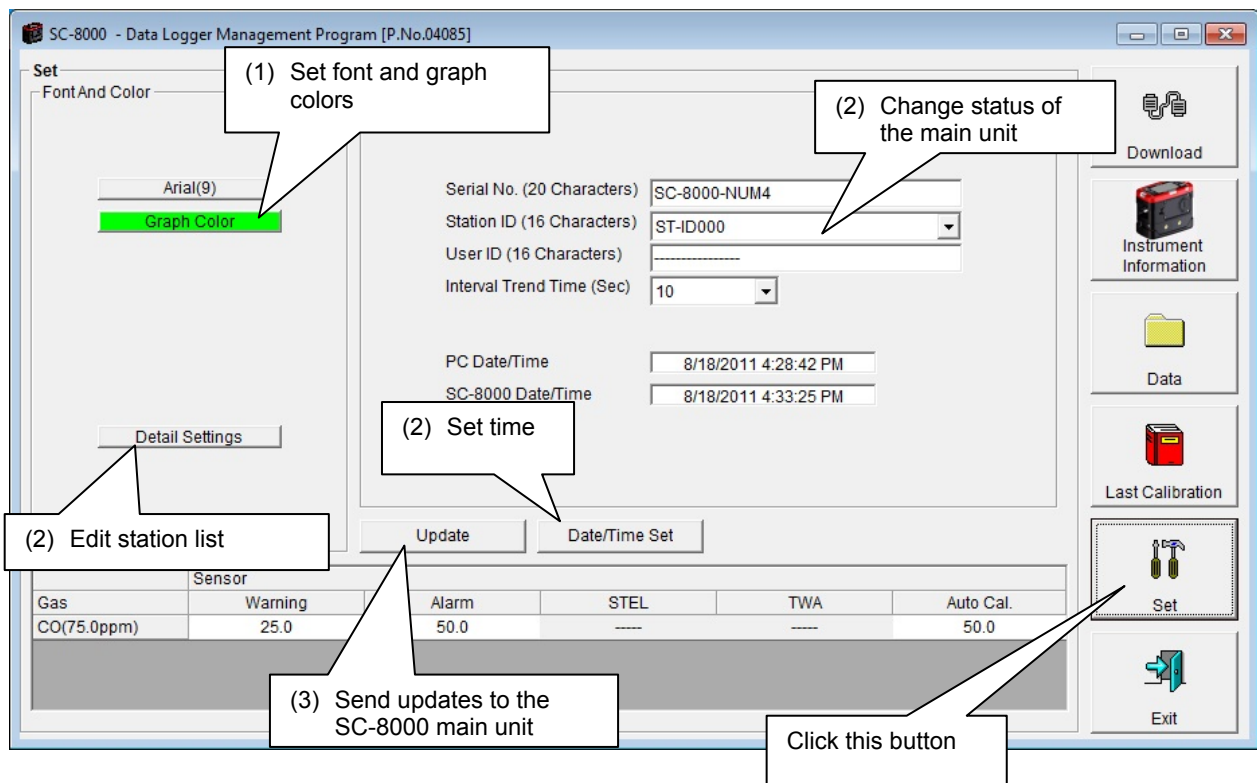


**CAUTION:** The data specified and/or changed must be sent to the SC-8000 main unit using the Update button.

**CAUTION:** The font setting is applied on the next startup.

## (1) Change font and graph colors

## • Change the font

1. Click the area that displays the font.

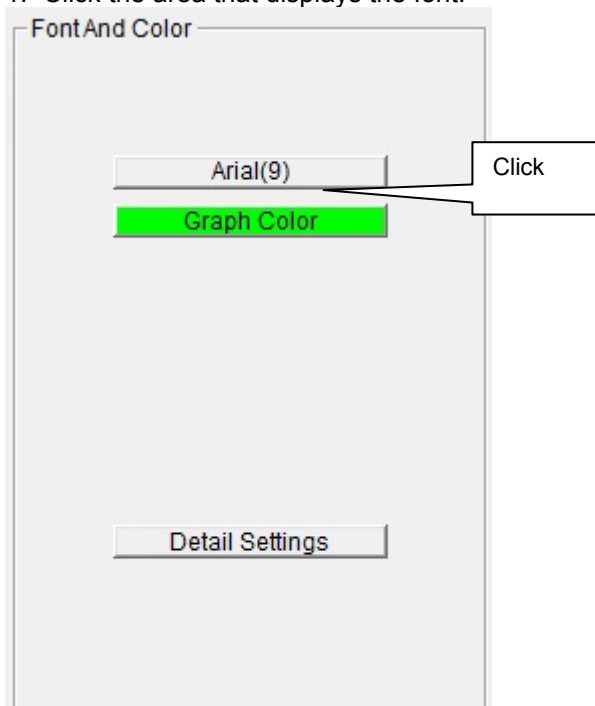

The font setting dialog is displayed. Specify an appropriate font.


**CAUTION:**

**When an extremely large font is used, the screen might be hard to view.  
This change will be effective on the next startup.**

## • Change the graph color

The display colors mapped for the gases in the graph can be changed.

1. Click the area that displays each gas.

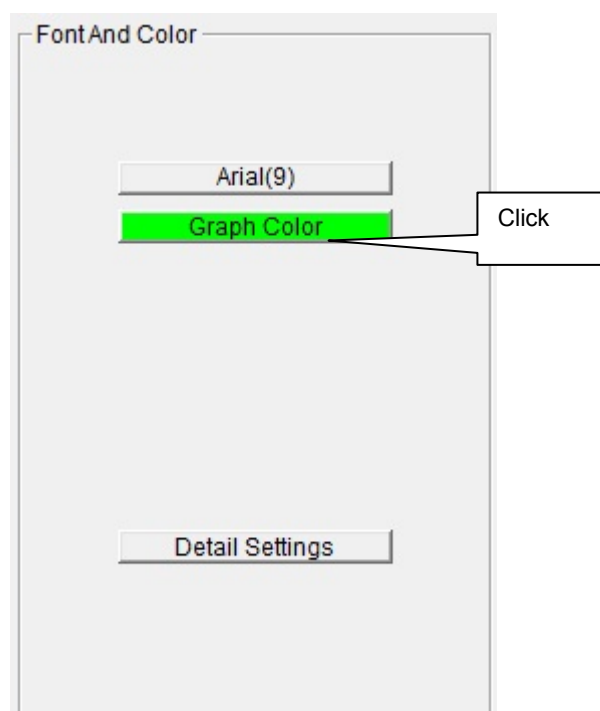


The color selection dialog is displayed. Specify an appropriate color.

## (2) Change status of the main unit

## 1. Edit the station ID list.

## • Edit station list

Click Detail Settings.

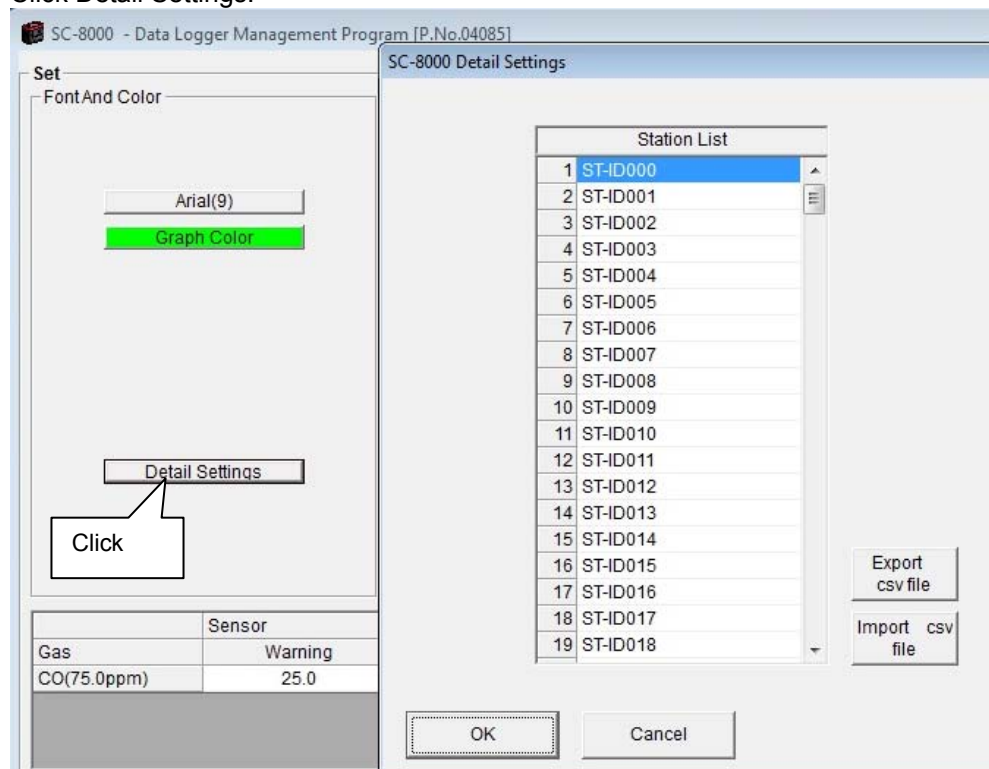

The edit dialog is displayed. The station list contains stations up to Number 256. Up to 16 characters of alphabets, numbers, spaces, hyphens, and asterisks can be entered.

**\* In the SC-8000 main unit, only the first eight characters are displayed. We recommend to use up to eight characters of only upper-case alphabets and/or numbers.**


Export csv file:

The data is exported to a file. A text file is created using the "Number,data" format.

Import csv file:

Data is loaded from a text file that follows the "Number,data" format. If the data contains unsupported letters, or the data is too long, the background color of the corresponding cells is changed to red.

**\* If any cells have red background, OK cannot be selected.**

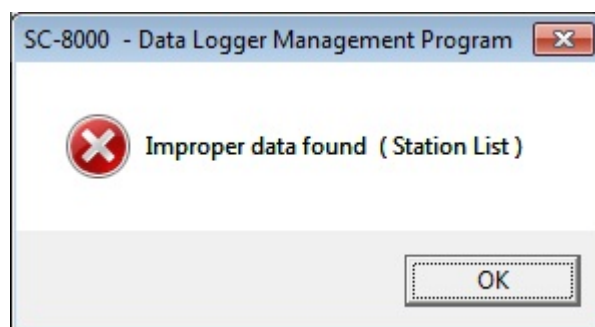

- **Change**

2. In the status area, change the desired data.

The screenshot shows the 'SC-8000 Status' window. It contains the following fields and controls:

- Serial No. (20 Characters):** A text box containing 'SC-8000-NUM4'.
- Station ID (16 Characters):** A dropdown menu showing 'ST-ID000'.
- User ID (16 Characters):** A text box with a dashed line indicating a placeholder.
- Interval Trend Time (Sec):** A dropdown menu showing '180'.
- PC Date/Time:** A text box showing '8/18/2011 4:39:39 PM'.
- SC-8000 Date/Time:** A text box showing '8/18/2011 4:44:22 PM'.
- Buttons:** 'Update' and 'Date/Time Set' buttons are located at the bottom.

The contents of Serial No. (20 Characters) and User ID (16 Characters) can be changed.

Interval Trend Time (Sec) and Station ID (16 Characters) can be selected and changed from the list.

The Date/Time Set button can be used to adjust the internal clock of the SC-8000 main unit (SC-8000 Date/Time) to the internal clock of the PC (PC Date/Time).


**CAUTION: The date/time areas cannot be entered directly.**

**CAUTION: The settings of the SC-8000 main unit are not modified except Date/Time Set by this change. Make sure to click Update to send the change request process to the main unit.**

(3) Send updates to the SC-8000 main unit

- **Send updates**

1. Modify the places to change and click the Update button.

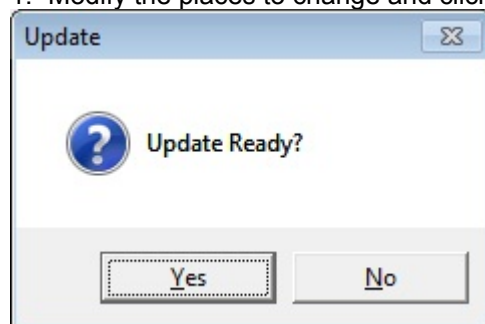

When the Yes button is clicked, the changes are sent to the SC-8000 main unit and stored there.

When the No button is clicked, update is canceled.

**CAUTION: The changes cannot be undone. Before clicking Update, it is possible to revert to the data stored in the main unit by clicking the Instrument Information button on the Download screen to download the instrument information data.**

---

## 4

---

# Data Maintenance

Depending on usage (such as loading data many times in a single day), the number of data might increase drastically. In such a case, it might be difficult just to find the desired data. In addition, there is a possibility of losing valuable data caused by an unexpected trouble of the PC.

To prepare for such unexpected events, a periodical backup of the data is recommended.

## 4-1. Details of data storage structure

Data is stored in the installation folder of the SC-8000 program.

- 1) File name: SC8000.mdb  
File type: Microsoft Jet 3.6 database file
- 2) File name: Data  
File type: Folder. Trend data files are organized under year/month folders

## 4-2. Backup

Although it depends on usage, we recommend the data to be copied to another hard disk device or an auxiliary storage device (such as an MO drive or CD-R drive).

To restore data, copy it to the installation folder of the SC-8000 executable. The program searches for data on startup and the data will be available to view.

---

5

---

# Operating Precautions

When using the program, take sufficient considerations on the following points:

- (1) When downloading data, check that SC-8000 is placed at an appropriate position. If the position is not appropriate, download cannot be performed properly.
- (2) When downloading, avoid similar operations using another application. (For example, performing IR communication during data download.)
- (3) Do not kill the program. (For example, by using Ctrl + Alt + Del.) This program saves setting parameters on the shutdown process to prepare for the next startup. Therefore, if the program is killed, the next startup might fail.
- (4) Do not modify a data file directly.



---

6

---

# Troubleshooting

Symptoms	Causes	Solutions
Communication is not possible.	The position of the main unit is inappropriate. An obstacle is in the way.	Change the position of the main unit.
	There is another device that uses IR.	Turn off the other devices, or prevent its interference.
Error occurs during communication.	There is a scattered light outside.	Eliminate the device that uses IR.
	The SC-8000 unit moved during communication.	Do not move the unit during communication.
Something is wrong in the communication data.	There is a scattered light outside.	Eliminate the device that uses IR.

If an error still persists despite the above actions, please contact RIKEN KEIKI.

## 7

# IrDA Specifications

## 7-1. About infrared communication

Communication with the main unit is performed via infrared communication (IrDA protocol).

Check that the computer to be used is capable of infrared communication.

Also, place the units so the infrared communication port of the main unit and the communication port of the PC directly face each other, and prevent interference of other lights.

**CAUTION:**

**This program can establish communication with the SC-8000 main unit only in an environment with IrDA enabled. Check that the PC has a built-in IrDA device, and that it is enabled.**

**If the computer does not have a built-in IrDA device (this applies to most desktop PC and some notebook PC), use a separately sold IrDA-USB converter.**


## 7-2. Display of communication ready status

At the start of communication, the operating system recognizes existence of an infrared device and displays an icon on the task bar.

By that icon, the communication status can be understood to some extent.


**CAUTION: The displayed content might differ depending on the operating system and IrDA driver settings.**

### 7-2-1. Task bar icon when the operating system recognized SC-8000

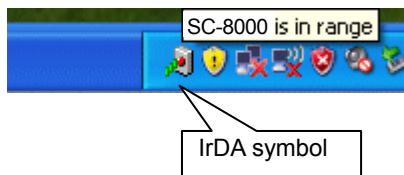

The IrDA symbol is displayed, and when the cursor is pointed over the symbol, the message "SC-8000 is in range" is displayed.

### 7-2-2. Task bar icon when communication between the data logger program and the SC-8000 main unit is in progress

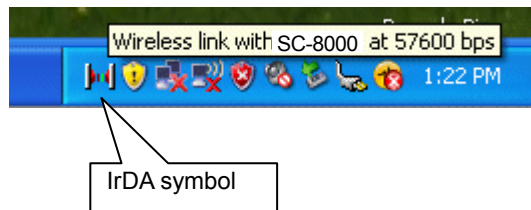

The IrDA symbol changes to an animation icon that shows communication, and when the cursor is pointed over the symbol, the message "Wireless link with SC-8000 at xxxx bps" is displayed.

\* "xxxx" shows communication rate, which is normally 57600 bps. Depending on the environment, the rate might drop to a value around 38400 bps.

#### **CAUTION:**

**Due to overhead in internal process of the SC-8000 main unit and/or the data logger program, there is little difference in overall communication time if the communication rate is 38400 bps or above. This is because a relatively long time is required to create data within the SC-8000 main unit and to analyze the downloaded data by the data logger program.**

## 8

# File Structure

This chapter explains the details about file contents at installation and during operation.

## 8-1. Current directory immediately after installation

File name	Details
SC8000.exe RklrDA11.ocx Filemove.avi	SC-8000 main unit Infrared communication component Animation file that shows that data download is in progress

## 8-2. Current directory during operation

File name	Details
SC8000.exe RklrDA11.ocx Filemove.avi	SC-8000 main unit Infrared communication component Animation file that shows that data download is in progress
SC8000.ini SC8000.dat SC8000.mdb Data Serial.log	SC-8000 initialization file File for data downloading Database file (Microsoft Jet 3.6 database) Save directory for trend data files Recording of data that flowed through communication port since startup of the program (for investigation and maintenance)

**CAUTION:** Files and directories below the double line are created after startup of the program.

---

9

---

# Software Specifications

Name of product (name of program)	SC-8000 Data Logger Management Program
Model	SW-SC-8000
Executable file name	SC8000.EXE
Supported OS	Microsoft Windows 2000 Windows XP Windows Vista Windows 7 Internet Explorer 5.01 or higher required
Program capacity	Main program: Approx. 3 MB/Library: Approx. 5.2 MB (Uses up to 40 MB of disk space on installation)
Communication of the main unit	Infrared (conforming to IrDA 1.1 protocol) Standard communication settings Baud rate: 57600 bps (maximum) Data bit: 8 bits Stop bit: 1 bit Parity: Even parity
Transfer time	Maximum 3 minutes (standard communication setting, with maximum amount of data)
Medium	One CD-ROM
Package contents	Operating Manual (this document) Product warranty and registration card License agreement